




Supersonic SC-777BT Battery Replacement

How to replace a Supersonic SC-777BT battery.

Written By: Payton Butler

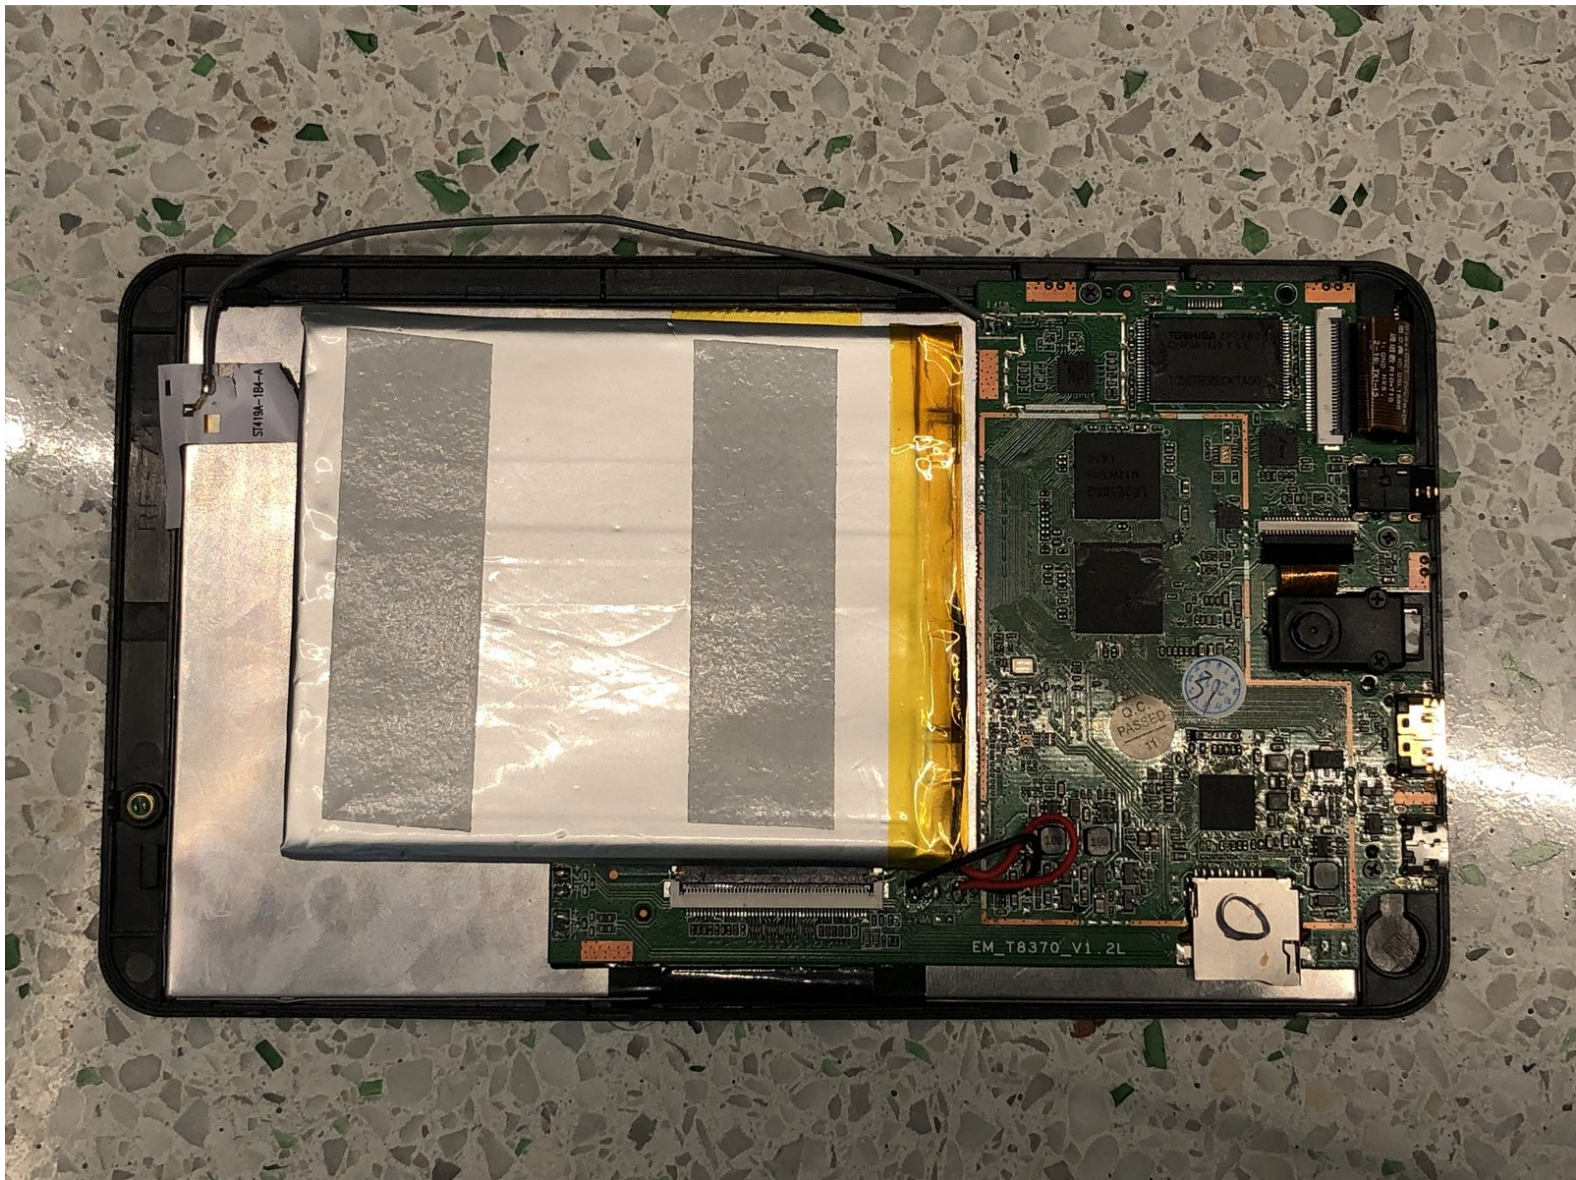

INTRODUCTION

If your tablet isn't maintaining a reasonable charge, you may need to replace your battery.



TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Soldering Iron](#) (1)
-

Step 1 — Battery



- Open the device using a plastic opening tool.

Step 2

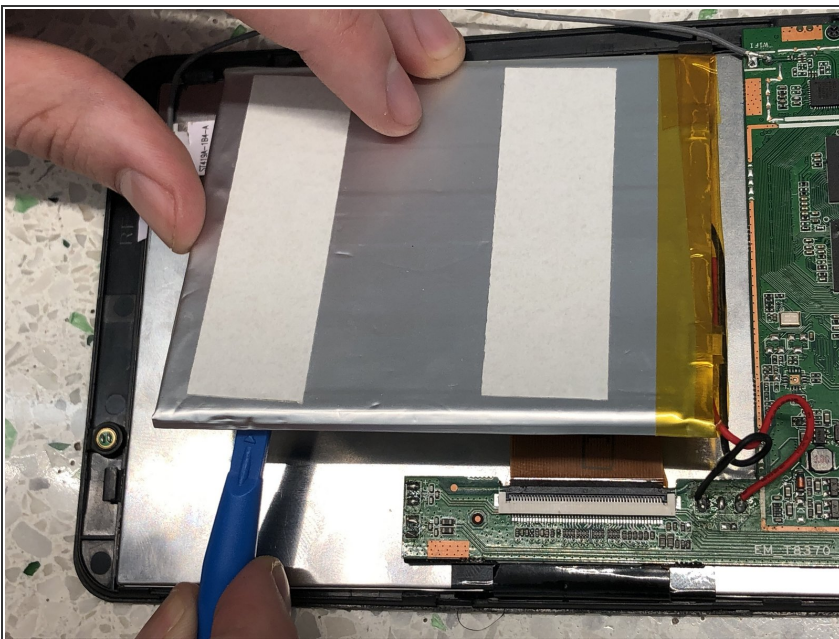

- Lift the battery from the backing using a plastic opening tool.

Step 3



- Disconnect the attached wires from the battery by desoldering the connections.

To reassemble your device, follow these instructions in reverse order.