



HP Deskjet F4480 Ink Cartridges Replacement

Guide to replace ink cartridges in the HP Deskjet F4480 printer.

Written By: Tom Higdon



INTRODUCTION

If the printed page appears with streaks, faded colors, or incorrect colors, replacing the ink cartridges is a possible solution. New ink cartridges improve the quality and appearance of the printed document.

Step 1 — Open front access panel




- Open the front access panel by placing your finger in the front slot and pulling gently.

Step 2 — Ink Cartridges



- Slide the ink carriage until the the cartridges line up with the marked slots in the middle.
- ⓘ If the printer is on, then the carriage should have automatically slid to the middle when the front was opened. If not, ensure printer is unplugged and slide manually.

Step 3

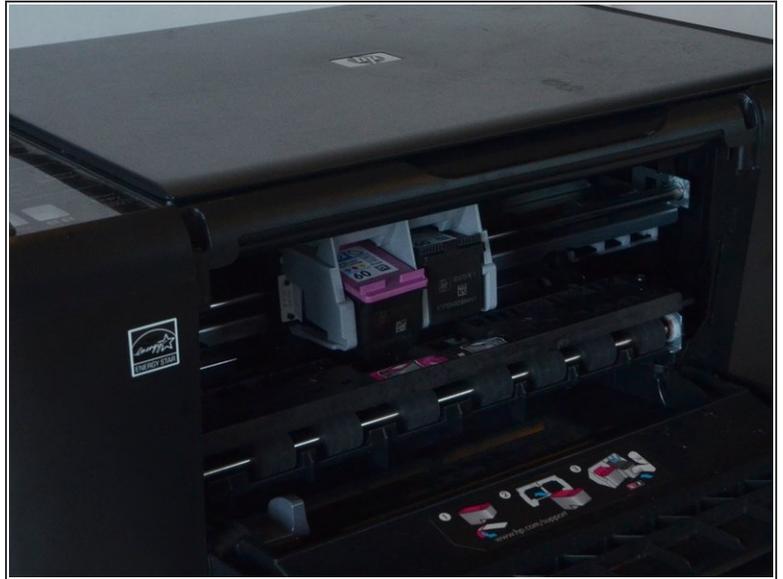

- Gently, but firmly depress the front of the ink cartridge you are removing until it is loose.
- ⓘ There may be a faint click when the cartridge comes loose.

Step 4



- Gently slide out cartridge.
- ⚠ Don't make contact with the ink head. The ink likes to get everywhere.

To reassemble your device, follow these instructions in reverse order.