




Dell Inspiron 13-7373 Speakers Replacement

This guide will assist in replacing the...

Written By: John Egan

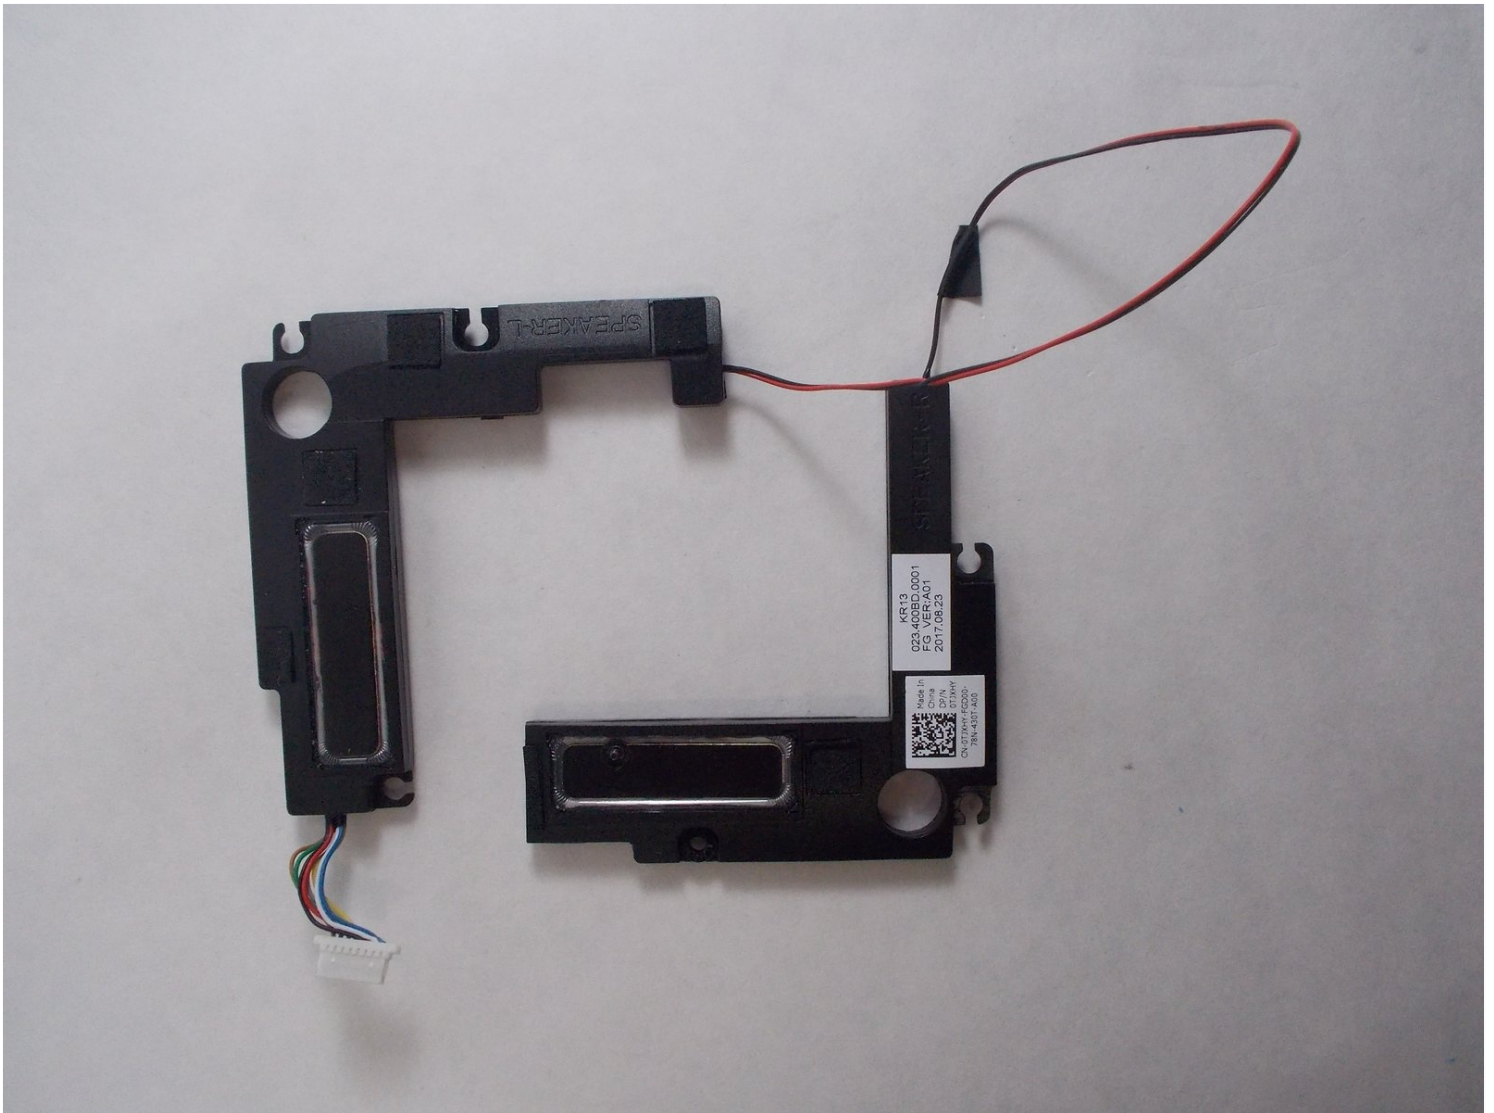

INTRODUCTION



This guide will assist in replacing the speakers on a Dell Inspiron 13-7373. This is not very difficult and requires very little removal of other parts of the laptop. You will need a screwdriver along with a tool to open the laptop.


TOOLS:

Phillips #00 Screwdriver (1)

iFixit Opening Tool (1)


Step 1 — Back Cover

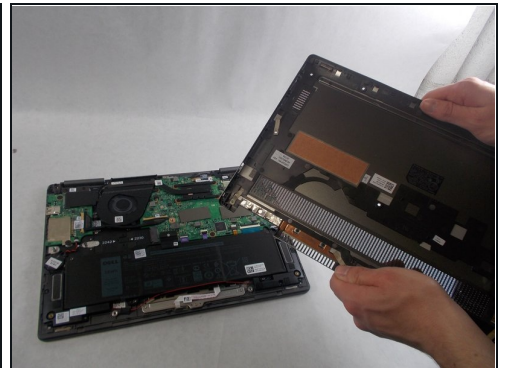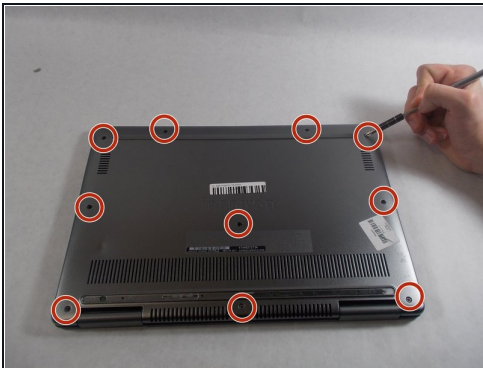

 Before you begin, be sure to turn off your laptop and unplug it from the outlet.

- Remove the ten 7.5mm Phillips #00 screws from the bottom of the laptop.
- Use an opening tool to remove the bottom half of the case from the laptop.

Step 2 — Speakers

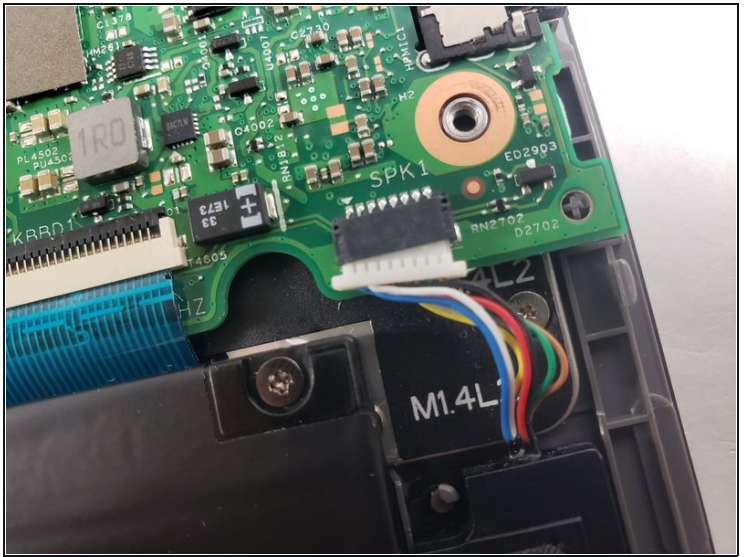


- Unplug the connector from the motherboard on the right side of the speaker.

Step 3



- Uncoil the wire connecting the left and right speaker from around the bottom of the battery.

Step 4

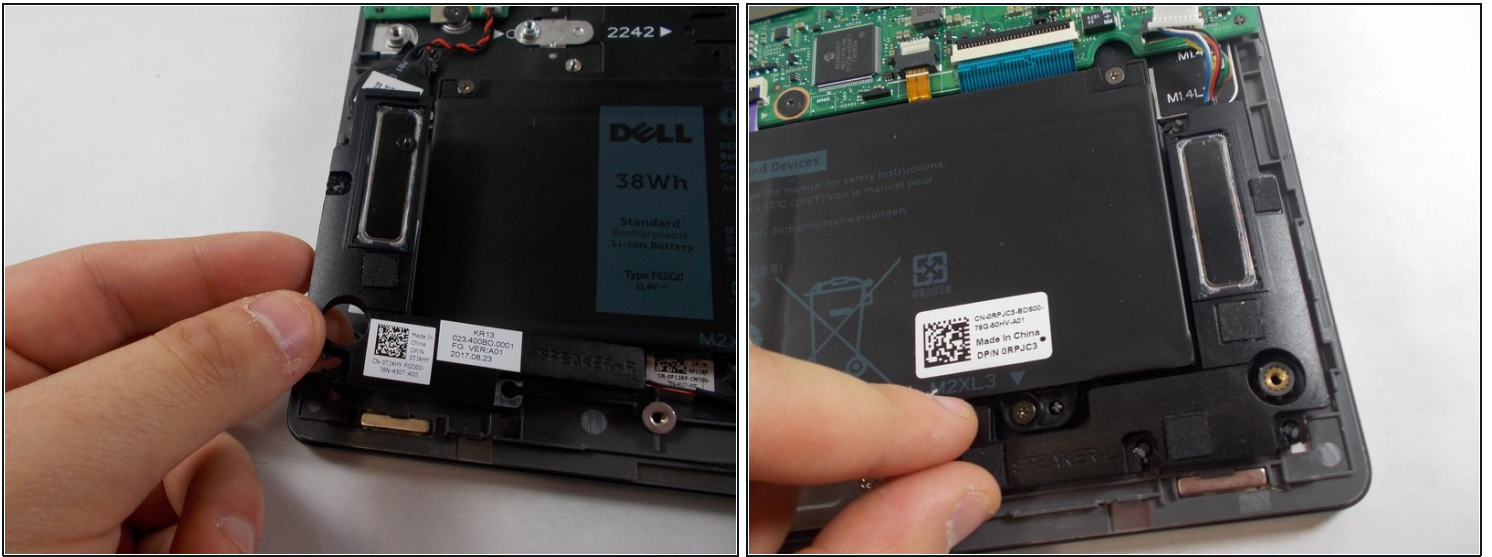

- Gently lift up on the left speaker and then the right speaker to remove it.

To reassemble your device, follow these instructions in reverse order.