



Sony Bloggie 3D Player Battery Replacement

Replace the Battery on your Sony Bloggie 3D

Written By: Timothy Tran



INTRODUCTION

Every battery runs out of power eventually after many uses. This guide will show you how to easily replace the battery on your Sony Bloggie 3D.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Front Cover





- Remove the two 2.5mm Phillips #00 screws using the Philips #00 screwdriver.

Step 2

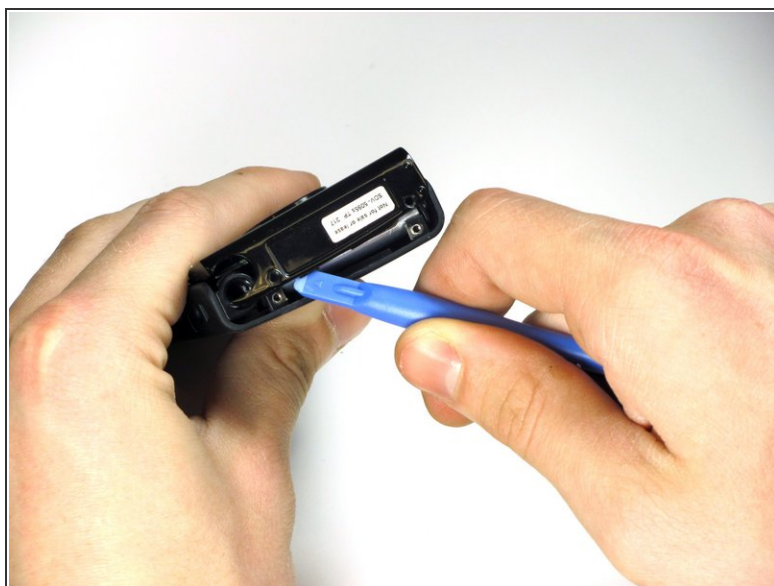



- Use a plastic opening tool to pry the cover open.
- After the the cover is partly open as shown, remove the cover with your hands.

Step 3 — Back Cover

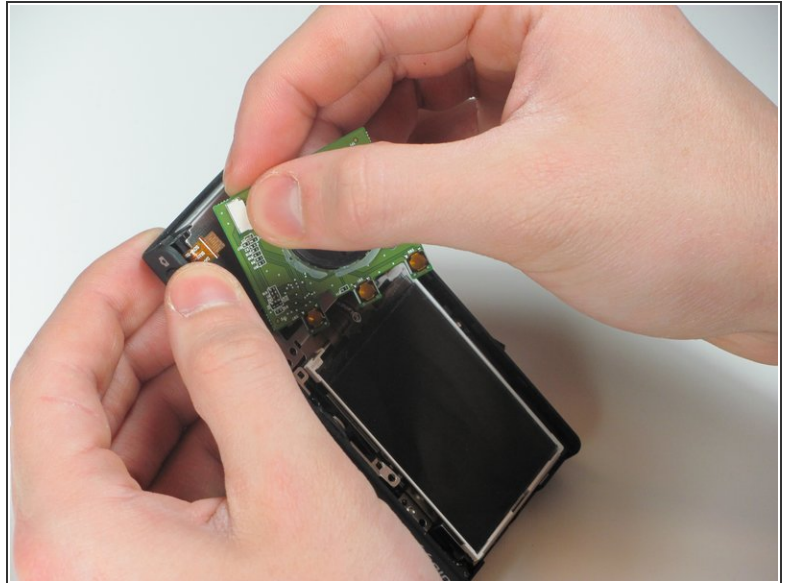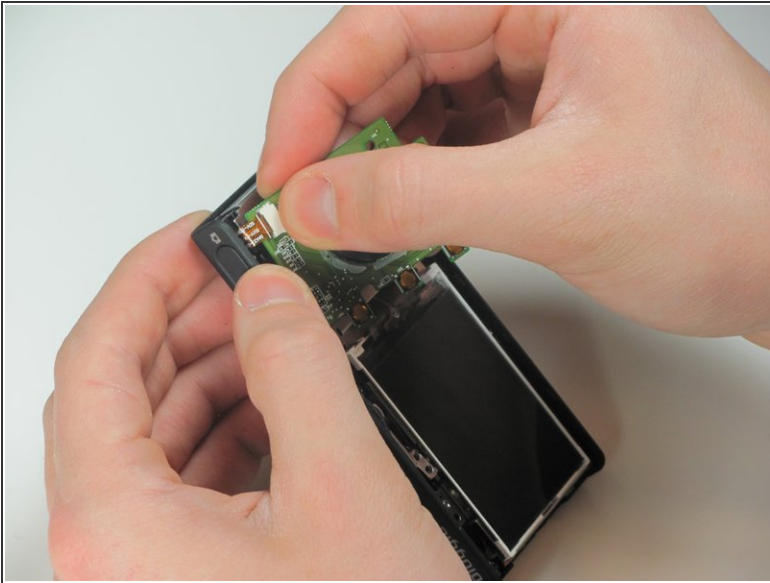


- Using your hand, or a pair of tweezers, remove the ZIF connector by gently pulling it out of the dock on the circuit board.

Step 4

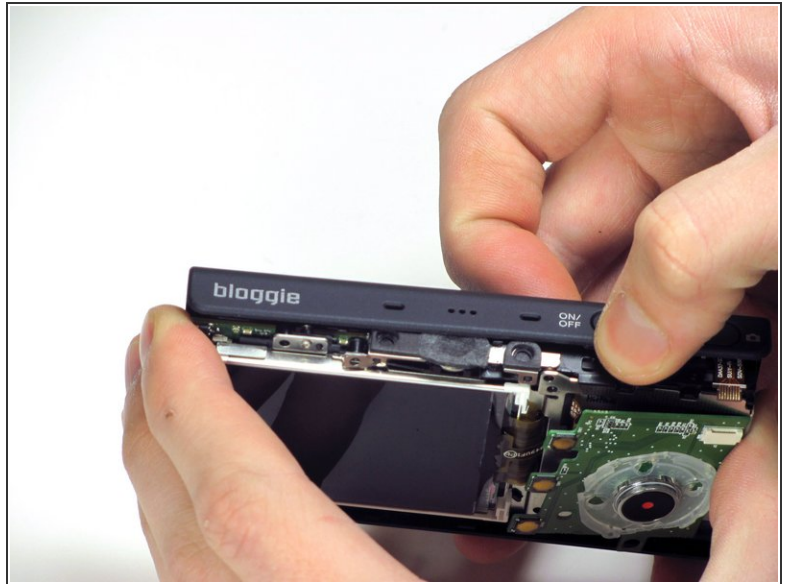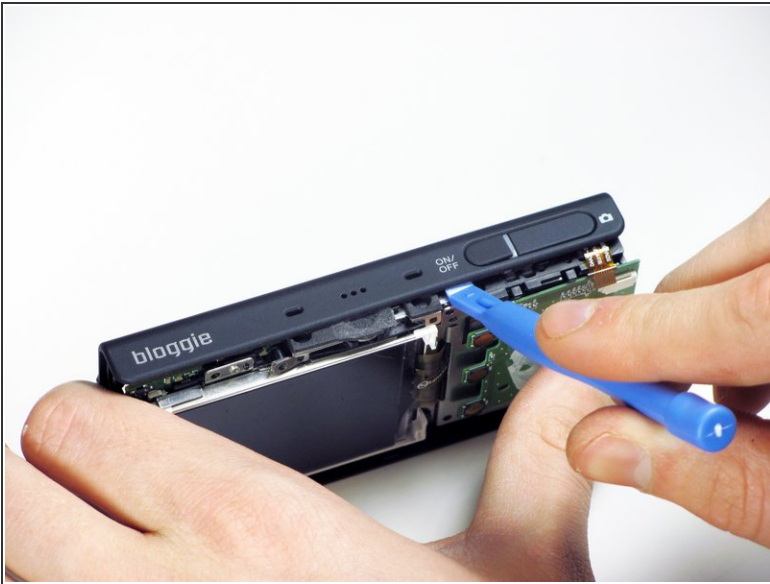

- Use a plastic opening tool to loosen the back cover off the device.
- Once the back cover is loose, remove it gently by hand.

Step 5 — Battery

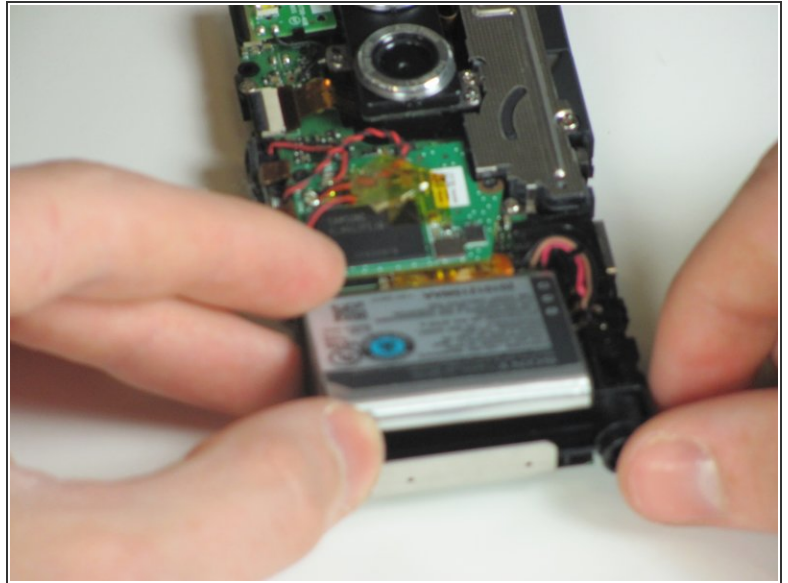

- Remove the battery with your fingers.

To reassemble your device, follow these instructions in reverse order.