



How to Keurig K75 Platinum Brewing System

The vacuum mechanism within the Keurig B70 Platinum will be readjusted.

Written By: Kristen Temnyk



INTRODUCTION

If the vacuum is malfunctioning, water will be fed into the air pump causing it to rust and seize.

TOOLS:


- [Phillips #2 Screwdriver](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — How to Keurig K75 Platinum Brewing System




- ⚠ Before beginning the repair, turn off and unplug the brewer from any power source.
- Move the brewer so that the bottom is easily accessible.
- Unscrew the five 4mm silver diagrammed screws using a #2 Philips Head screwdriver.

Step 2

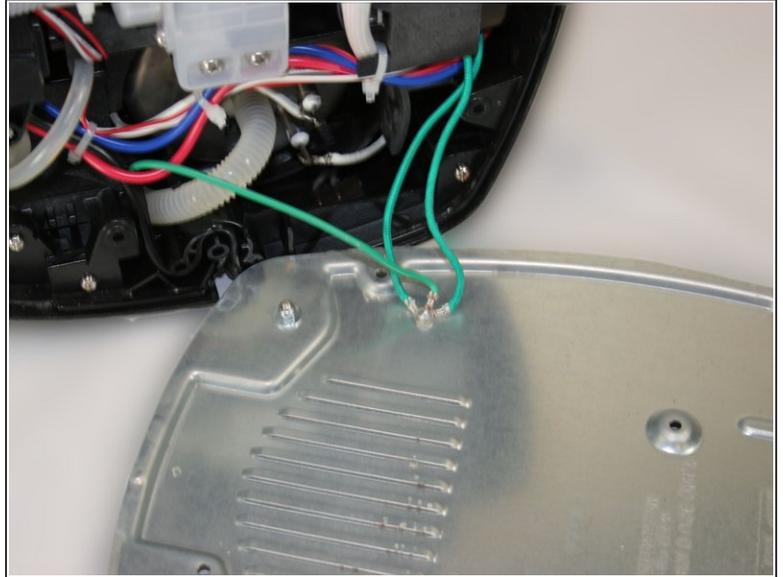


- Using a spudger, gently pry open the base metal plate from the brewer.
- Gently place the base of the brewer down.

Step 3

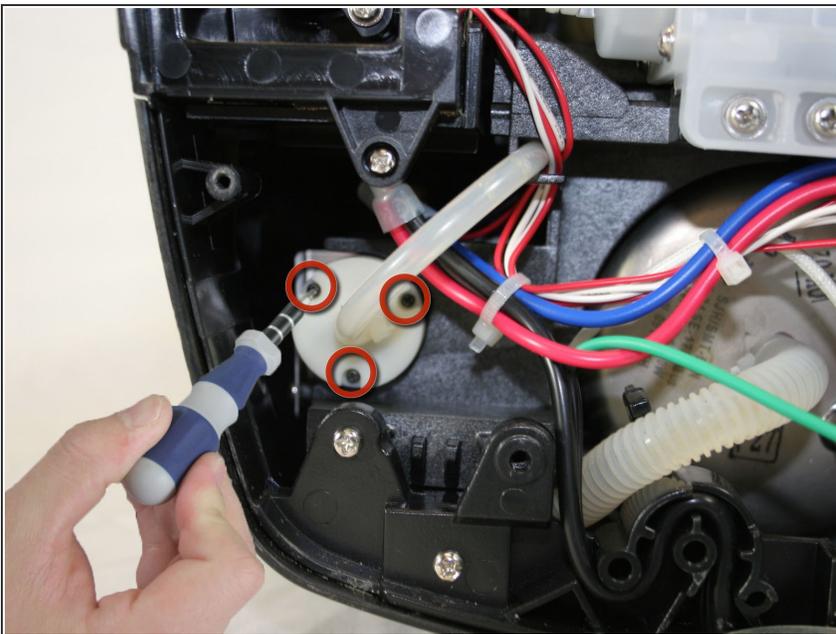

- Locate the vacuum apparatus within the Keurig B70 Platinum.
- Using a #00 Phillips screwdriver, unscrew the three 15 mm black screws diagrammed.

Step 4

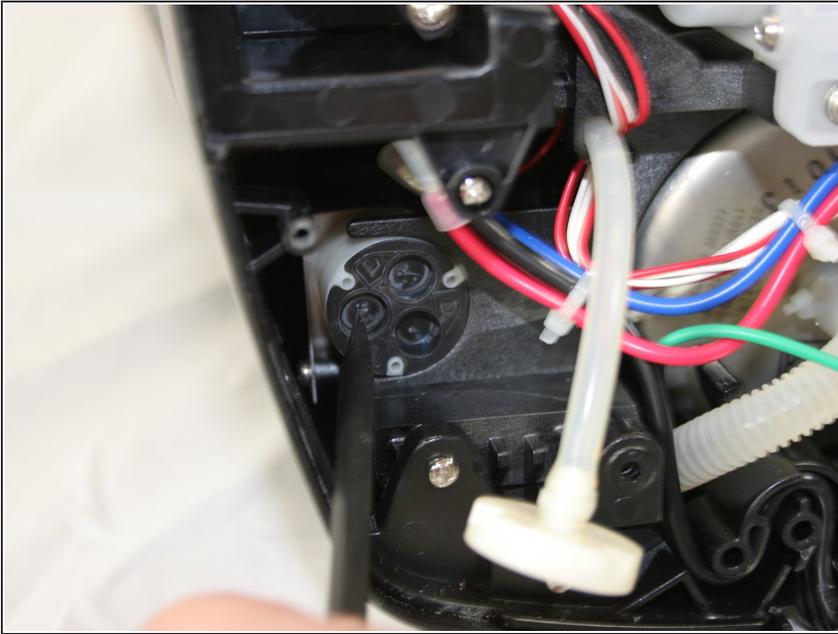

- Using a spudger, lift the white piece of the vacuum away from the black membrane.
- Realign the circular pieces of the membrane so that the circles lie flush inside the black membrane apparatus.

To reassemble your device, follow these instructions in reverse order.