



# Shark ION Robot S87 Battery Replacement

This guide will explain how to replace the battery in a Shark ION Robot S87.

Written By: Adeel Ahmad



## INTRODUCTION

Is your Shark ION Robot S87 battery draining quickly or not charging? This is because batteries have a life span which decreases with every charge. If that is the case, you may need to replace the battery.



### TOOLS:


- [Phillips #1 Screwdriver](#) (1)



### PARTS:

- [Shark ION S87 Battery](#) (1)

## Step 1 — Battery

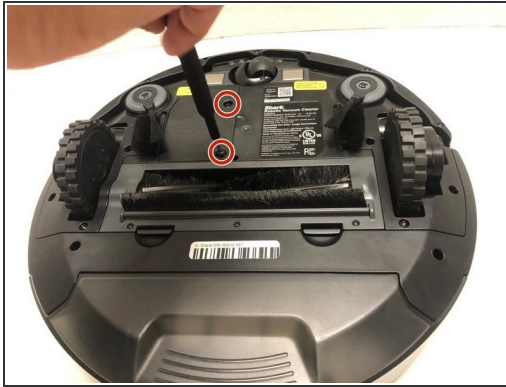

- Flip the device so its underside is facing up.
- Use the Phillips #1 screwdriver to remove the two 14mm screws.
- Once you have removed the screws, open the battery lid.

## Step 2



- Hold both sides of the battery using the plastic tabs.
- Use the plastic tabs to pull the battery out.

## Step 3



- Disconnect the battery from the device by pulling it out of the circuit.

To reassemble your device, follow these instructions in reverse order.