




# Lenovo IdeaPad Flex 5-1470 Back Panel Replacement

This guide will show you how to remove the back panel on a Lenovo IdeaPad Flex 5-1470.

Written By: Tori Nardoni

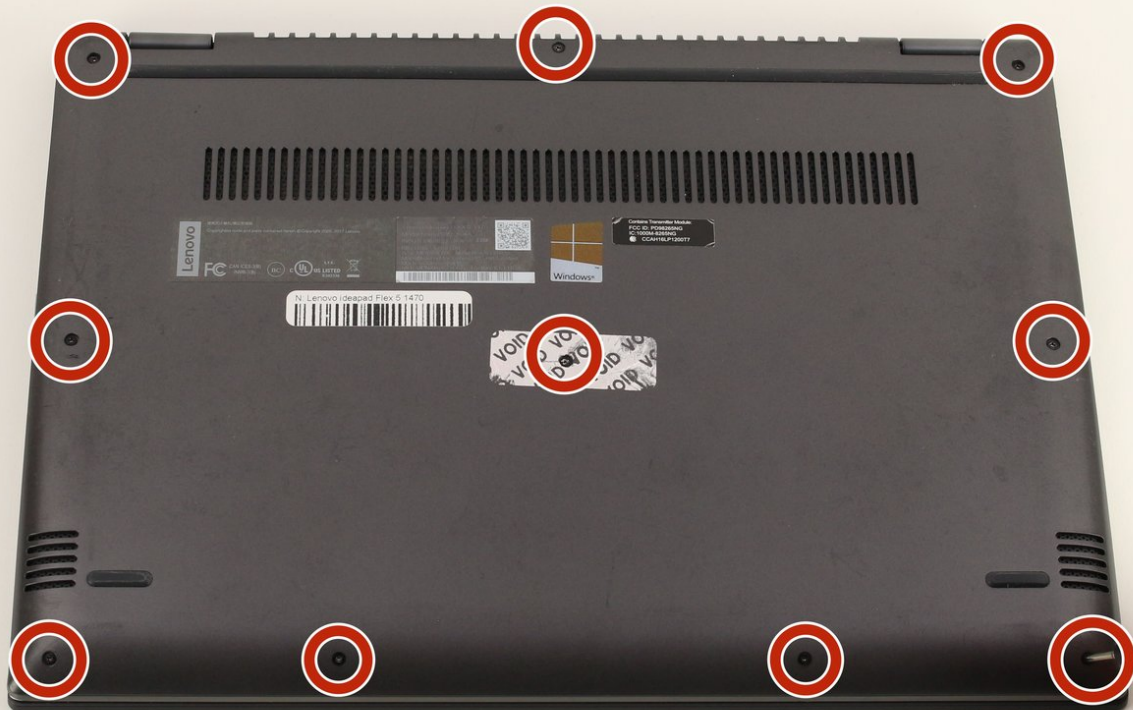

## INTRODUCTION

Use this guide to fully remove the back panel on your Lenovo IdeaPad Flex 5-1470 laptop.

Removing the back panel of the laptop is the most crucial part of most all repairs, seeing as it precedes being able to replace any of the internal parts.

Before using this guide, make sure to review the [troubleshooting page](#)—oftentimes, laptops can be fixed without disassembling them.

Make sure to power off your laptop completely and disconnect from any external power source before beginning the process of removal.



### TOOLS:


- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)



### PARTS:

- [Lenovo Yoga 520 \(14"\) and Flex 5-1470 Lower Case](#) (1)

## Step 1 — Back Panel

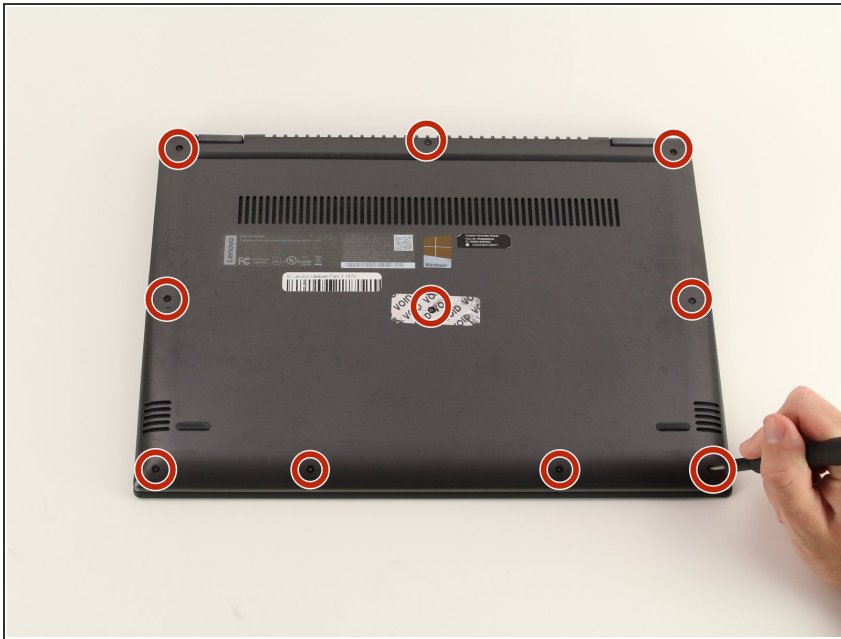

- Remove all ten 6.6 mm screws with a Phillips #00 screwdriver.

## Step 2



- Use the plastic opening tool to lift up and remove the casing.

To reassemble your device, follow these instructions in reverse order.