



Sony Bloggie 3D Player Front Cover Replacement

Removing the front cover of the Sony Bloggie 3D.

Written By: Robert Tam



INTRODUCTION

This will help you to remove the front cover so you can get to the other parts of the Bloggie 3D Camera.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Front Cover



- Remove the two 2.5mm Phillips #00 screws using the Phillips #00 screwdriver.

Step 2

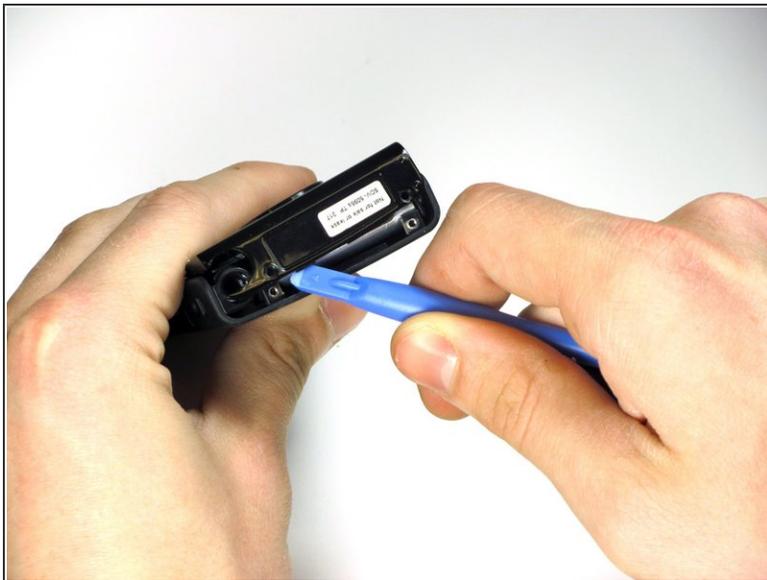

- Use a plastic opening tool to pry the cover open.
- After the the cover is partly open as shown, remove the cover with your hands.

To reassemble your device, follow these instructions in reverse order.