




ZTE Prestige 2 Power and Volume Buttons Replacement

This guide will help you replace the power and volume buttons in your ZTE Prestige 2.

Written By: Mackenzie Peterson

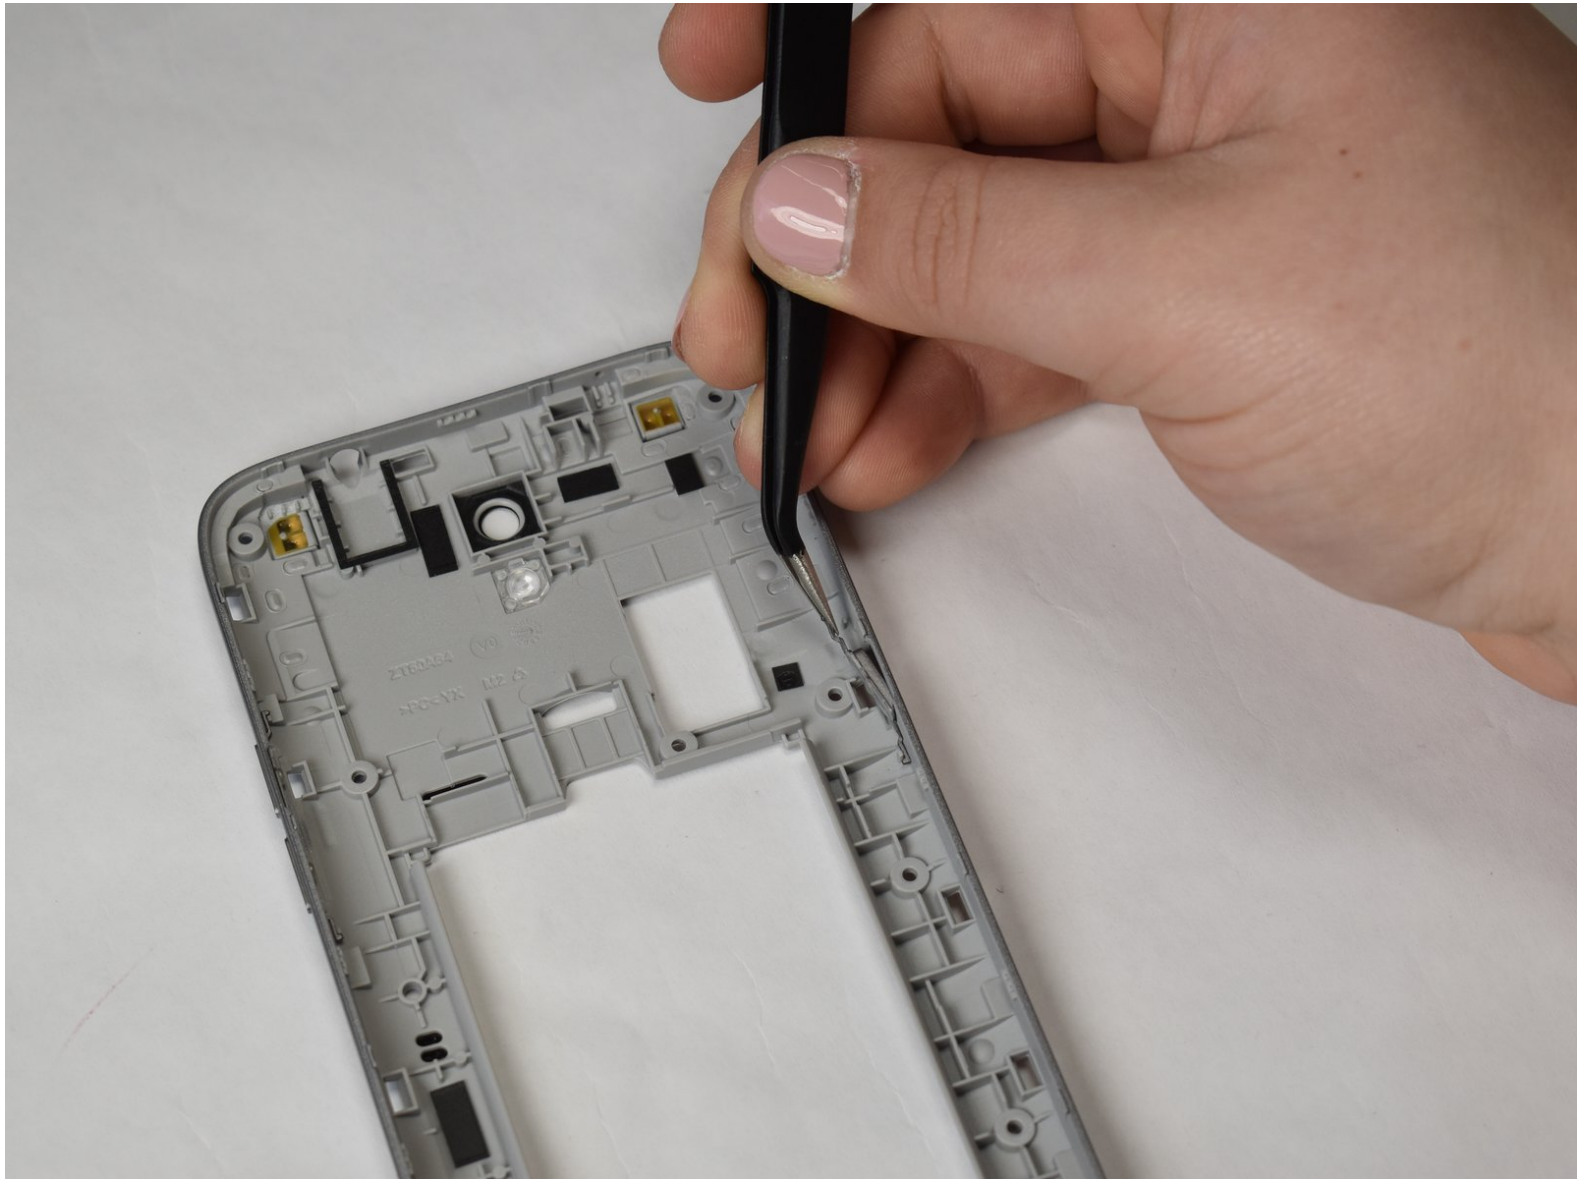

INTRODUCTION

This guide will help you replace the power and volume buttons in your ZTE Prestige 2. Before you start, check out our [troubleshooting page](#) that will help you decipher any basic problems before taking your device apart. Some reasons you may need to conduct this replacement is because the buttons may be loose or broken. Before beginning, make sure to power off your device completely and disconnect from any external power source.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
 - [Hakko 5B SA Curved Tweezers](#) (1)
-

Step 1 — Battery



- Use the iFixit opening tool to open up the device by wedging the tool under the back case and popping it open.

Step 2




- Remove the battery.

Step 3 — Back Panel





- Use a Phillips #00 screwdriver to unscrew all 12 of the 3 mm Phillips screws located along the edges of the device's back panel, as well as the blue 3mm Phillips screw labeled "ZTE" located towards the top right.

Step 4

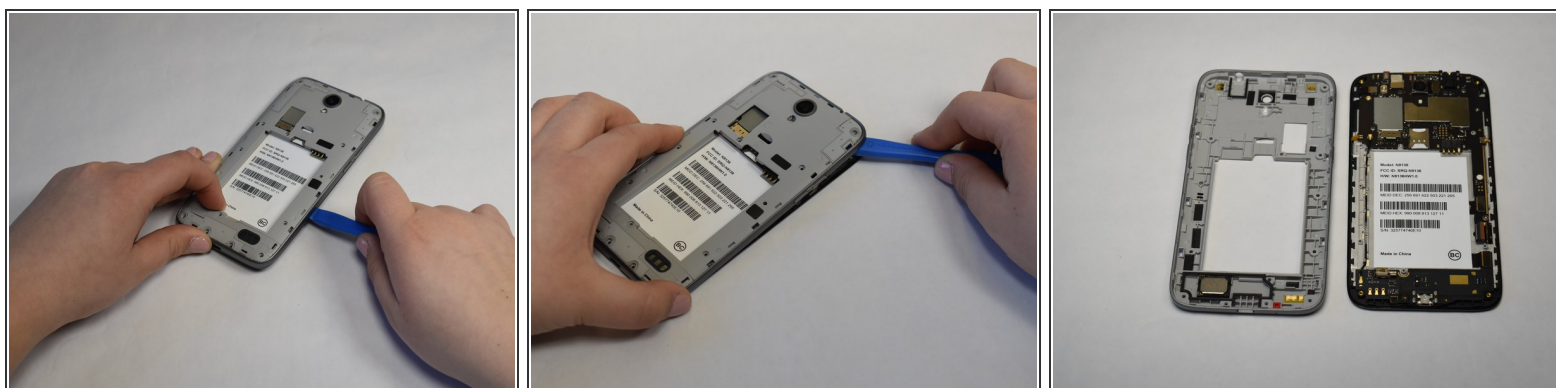

- Then use the iFixit opening tool and wedge it under the grey back panel and pop it off.
- ⓘ There will be a lot of resistance, apply adequate pressure.

Step 5 — Power and Volume Buttons

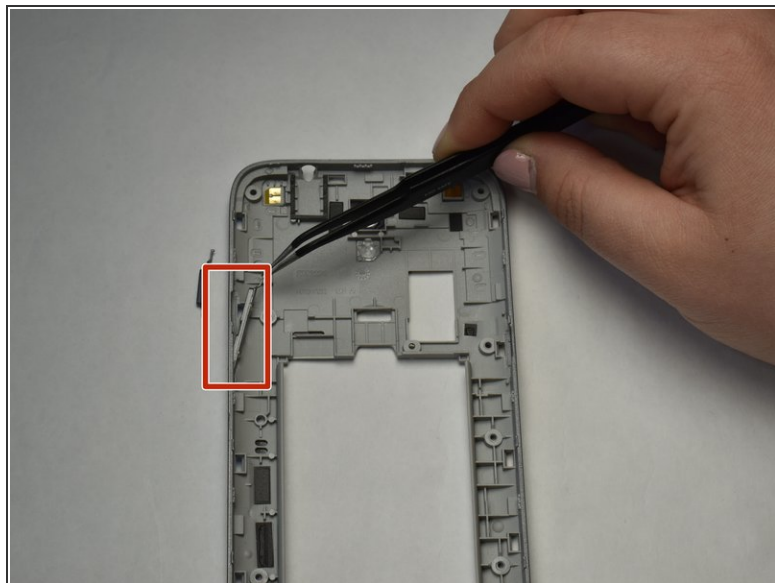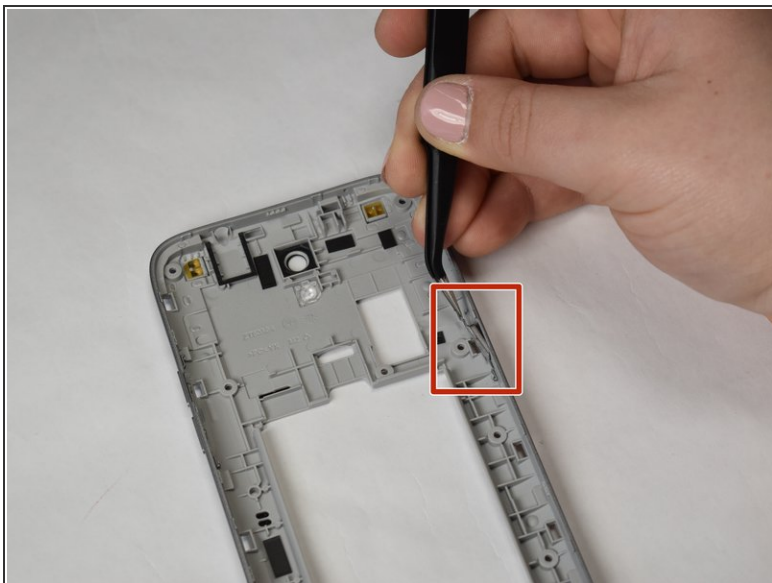

- Use the curved tweezers to pull upwards and out on the the thin plastic attached on both sides of the power button and volume buttons. This process should allow the buttons to pop right out.

To reassemble your device, follow these instructions in reverse order.