



iPod Touch 7th Generation Front Camera Replacement

prerequisite only

Written By: Tarun Thiruma



INTRODUCTION


prerequisite only



TOOLS:

- [Spudger](#) (1)
-

Step 1 — Front Camera

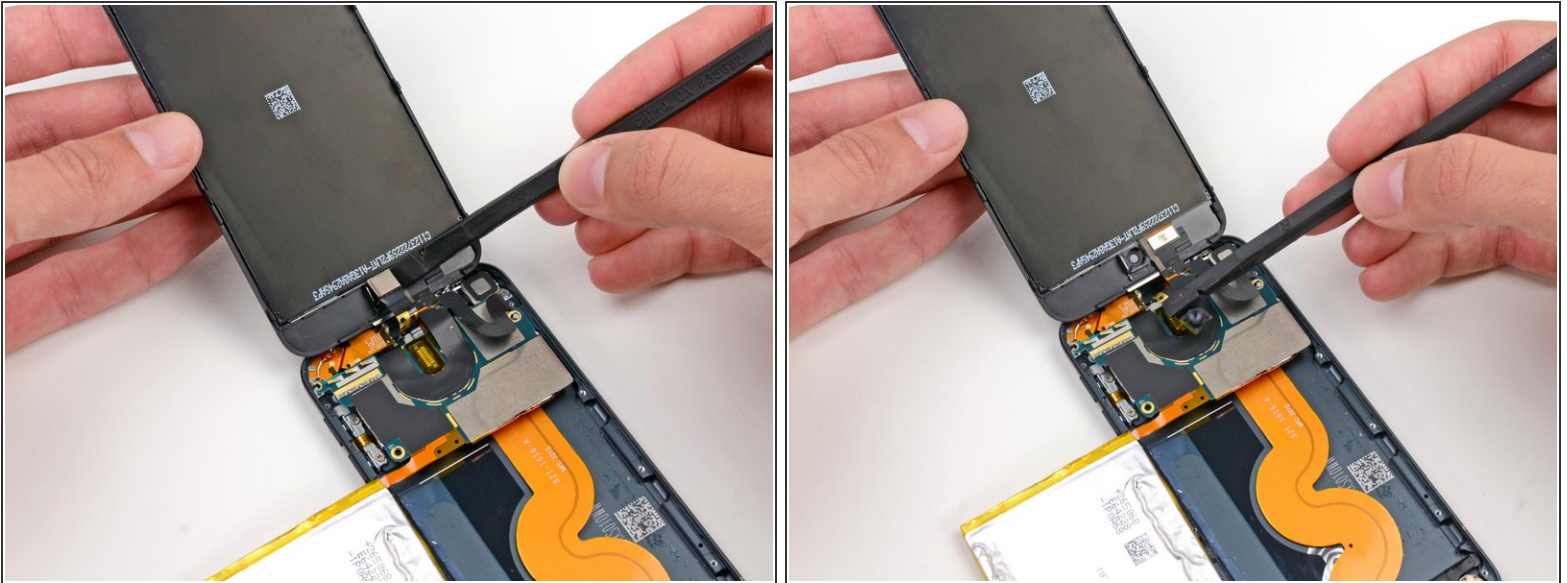

- Use the flat end of a spudger to flip the front-facing camera out of its socket in the display assembly.
 - ⚠ There is a small amount of adhesive securing the camera module to its socket, but this should not take very much force. Use the spudger to get in between the black plastic of the camera module and the black plastic of the camera socket and separate them.

To reassemble your device, follow these instructions in reverse order.