





Dell Latitude E7450 Battery Replacement

This [replacement] guide will teach you how to replace the battery on this Dell Latitude computer

Written By: Hezekiah Brown

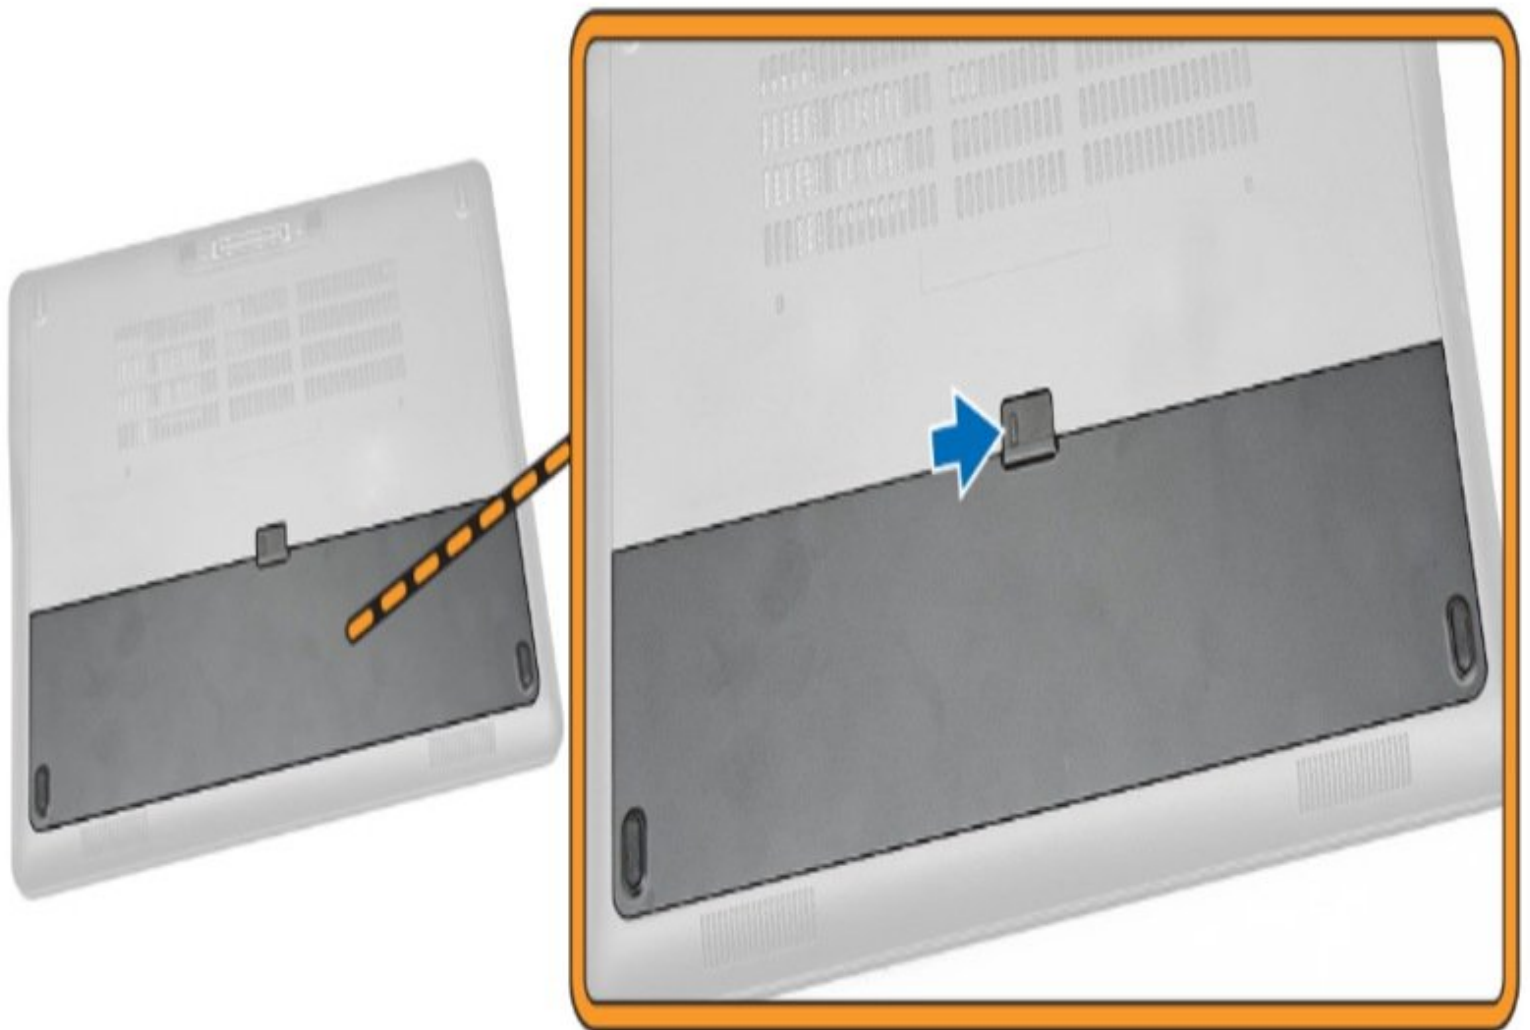


Step 1 — Slide open latch

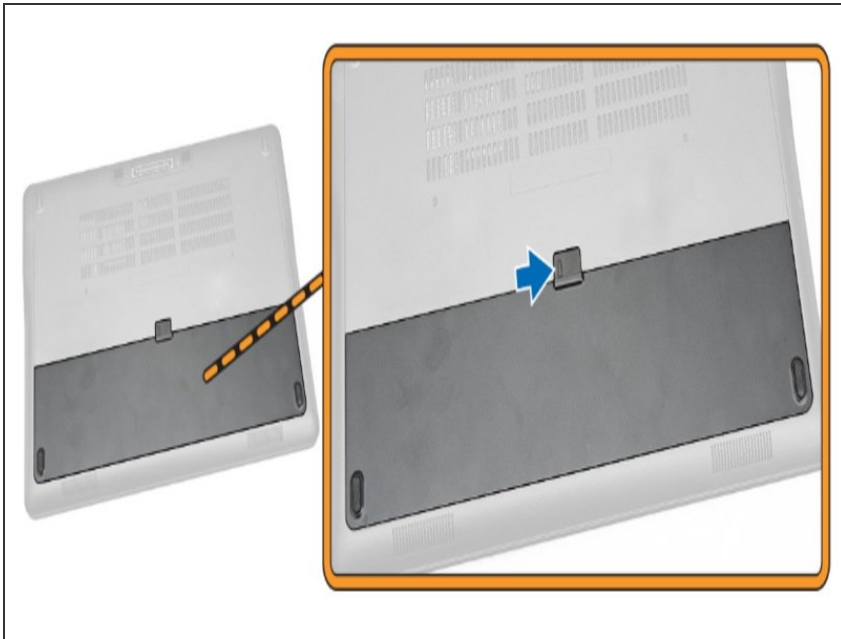

- Slide the release latch to unlock the battery.
- ⚠ Disconnect all power sources before opening the computer cover or panels.

Step 2 — Take off battery

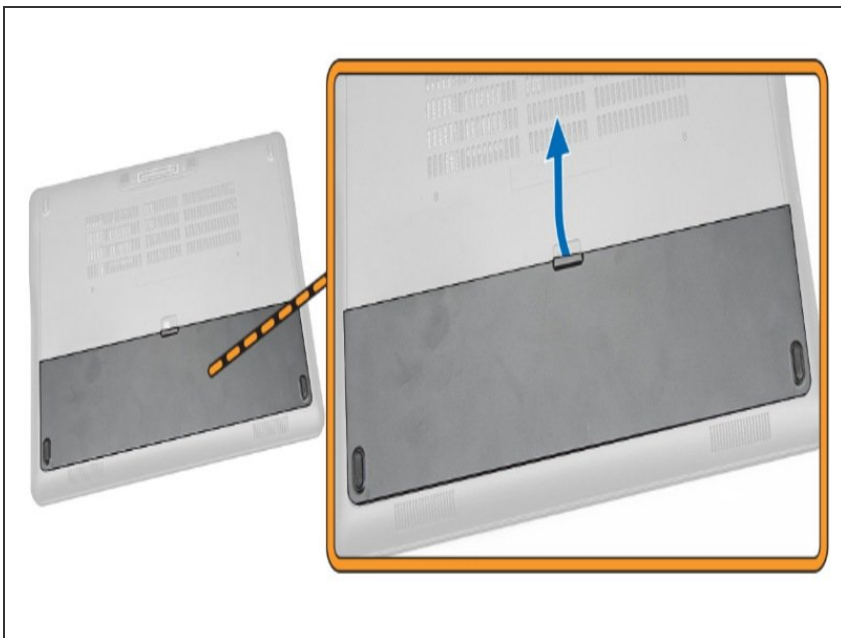

- Simply take off the battery from the computer.

Step 3 — Put new battery in



- Put the new battery (designed for this computer) into its slot; slide until it clicks right into place.

To reassemble your device, follow these instructions in reverse order.