




Dell Latitude E6530 CMOS Battery Replacement

In this Guide i will show you how to disassemble a laptop and replace the Dell latitude E6530 CMOS Battery.

Written By: Jordon Dozier

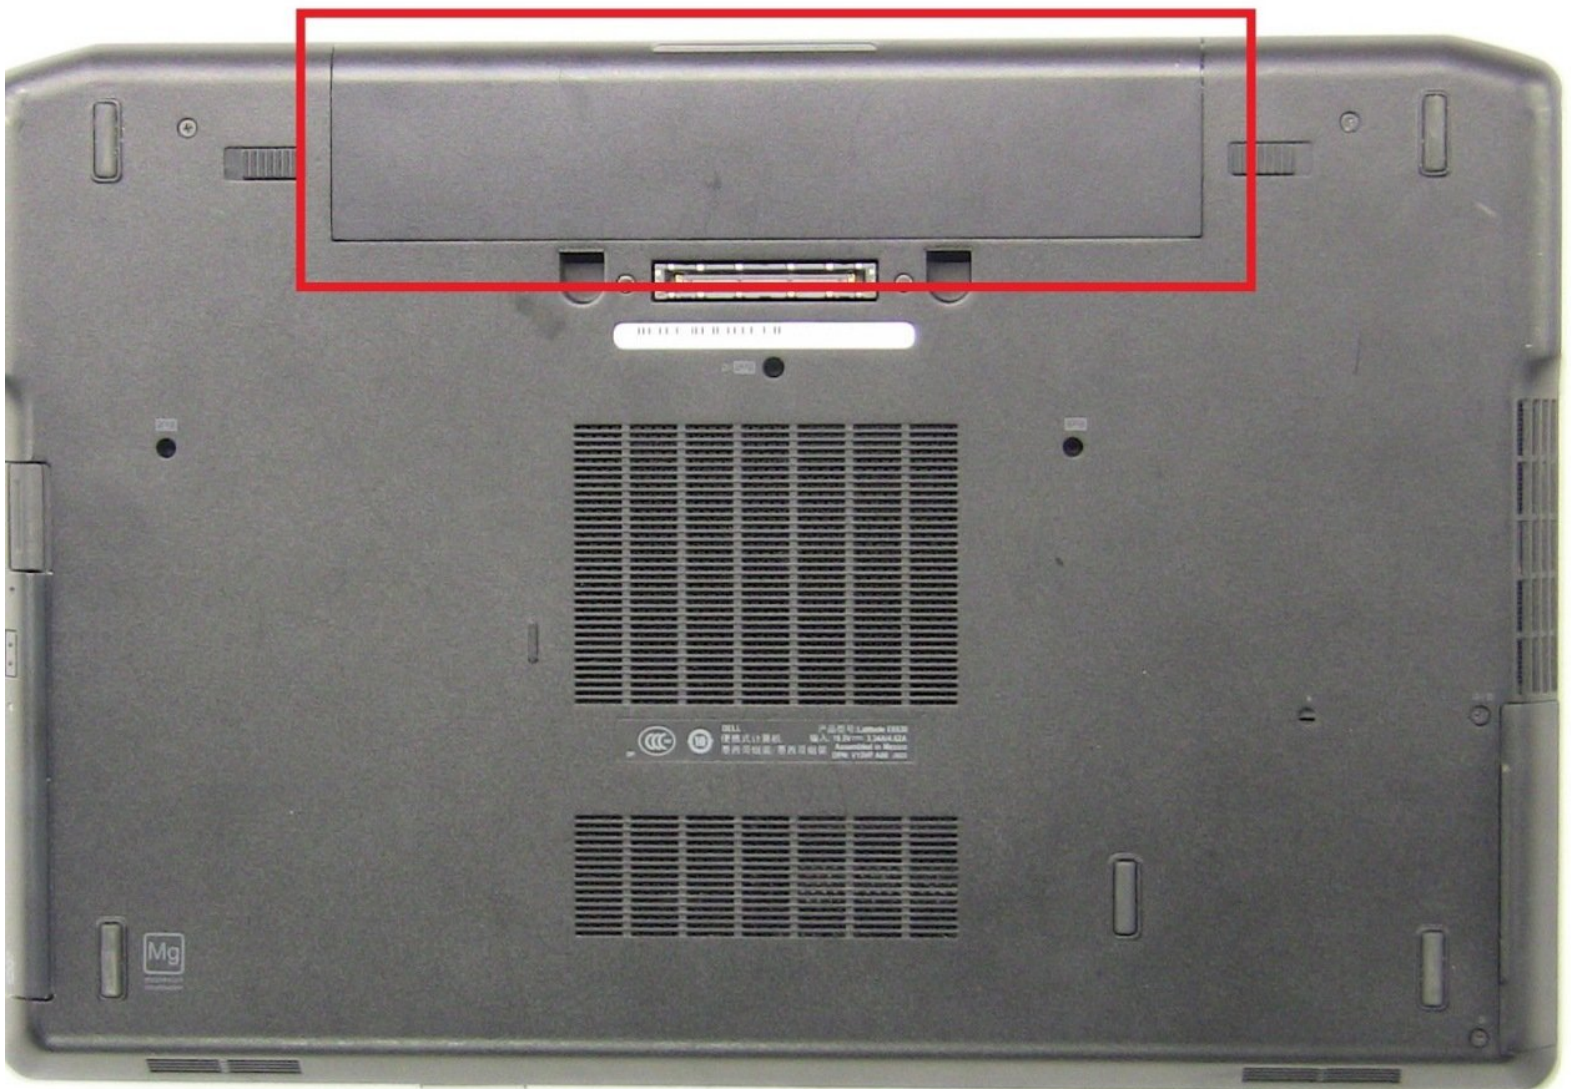

INTRODUCTION



Source: <https://www.parts-people.com/blog/2017/0...>



TOOLS:



- [Small plastic scribe](#) (1)
 - [Small Phillips Head Screwdriver](#) (1)
-

Step 1 — Slide tabs outward and remove Battery

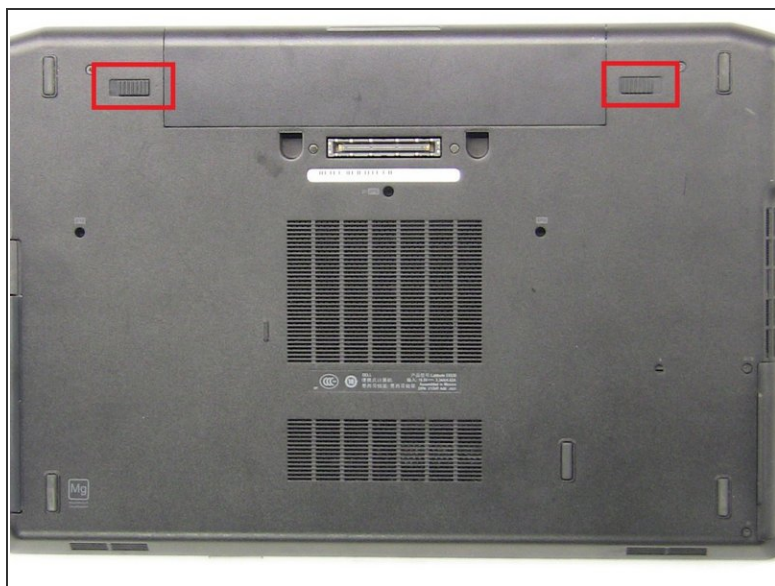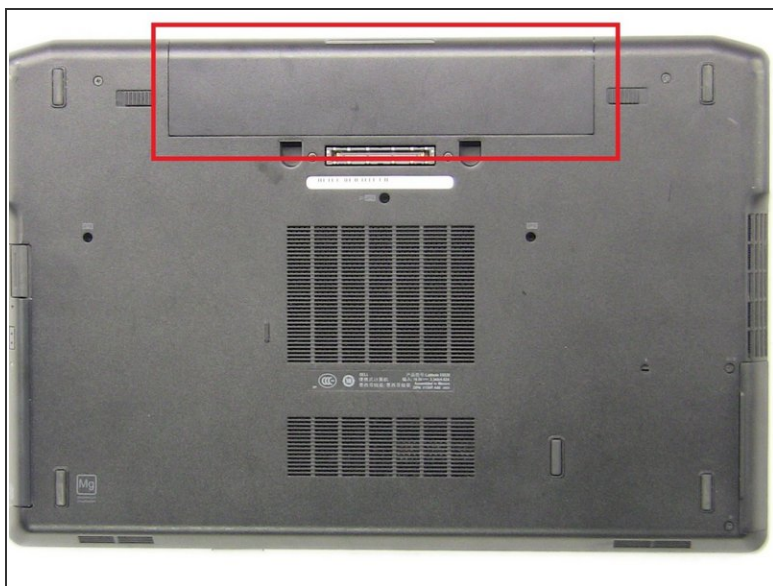



- Make sure your computer is unplugged and off before removing the battery

Step 2 — Unscrew and remove Base Cover

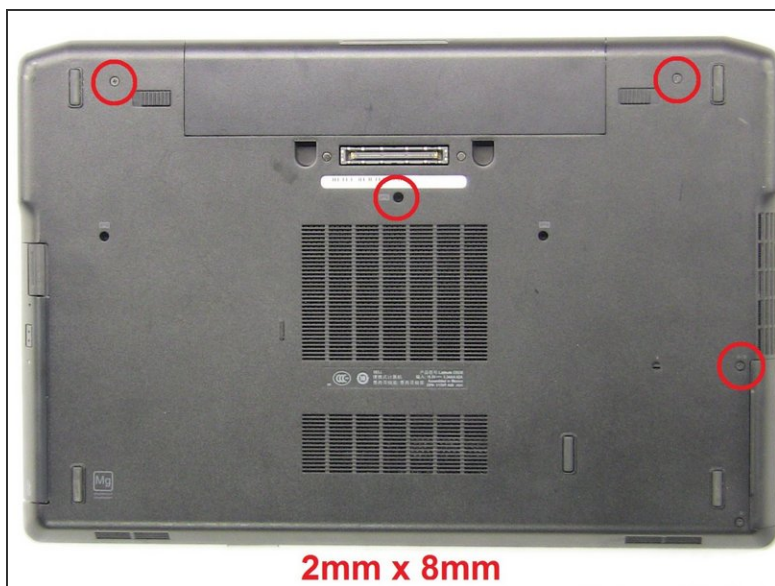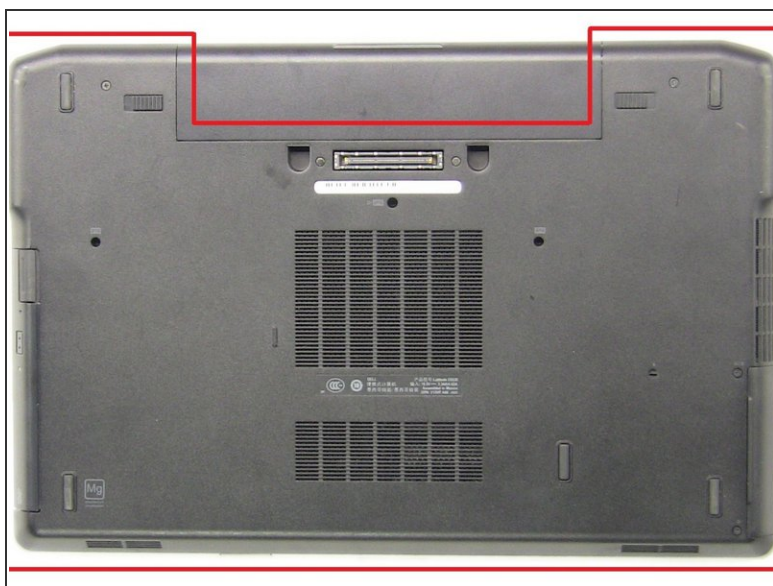

- Use your Phillips screwdriver (4 x M2.5 x 8mm)

Step 3 — Disconnect and remove CMOS Battery.

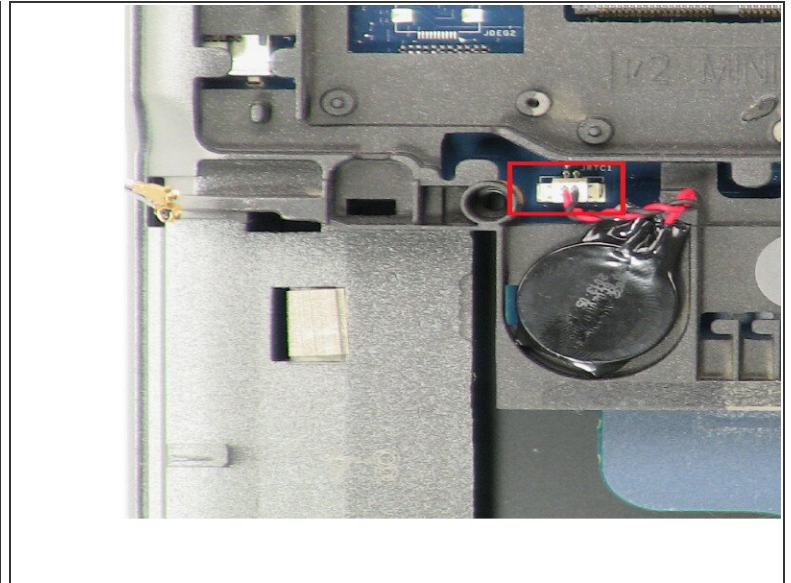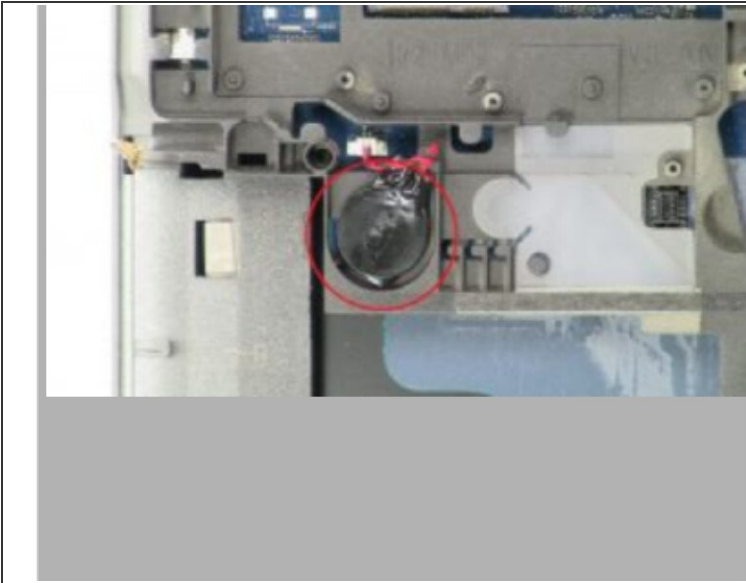

- Please remove carefully

Step 4 — Replace the cmos battery



- Carefully

Make sure you put everything back together