





Dell Inspiron 3552 Battery Replacement

Written By: Jordon Dozier

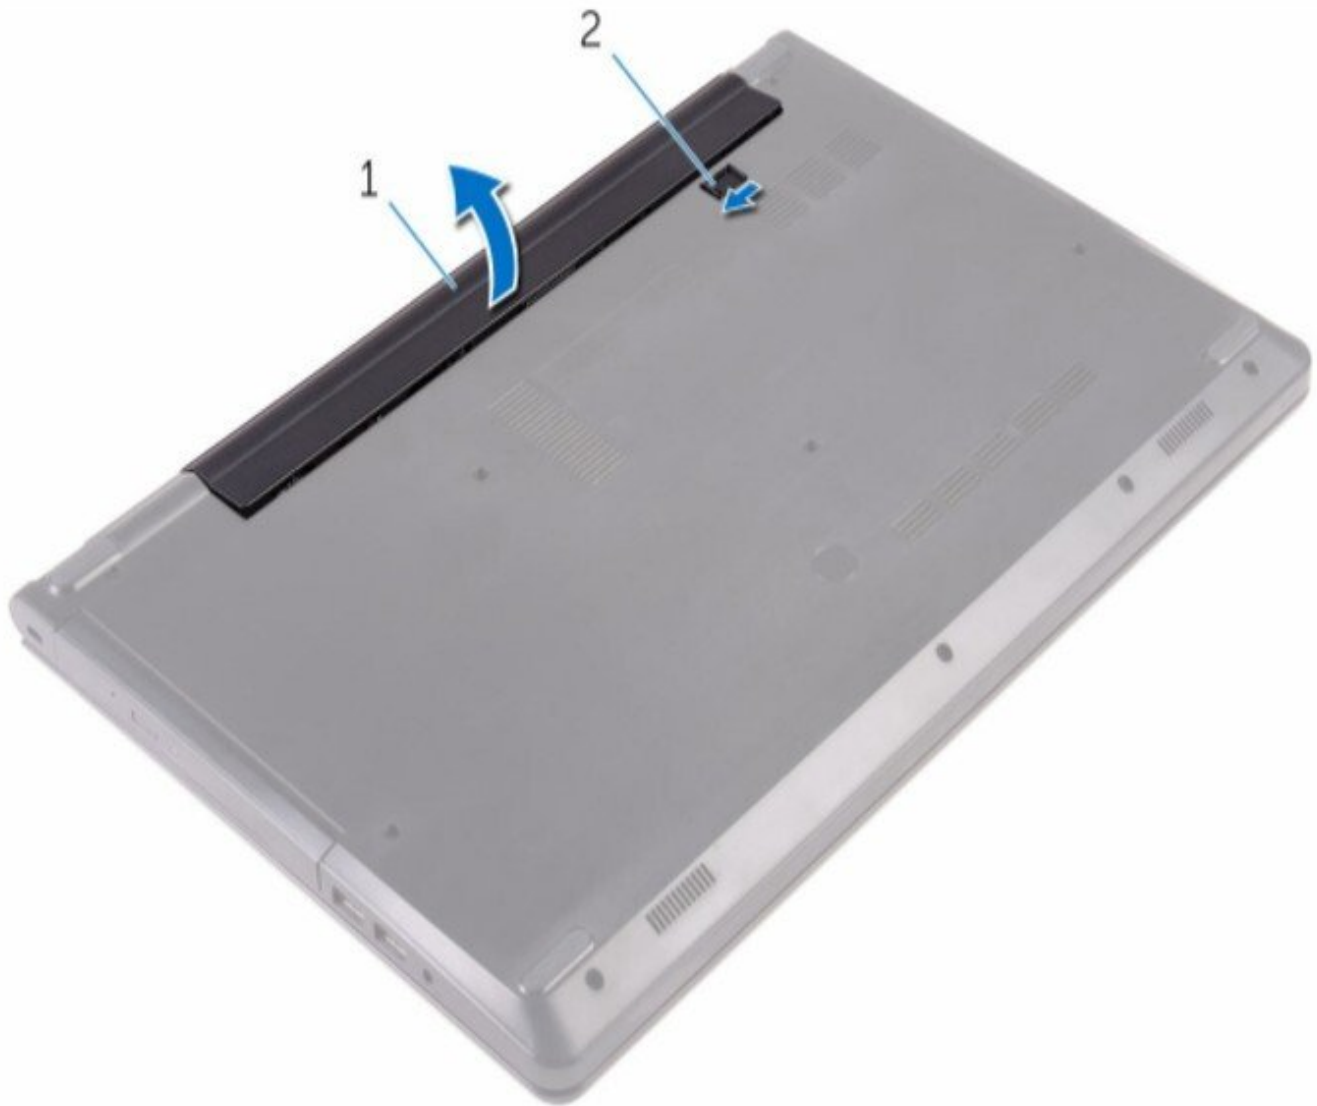


Step 1 — Removing the battery

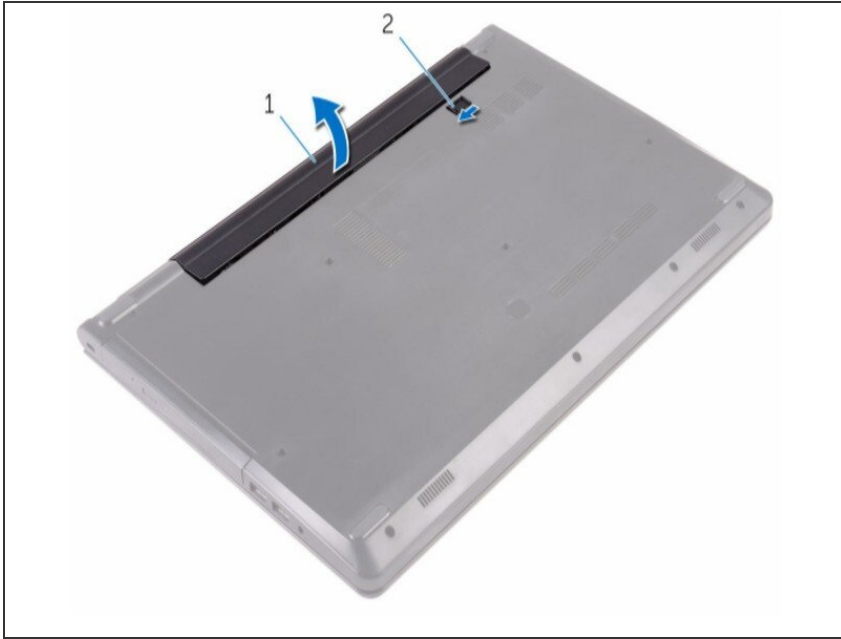

- Close the display and turn the computer over.
- Slide the battery-release latch to the unlocked position
- Lift the battery at an angle and remove the battery from the battery bay
- Turn the computer over, open the display, and press the power button for five seconds to ground the system board.

Step 2 — Replacing the battery

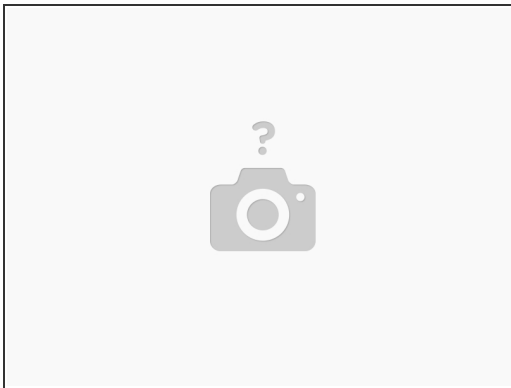

- Close the display and turn the computer over.
- Place the battery in the battery bay and snap the battery into place.

To reassemble your device, follow these instructions in reverse order.