



2007 Honda Accord Bass Speakers Replacement

This guide is for replacing the bass speakers...

Written By: Frankie



INTRODUCTION

This guide is for replacing the bass speakers in a 2007 Honda Accord. While driving your Honda Accord you may notice that the speakers are not working up to your standards. No need to worry. Replacing them yourself instead of taking your car to a shop is safe, easy, and affordable. So follow the following steps and you will have a new bass speaker in your Honda Accord in no time.

TOOLS:

Power Drill (1)
Precision Drill Bits (1)
Phillips #2 Screwdriver (1)
iFixit Opening Tool (1)
Wire Stripper (1)
6-in-1 Screwdriver (1)

PARTS:

Electrical Tape in 6 Assorted Colors (1)

Step 1 — Bass Speakers





- Use the plastic opening tools to remove the floor trim panel on the driver's side door.

Step 2



- Remove the shifter frame panel with the same opening tools.

Step 3

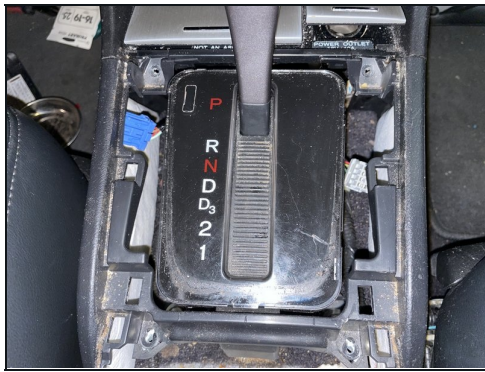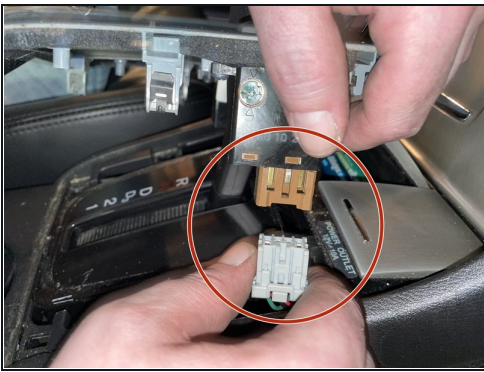

- Unclip the heated seats harnesses.
- Remove the 12V power supply connection.

Step 4



- Remove the cubby space to access the head unit.

Step 5




- Remove the center climate vents with the opening tools.

Step 6




- Remove the head unit from the dash.

Step 7

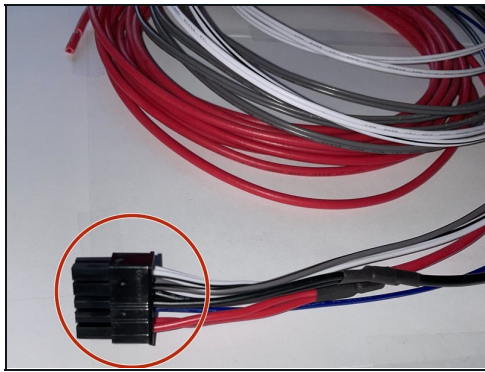

- Attach the wiring harness into the amp by clipping it in.

Step 8

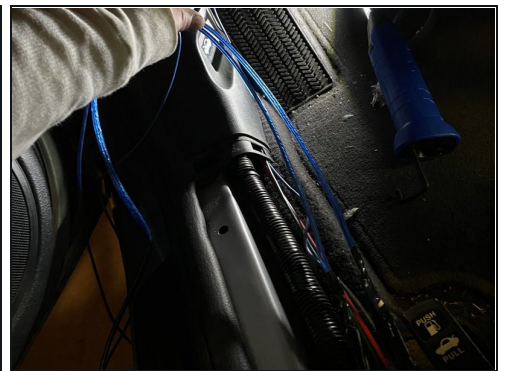


- Run the wires under the back seat and along the driver's side door sill (removed in step 1) to under the steering wheel.

Step 9





- Drill a hole through the firewall located on the foot well of the driver's side under the steering wheel.

Step 10

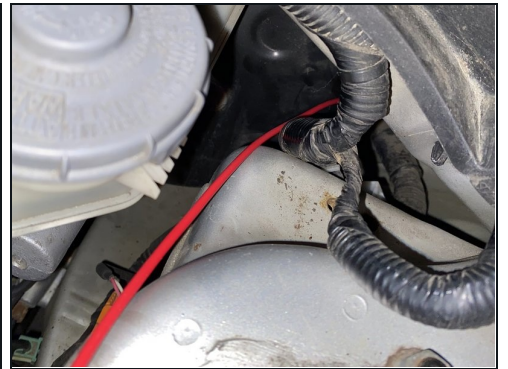



- Run the power and ground wires from the trunk through the door sill and through the firewall to the engine bay.

Step 11

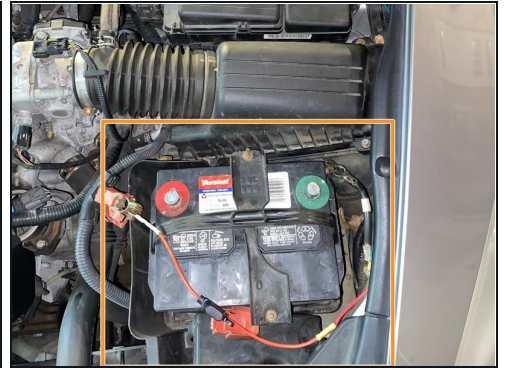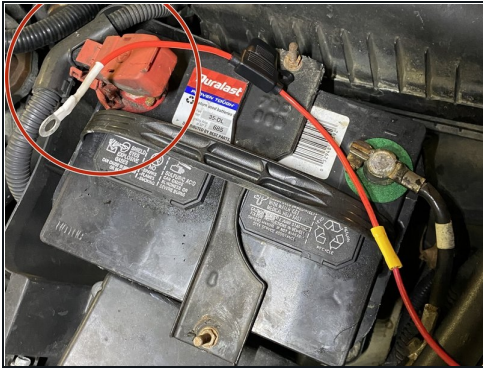



- Run the power wire where it will be out of the way.
- Run the power wire (red) and the ground wire (green) to battery, connect red to positive and green ground to a clean piece of the car body.
- Make sure to leave the power wire off until finished.

Step 12

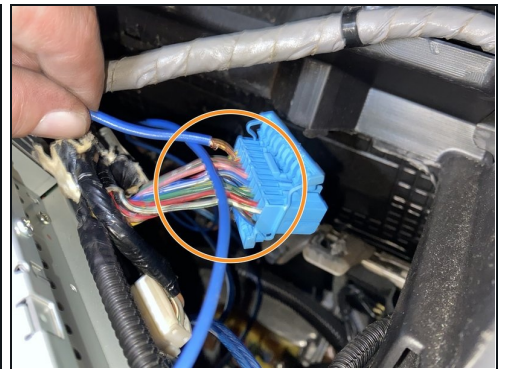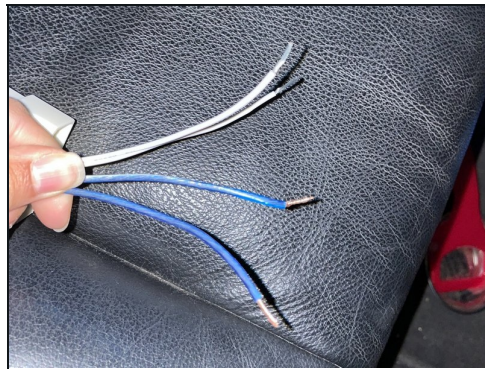

- Remove the wiring harness from the back of the head unit.
- Connect the four speaker wires and one remote wire to the harness as suggested in the owner's manual.

Step 13

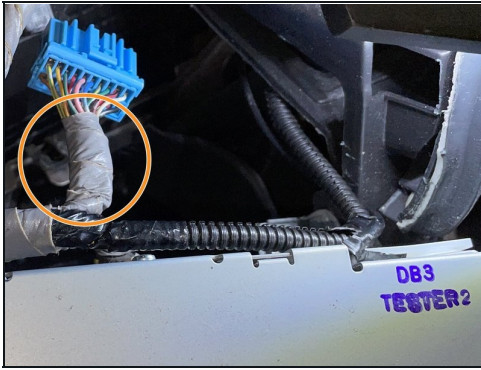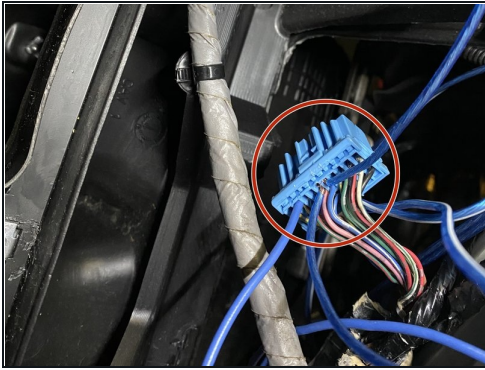

- Clamp down the wire harness on the five wires.
- Tape up the wire loom to keep it neat.
- Insert the wire harness back into the head unit.

Step 14



- Put the head unit and the panels back into the car.

To reassemble your device, follow the instructions in reverse order.