


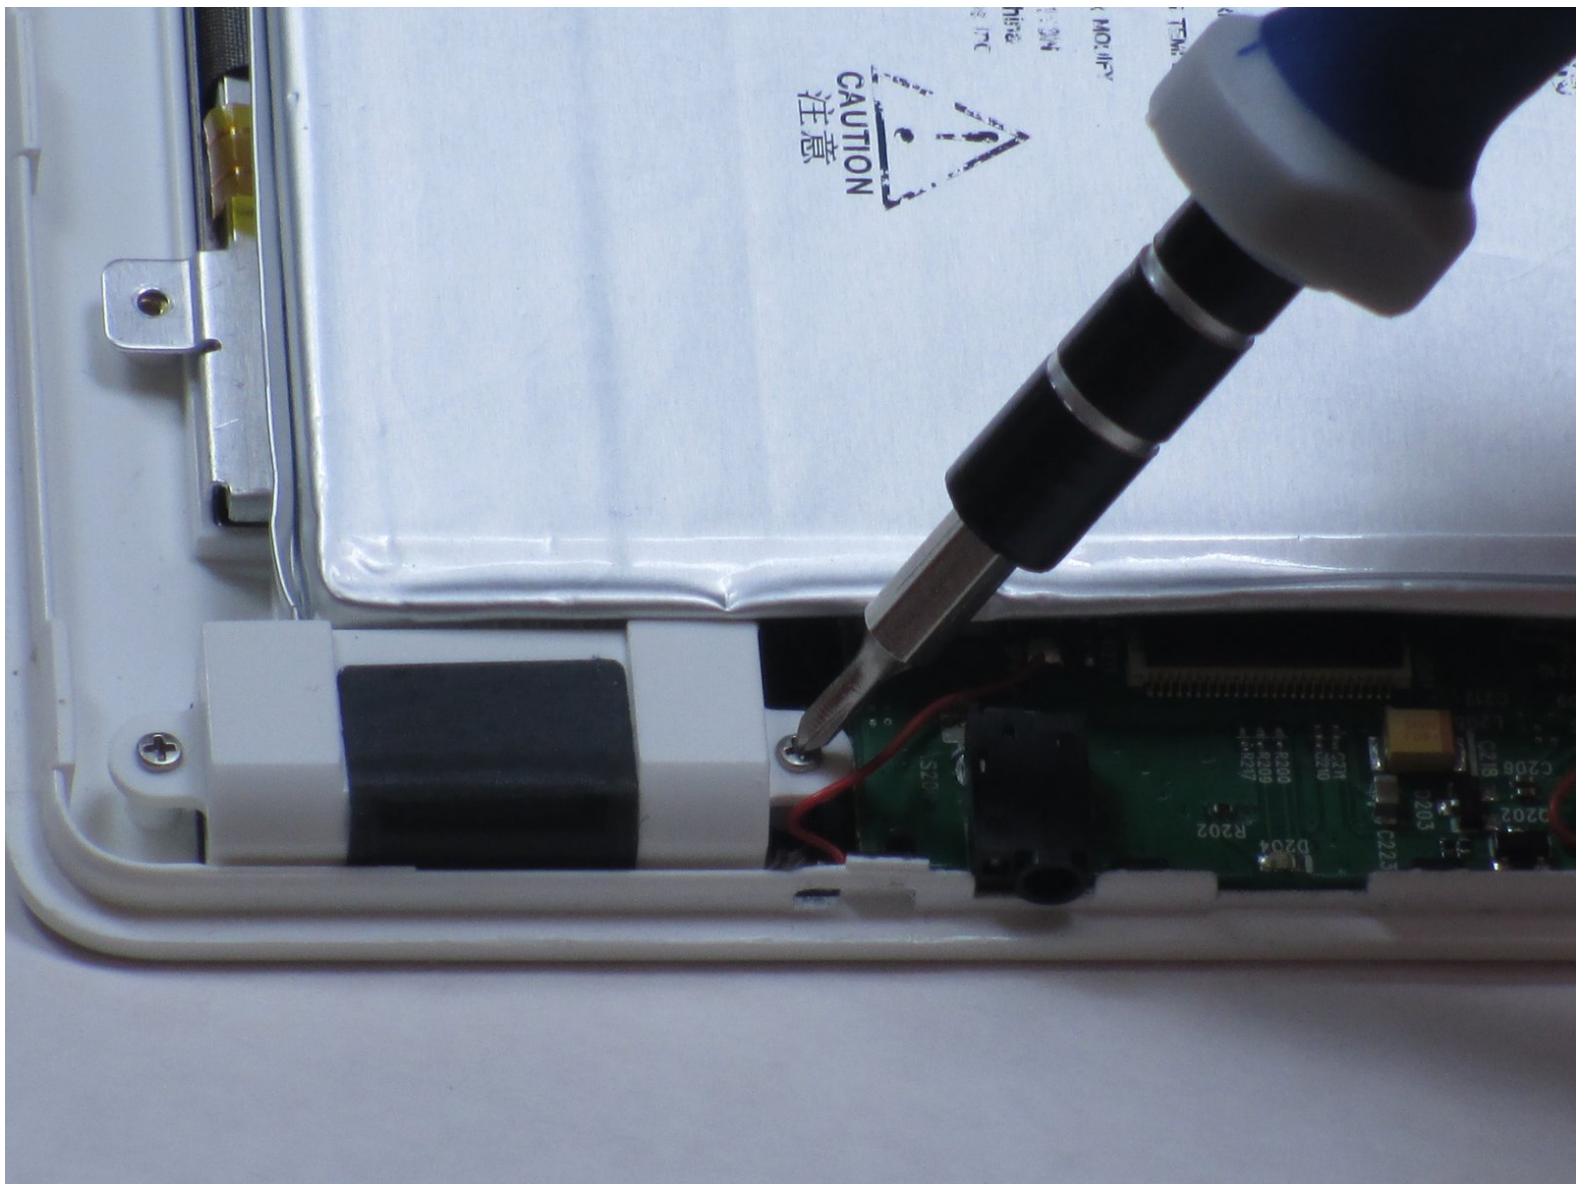

Creative Ziio 7" Right Speaker Replacement

In this guide, you will be able to uninstall the broken right speaker of the Creative ZiiO 7" and install a new, functioning speaker.

Written By: Bryce Simmons






TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-


Step 1 — Back Panel

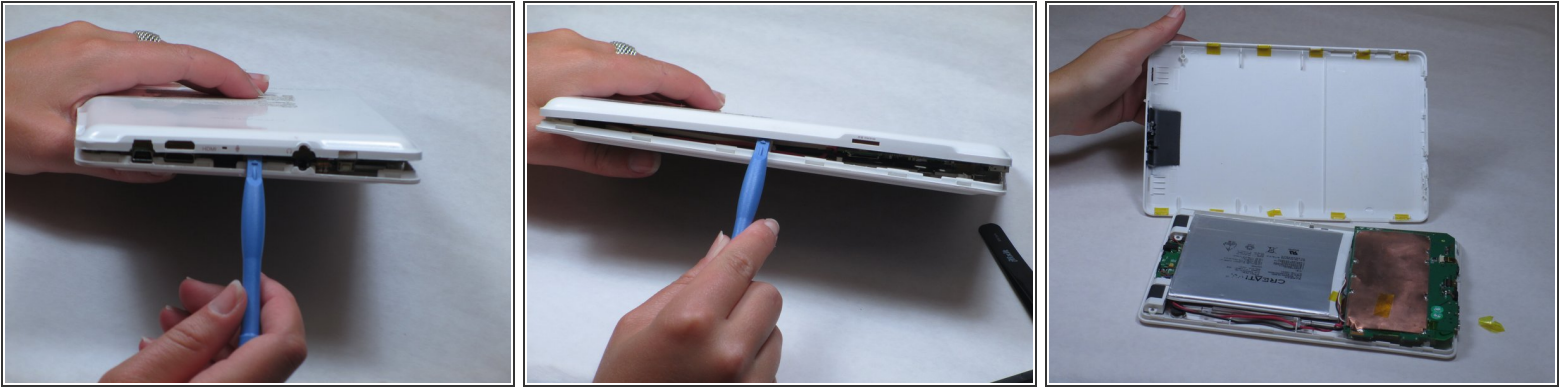

- Remove the back panel by using the plastic opening tool to carefully pry around the panel's edges.



⚠ The volume control button and the top power button may fall out during this step.

Step 2 — Right Speaker

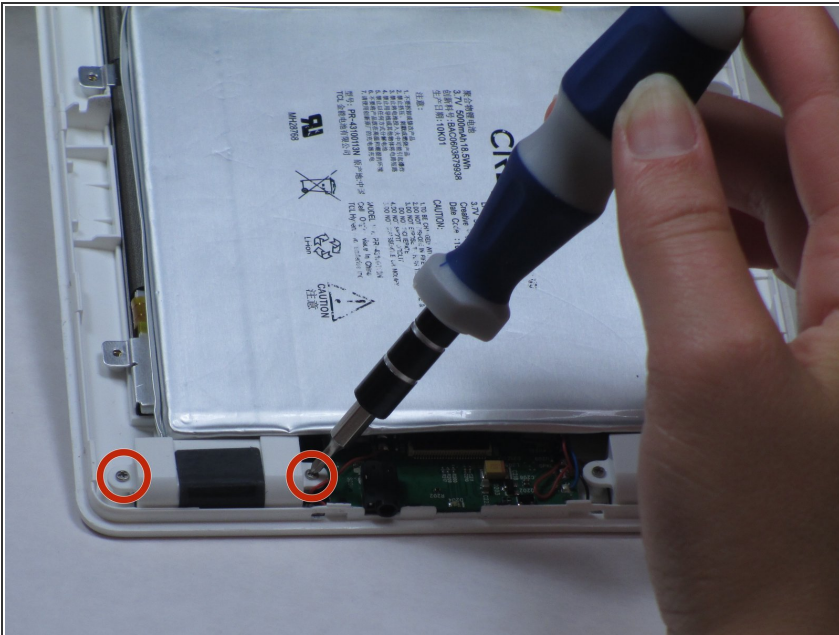

- The right speaker is directly below the battery as shown.
- Remove the two 4mm Phillips #00 screws found in the speaker at the bottom left corner of the device.

Step 3

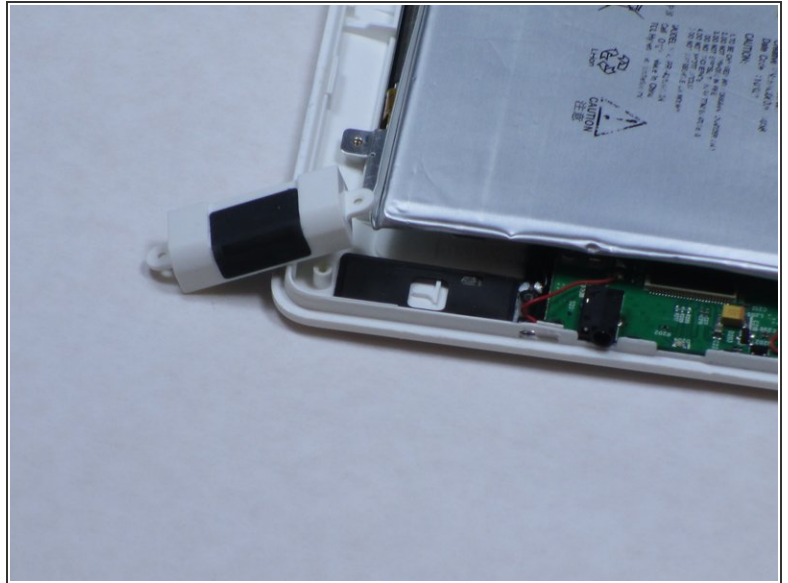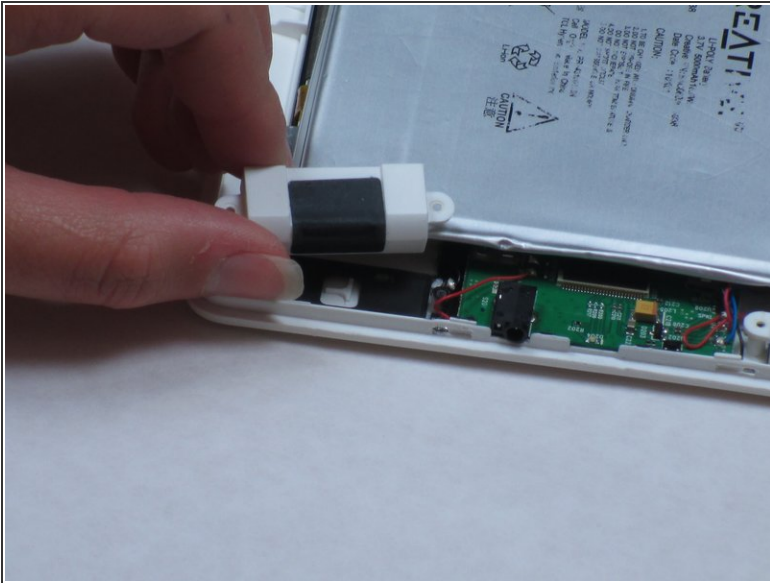

- Once the screws are removed, discard the broken speaker.
- Replace the broken speaker with a new right speaker.

To reassemble your device, follow these instructions in reverse order.