



HP Stream 11 Pro Thermal Paste Replacement

TPN-Q166 11-AH006NA

Written By: Simeon Brankov



INTRODUCTION

TPN-Q166

11-AH006NA

TOOLS:

Phillips #0 Screwdriver (1)
Isopropyl Alcohol (1)
Cotton Swabs (1)

PARTS:


Thermal Paste (1)

Step 1 — Opening the laptop




- Remove the rubber feet of the laptop, to reveal the screws.
- Remove the 7 screws holding the palmrest.

Step 2 — The insides

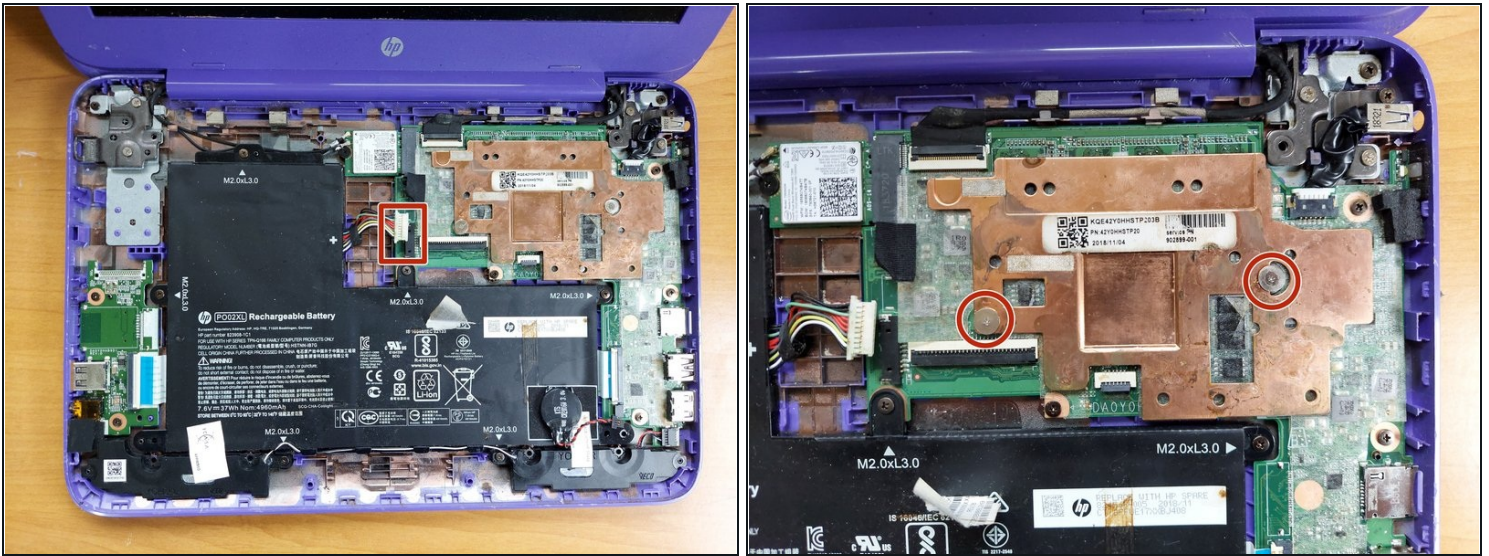

- Use a prying tool to separate the palmrest from the bottom plate.
- Disconnect the battery. And the connectors for the keyboard and touchpad, from the palmrest.
- Remove the 2 screws that hold the passive cooling plate.

Step 3 — Changing the thermal paste

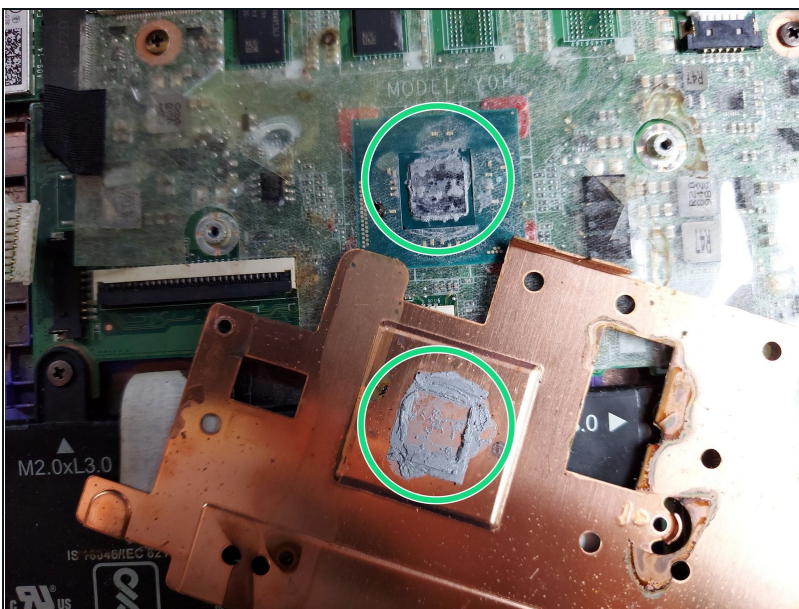

- Clean the old thermal paste both from the cooler and the CPU. It is best to use isopropyl alcohol and cotton buds or paper towel, but be careful not to go too hard on the CPU.
- Don't use too much thermal paste, just enough to cover some portion of the pad. If you have a spreader, use it. The thermal paste will apply evenly after you tighten the heatsink.

To reassemble your device, follow these instructions in reverse order.