


Pioneer Steel Wheels Folding Hinges Replacement

Removing the folding hinges at the base of the headband on the Pioneer Steel Wheels Headphone

Written By: Garrett Leung

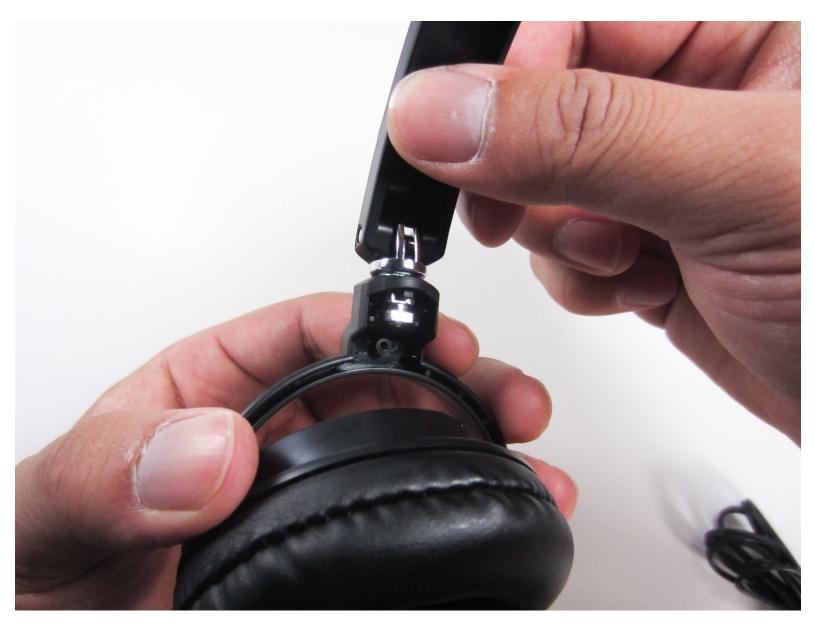

This document was generated on 2020-11-28 03:02:54 AM (MST).

INTRODUCTION

This guide will show you the steps to remove the folding hinges at the bast of the headband.



TOOLS:

• Phillips #0 Screwdriver (1)

Step 1 — Headband






Remove the two screws on the underside of the headband with the PH0 Phillips screw driver.

Step 2



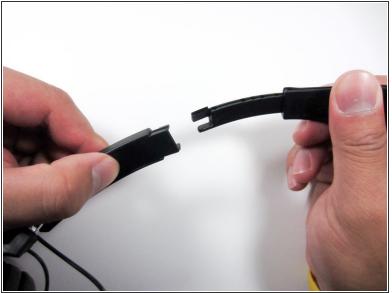

- With the headband fully extended, hold the base of the headband with one hand and with your other hand, hold the top of the headband.
- With force, pull upwards.








- Remove the rail-piece that is now sticking up by pulling it up and out of the headphone.
- Repeat on the opposite side and the headband will be released.
- During reassembly, make the sure the rail-pieces match their respective sides so the headband reinserts properly.

Step 4 — Folding Hinges





- While holding the base of the headband with one hand, hold the ear cup with the other hand.
- Pull them apart to reveal the screw.

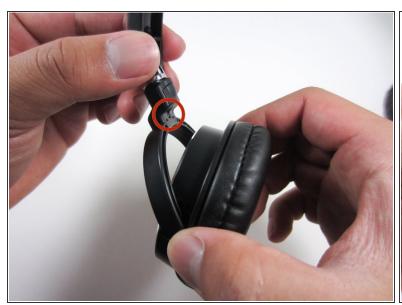




• While apart, remove the screw from the headphone.





- Loosen the plastic cover piece that protects the chrome folding hinge.
- Remove the plastic cover piece.
- During reassembly, make sure the plastic covering piece hooks onto the base of the chrome hinge before screwing it back in.

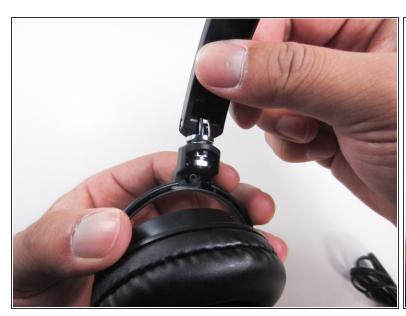



- Holding the ear cup with one hand, pull up on the base of the headband with the other hand to release the folding hinge.
- Repeat for the opposite side if necessary.

To reassemble your device, follow these instructions in reverse order.