




Les Paul Wireless Guitar Battery Pack Replacement

This guide will show how to replace the guitar's battery pack.

Written By: Chris

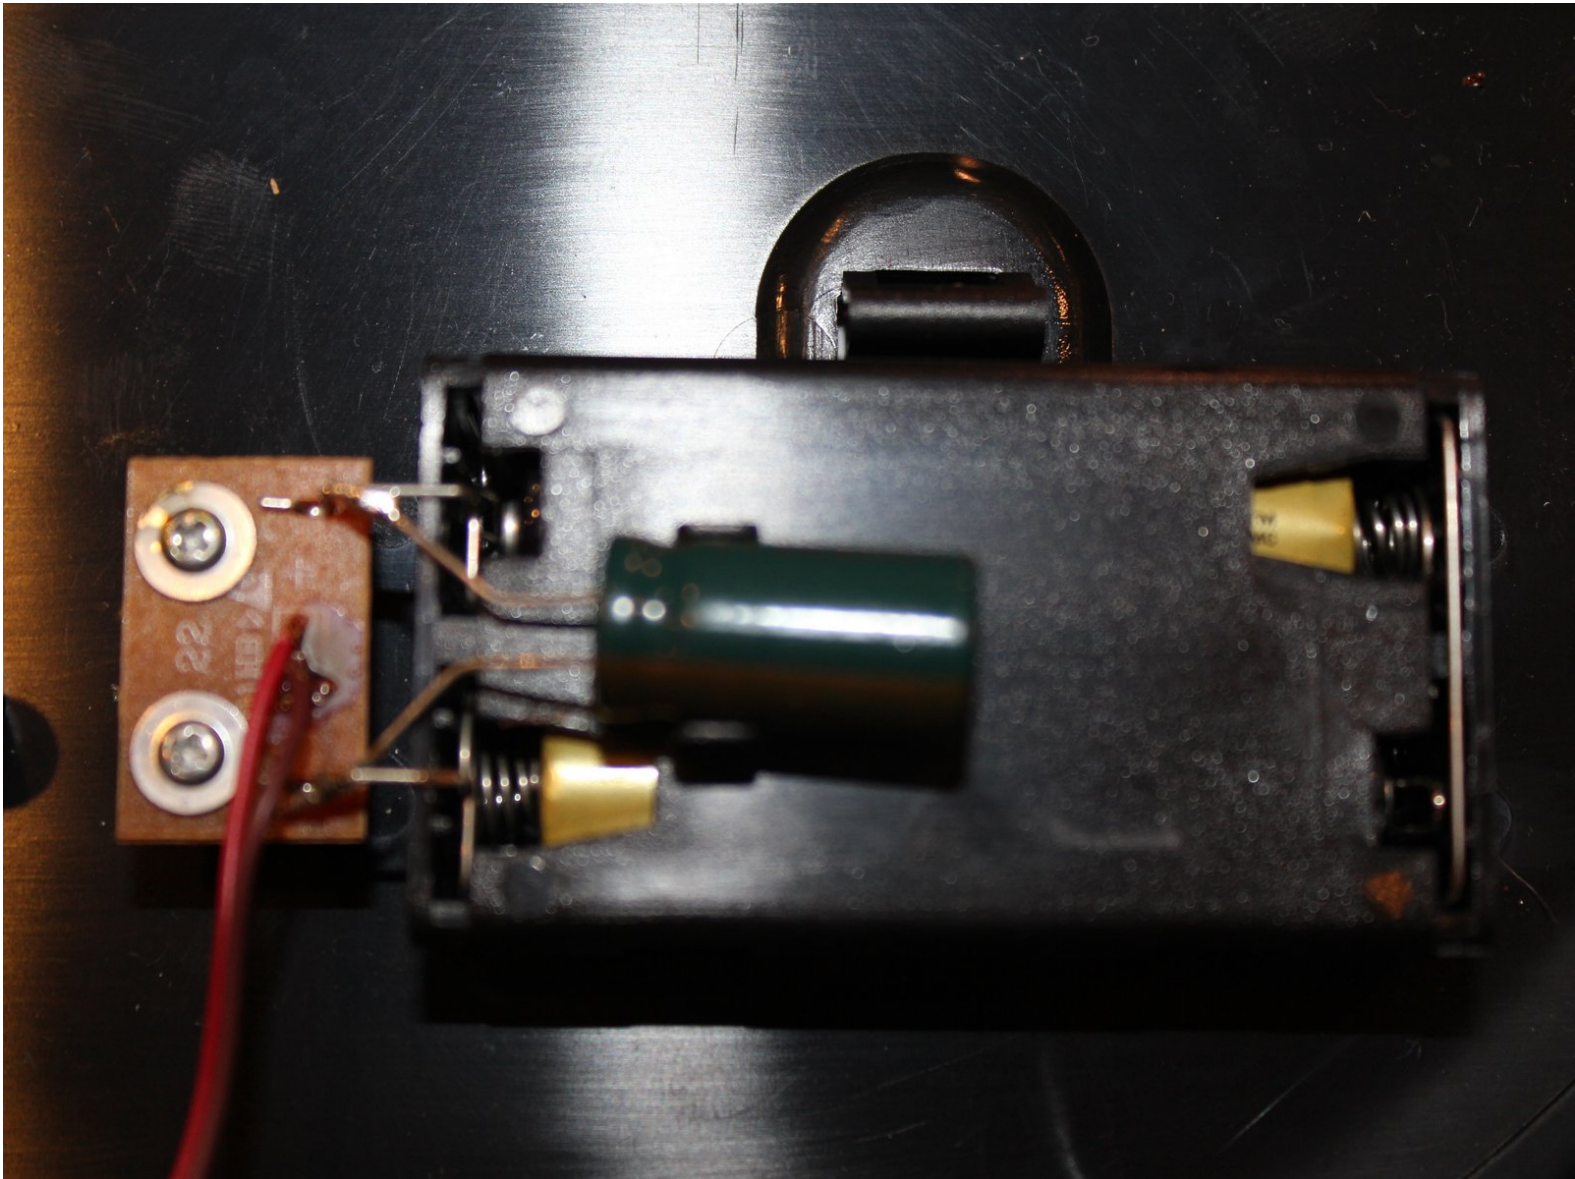

INTRODUCTION

This guide will show how to replace the guitar's battery pack. The battery pack supplies power to the controller and houses the two AA batteries required for the controller.



TOOLS:

- [TR10 Torx Security Screwdriver](#) (1)
 - [Soldering Iron](#) (1)
-

Step 1 — Les Paul Wireless Guitar Body Teardown




⚠ Remove batteries

Step 2




- Remove void warranty sticker
- The sticker is covering a torx screw

Step 3

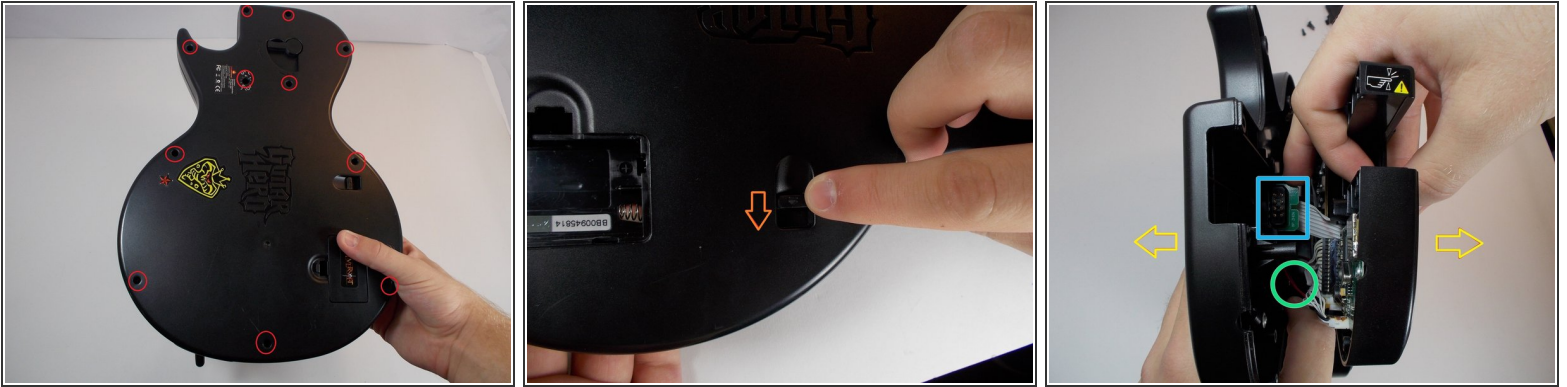


- Unscrew the 11 screws securing the back of the body using a T10 Torx screwdriver. Each screw is 1 cm long.
- Push level, this will detach the back of the guitar from the front.
- Carefully remove the back of the body
 - The battery pack cord is attached to both sides of the guitar, be careful not to tear it apart.
 - The neck connector may be stuck to the back so be sure to detach it before fully pulling

Step 4 — Battery Pack

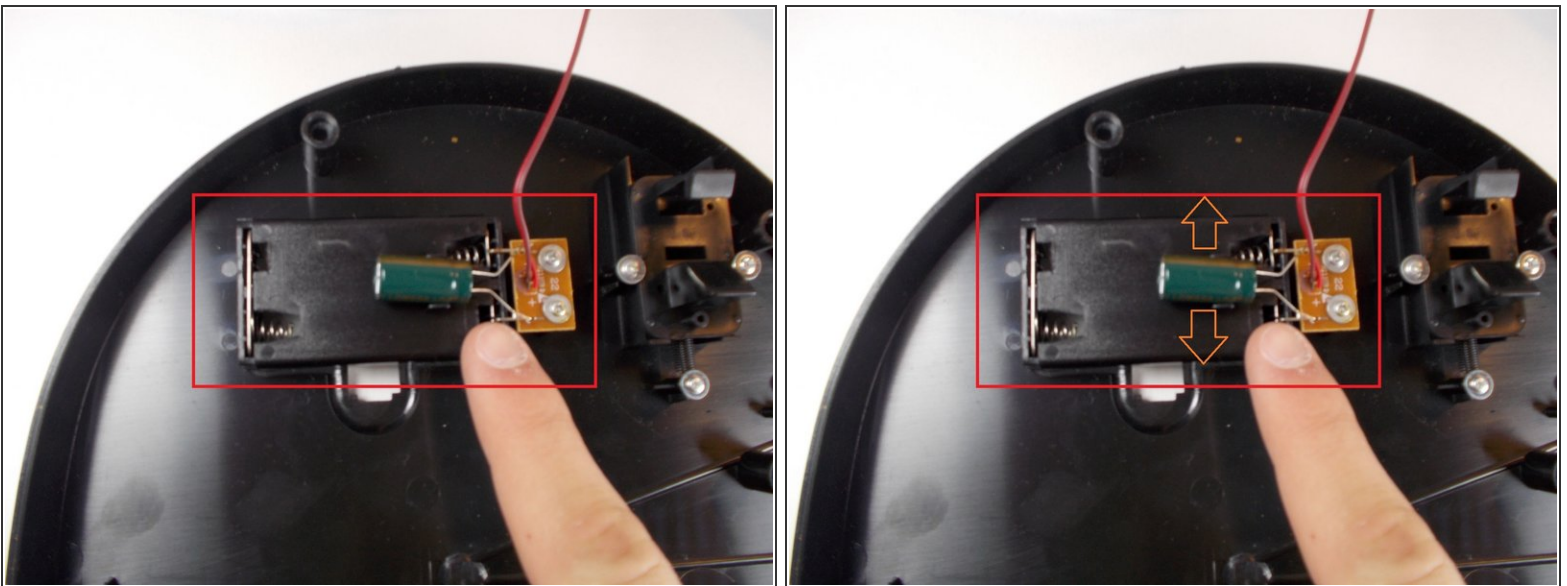

- Gently move the capacitor around until it breaks off

Step 5

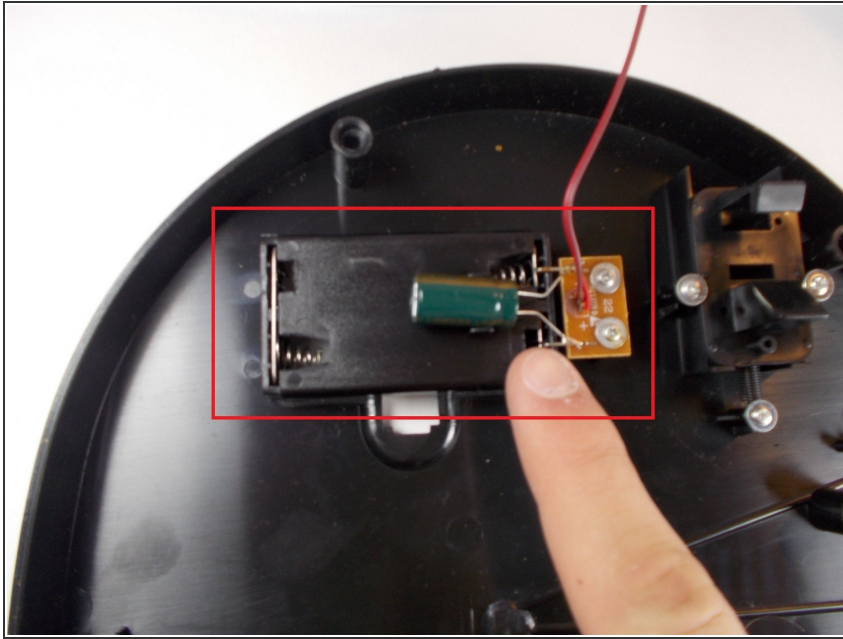

- Solder on the new capacitor.

To reassemble your device, follow these instructions in reverse order.