



Timbuk2 Pannier Bottom Stay Bracket Replacement

How to replace a broken Bottom Stay Bracket on a Timbuk2 Pannier.

Written By: Emilee




**TOOLS:**

- [Screwdriver](#) (1)
- [Smart Wrench](#) (1)

**PARTS:**


- [Pannier Bottom Stay Bracket](#) (1)
Contact warranty@timbuk2.com for this part.

Step 1 — Bottom Stay Bracket

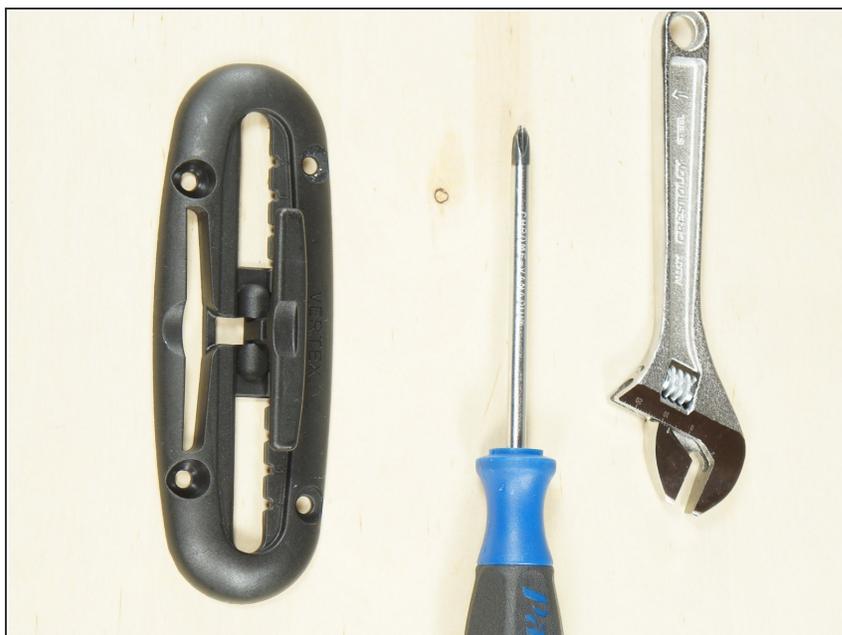

- Tools needed:
 - New Pannier Bottom Stay Bracket.
 - Standard Screwdriver
 - Wrench

Step 2

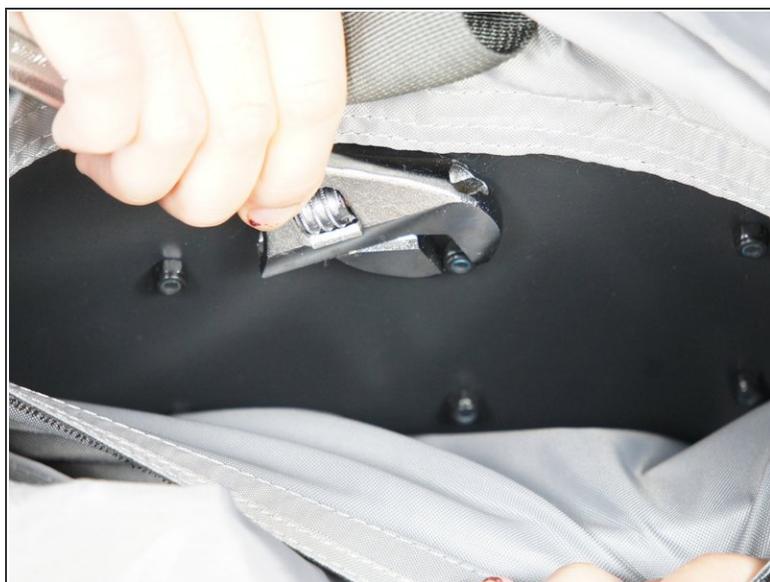

- To remove bottom stay bracket, first unscrew all 4 screws. To do so, undo velcro flap located at the top of the laptop sleeve. With the wrench, hold nut in place in the back of the pannier, while using the screwdriver to unscrew the screw in the front bracket.

Step 3



- Remove old clip. Take new bottom bracket and remove all screws and washers from bracket (Make sure to put all screws, washers, and nuts in a safe place (Ziploc bag) as to not lose any!)
- Follow step 2 in reverse order to attach new clip bracket. (Hold nut with wrench while screwing back in place. Also make sure the washers are between the screws and the body of the bag.)

Step 4



- All Done!