



Archived

Sony Vaio VGN-FS640 Backplate Replacement

This guide will teach the user how to remove...

Written By: shamaz



INTRODUCTION

This guide will teach the user how to remove the Sony Vaio VGN-FS640 backplate, which is necessary to access any of the internal components of the laptop.

TOOLS:


Phillips #0 Screwdriver (1)

Step 1 — Backplate



- Turn off the laptop and disconnect any charging cables.
- Flip the laptop over so that the Service Tag is shown at the top left corner.

Step 2

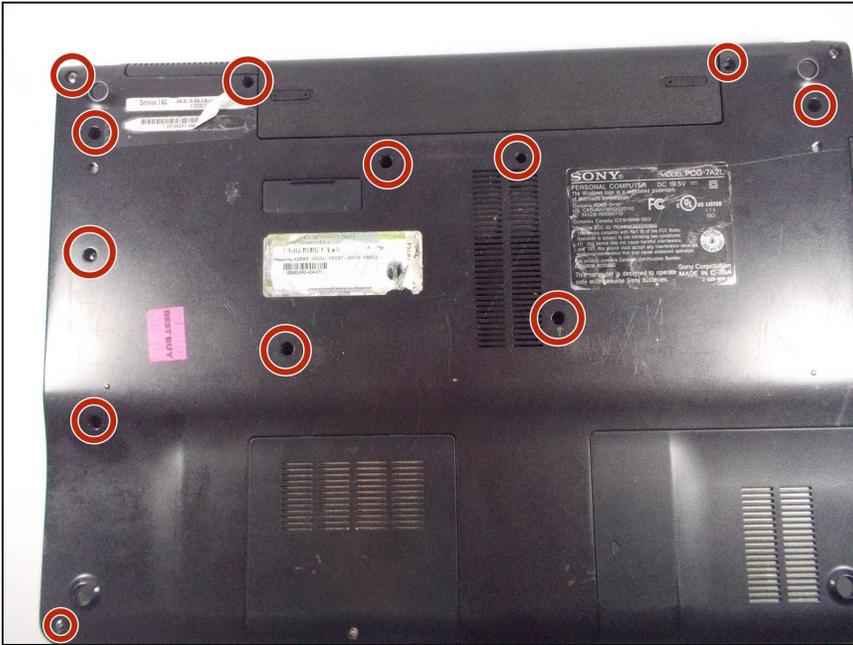

- Remove the highlighted screws from the back of the laptop with a Phillips #0 Screwdriver.

Step 3




- Remove the highlighted screws from the panels in the bottom right-hand corner of the laptop using the Phillips #0 Screwdriver.

Step 4



- Remove the two panels in the bottom right-hand corner by sliding in the direction of the arrows imprinted on the panels.

Step 5

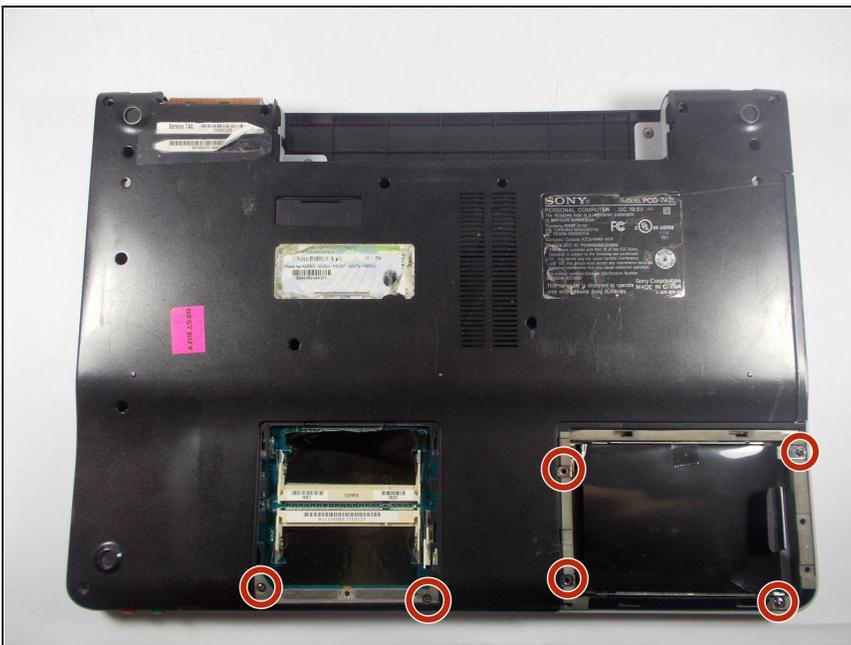

- Remove the highlighted screws underneath the removed panels using the Phillips #0 Screwdriver.

Step 6



- Carefully remove the hard drive from the panel in the bottom right-hand corner of the laptop.

Step 7




- Locate the battery, located on the top side of the laptop to the right of the Service Tag .
- Remove the battery by pressing inwards on the tabs on either side of the battery.

Step 8



- Remove cover in the top left side of the laptop next to the battery by pulling it outwards.

Step 9

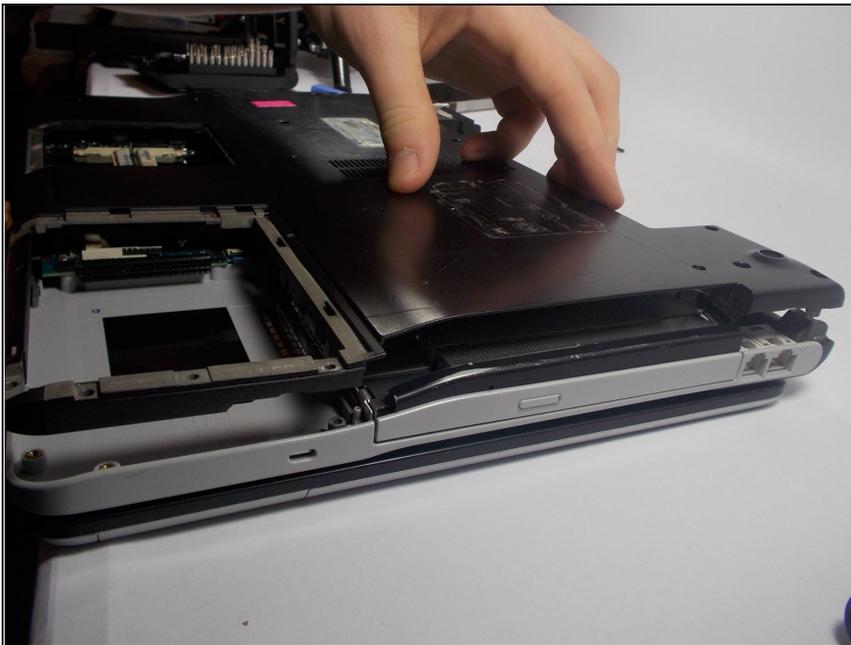

- Remove the backplate of the laptop by pulling it away from the laptop.

To reassemble your device, follow these instructions in reverse order.

