


Nokia 6102i Inside LCD Display Replacement

Written By: Alex Graebe

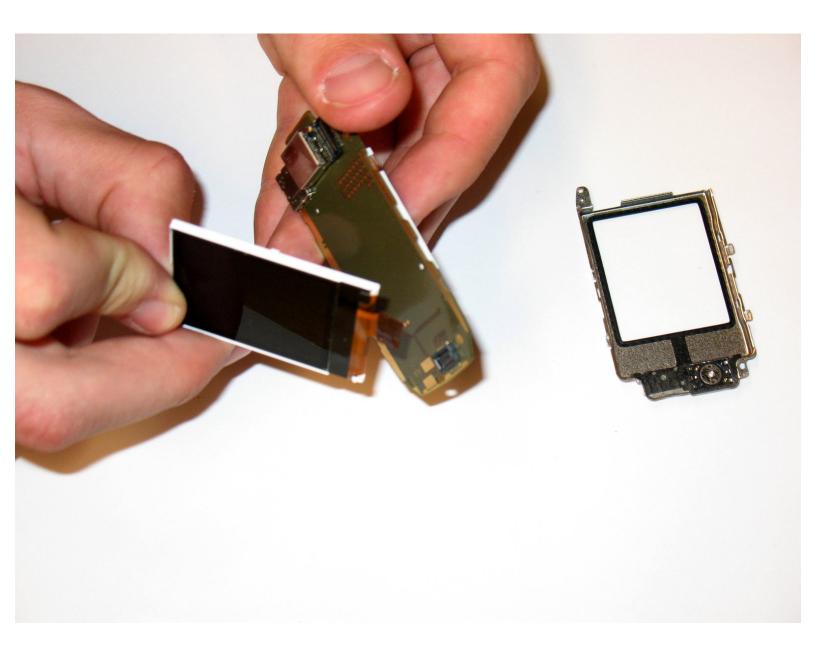

INTRODUCTION

Use this guide to remove and repair the inside display screen.



TOOLS:

- iFixit Opening Tools (1)
- T6 Torx Screwdriver (1)

Step 1 — Remove Inside Display Screen








This step does not require much force.

 Use the plastic opening tool to pry between the seam of the black phone cover which is located at the base of the screen.


Step 2 — Remove Phone Case Screws.

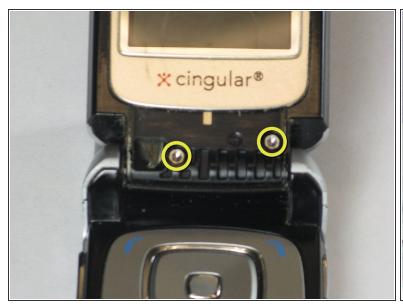



- Have a container ready to keep track of small parts.
- Use the t6 screwdriver to remove the two visible screws that are immediately below the screen.

Step 3 — Remove silver and black phone case

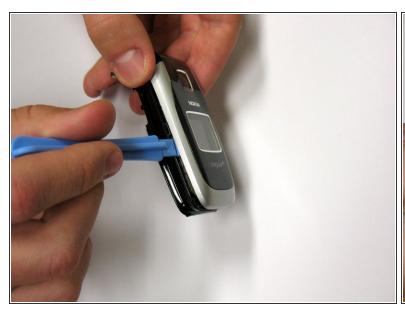



 Keep the phone closed, and slide the lpod tool between the the silver and black phone case. Use the tool to slide all the way around the case to release the catches.


Step 4 — Unplug and Remove Circuit Board







Pull out the circuit board, which will remove it completely from the case

Step 5 — Remove Display Screen

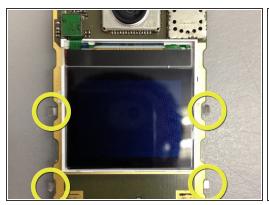


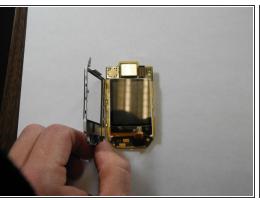


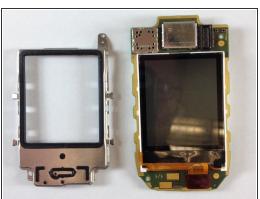

 If the metal case is not already free, simultaneously release the metal tabs on both sides of the metal casing to remove the display screen.

Step 6 — Disconnect Interior Display Screen from circuit board.

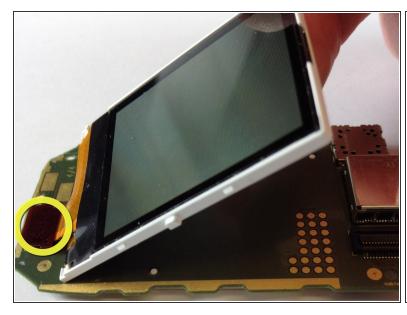

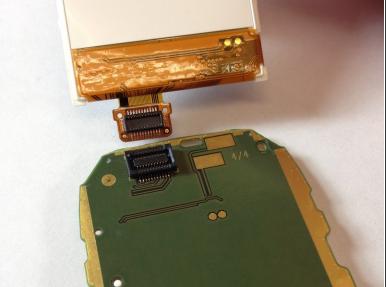

- A Be gentle when pulling off the display screen. If pulled too hard, the orange connecting ribbon will rip.
- Lift off the display screen and disconnect it from the circuit board.