




iHome iH5 Speakers Replacement

Use this repair guide to replace the speakers on a iHome iH5.

Written By: Maggie Hill

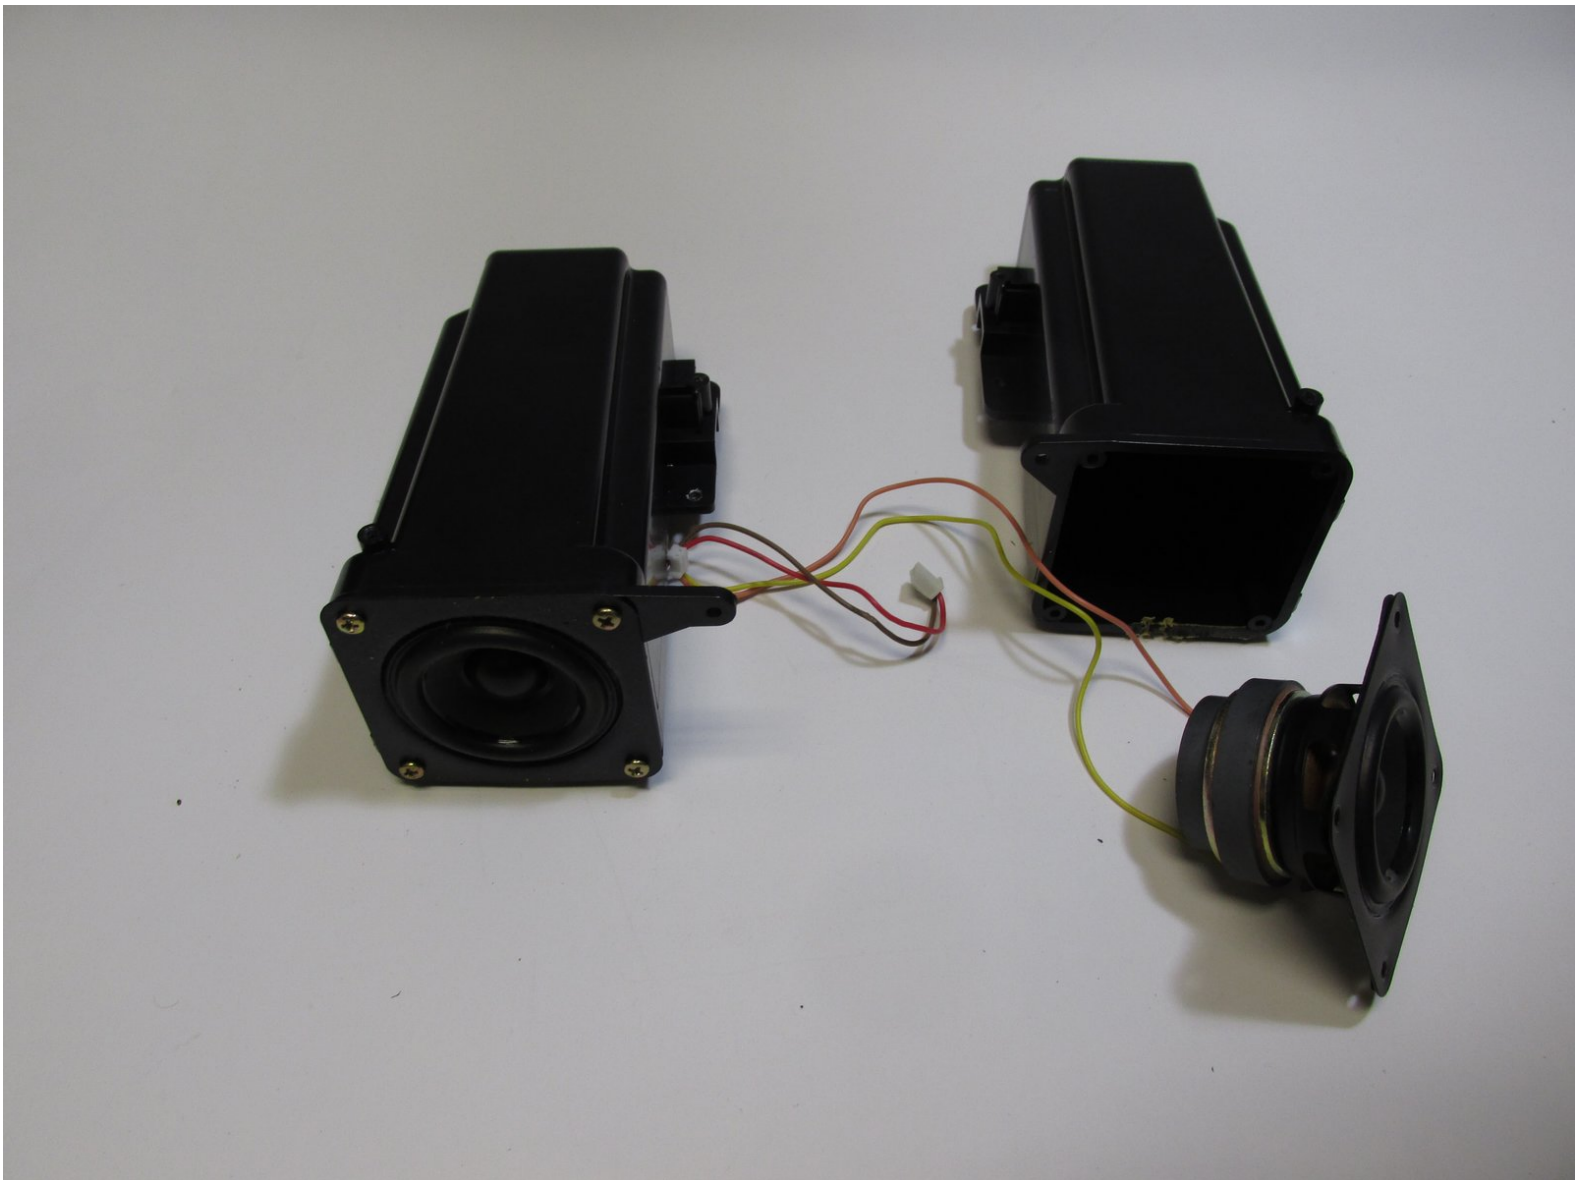

INTRODUCTION


This is a replacement guide for the speaker on an iHome iH5.



TOOLS:


- [Phillips #2 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Speakers

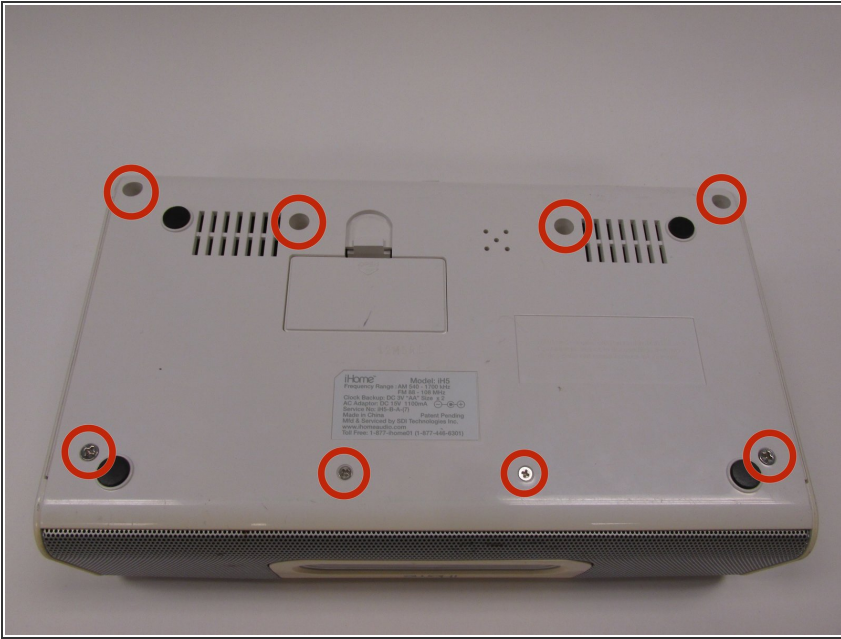


- Unscrew the bottom of the iHome at the marked points with a #2 phillips

Step 2

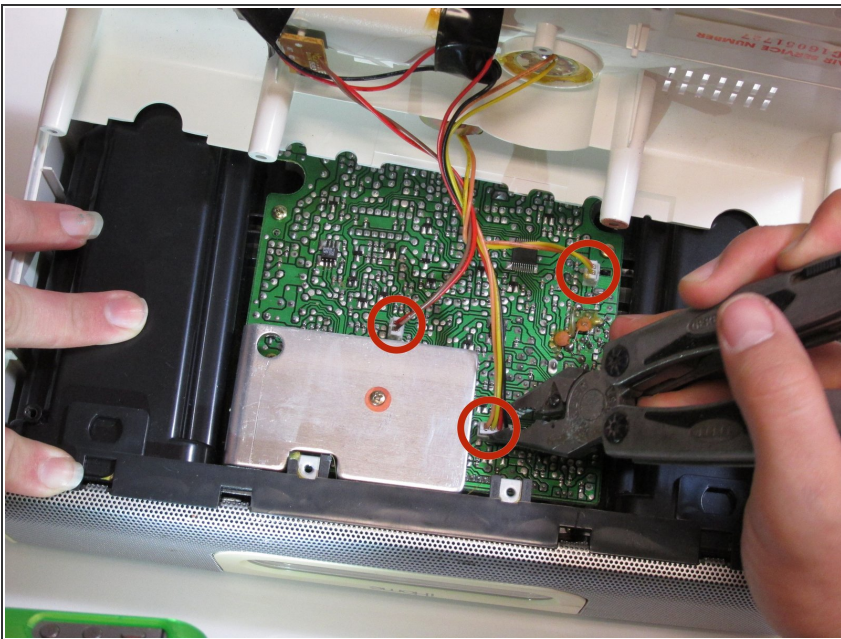



- Remove wires from the logic board (tweezers or pliers are helpful)

Step 3

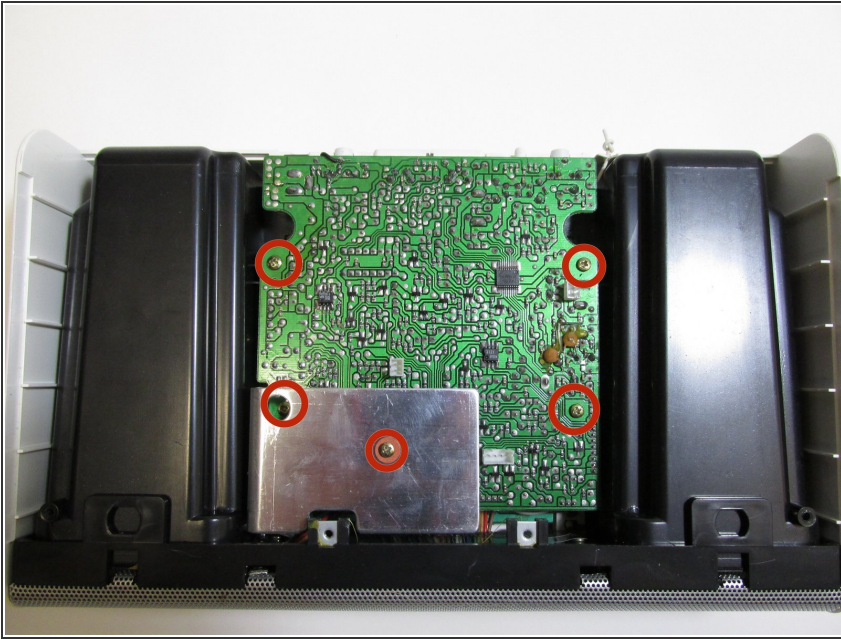

- Unscrew at the marked points with #2 Phillips screwdriver.

Step 4

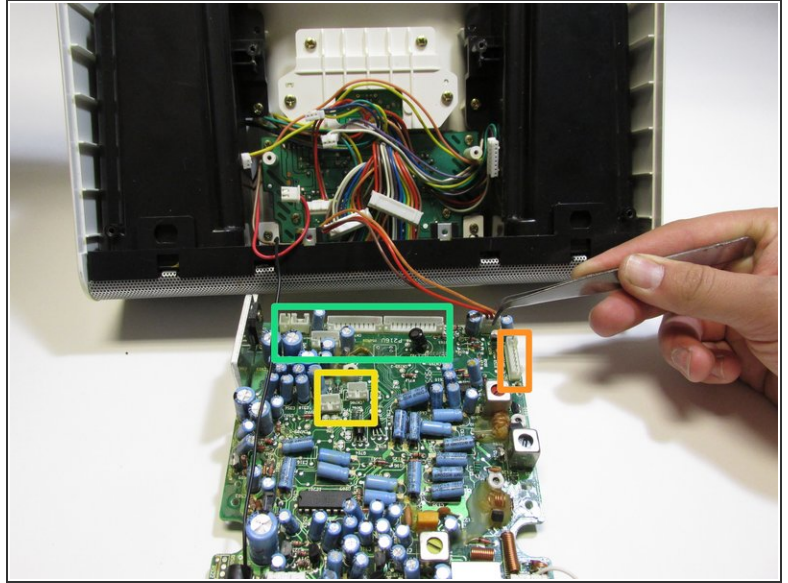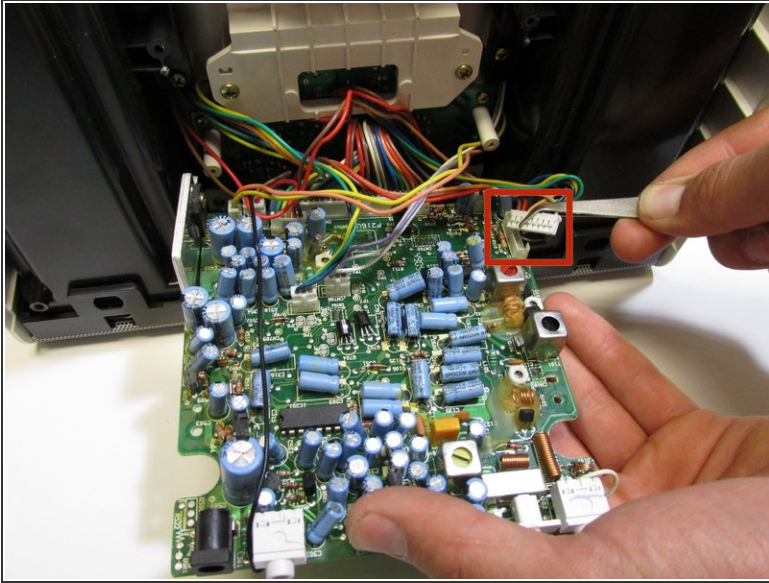


- Flip the board over.

⚠ There are capacitors all over the back side of the board. Be careful not to touch these capacitors (blue cylinders) as they can discharge—giving you a shock.


- Unplug the eight wires for the board with tweezers. If they're tight pliers can be used instead.
 - There is one in the orange box.
 - There are two in the yellow box.
 - There are five in the green box.

Step 5

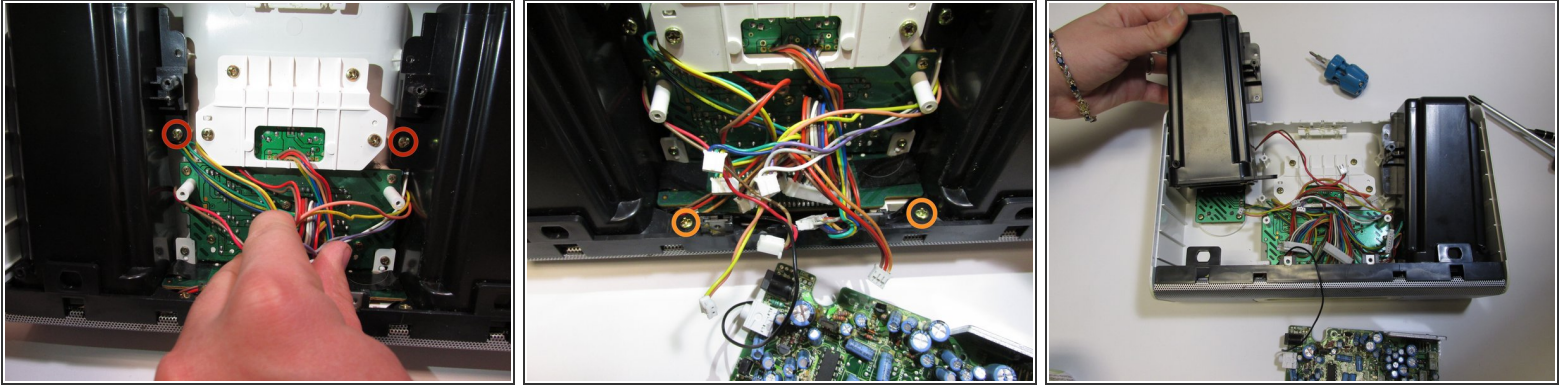

- Remove the two screws with a #2 Phillips screwdriver.
- Flip the device on its front then remove the two screws with a #2 Phillips screwdriver.
- Grab the speaker and pull it up until it looks like the speaker on the right. Then pull it straight back like shown with the speaker on the left.

Step 6

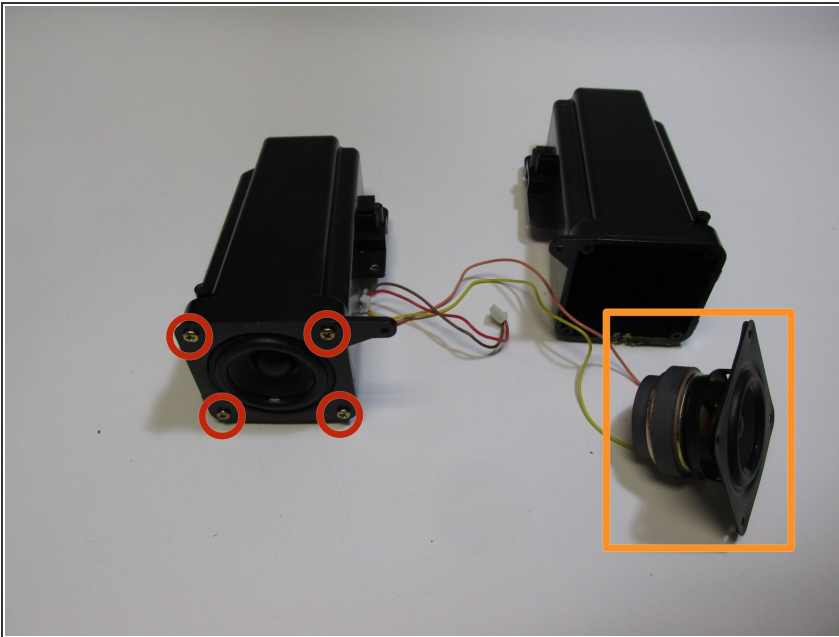

- Remove the four screws with a #2 Phillips screwdriver.
- Replace the broken speaker.

To reassemble your device, follow these instructions in reverse order.