


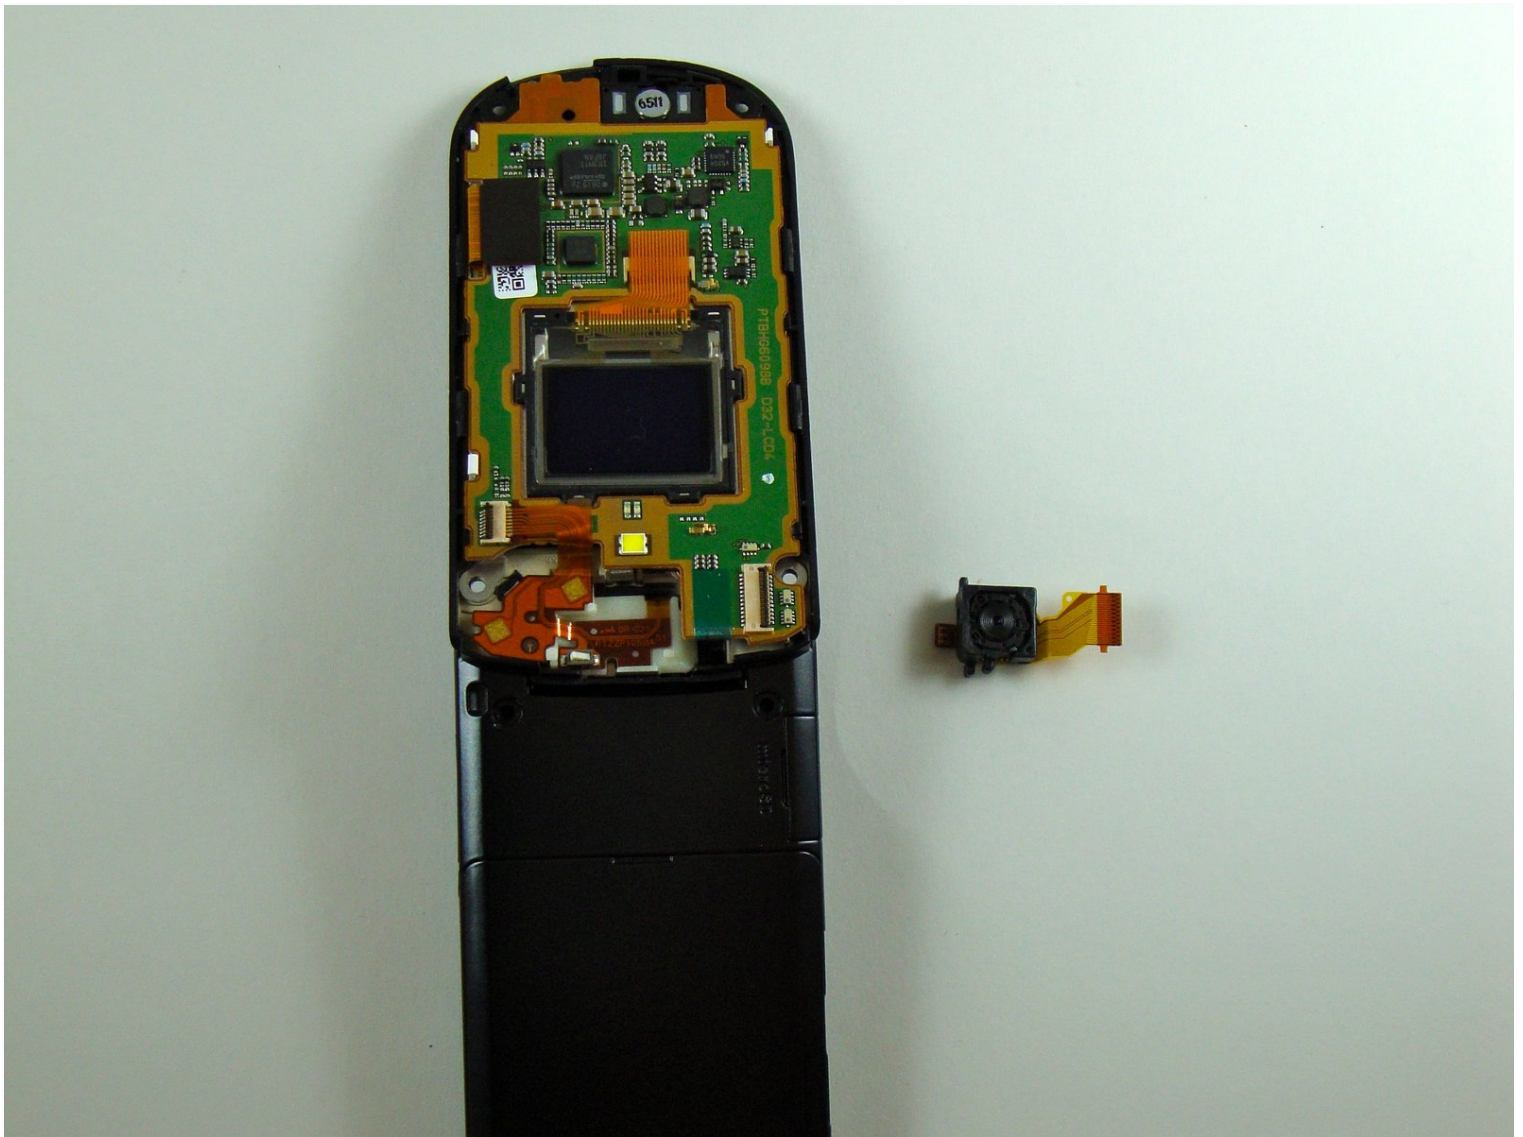

# Disassembling KDDI Kyocera A5521K Camera

These instructions will demonstrate how to...

Written By: Dominic Grisafe



# INTRODUCTION

These instructions will demonstrate how to remove the camera from the KDDI Kyocera A5521K.

## TOOLS:



Tweezers (1)

iFixit Opening Tool (1)

Tri-point Y0 Screwdriver (1)

Push Pin (1)

## Step 1 — Disassembling KDDI Kyocera A5521K Faceplate

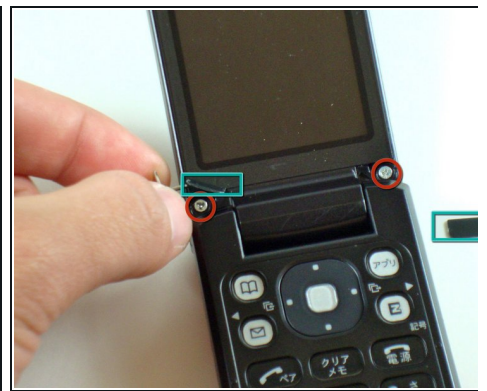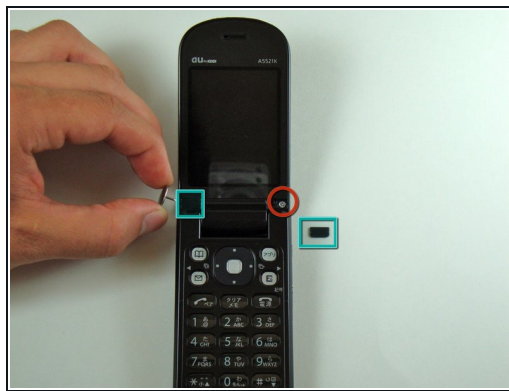


- Pry, with a metal probe, the black covers that are located by the pivoting joints of the phone.
- Beneath the covers are screws.

## Step 2



- Remove the screws using a Y0 screwdriver.

## Step 3

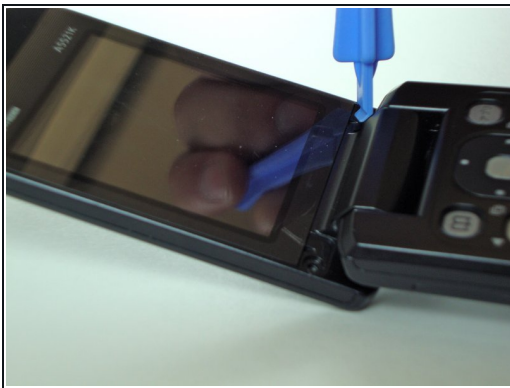

- Use the iPod pry tool to remove the outer screen.
  - Two screws are now visible.

⚠ Be careful not to crack the screen upon removal. It is adhered strongly to the phone.




## Step 4




- Use the Y0 screwdriver to remove the screws.

## Step 5

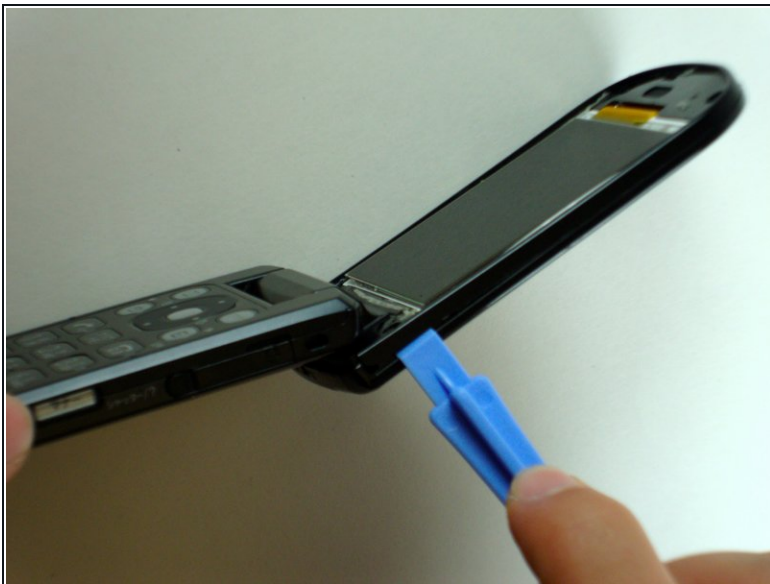



- Use the iPod pry tool to loosen the faceplate from the phone.
  - ① Slide the pry tool along the entire crease of the faceplate to completely detach it.

## Step 6

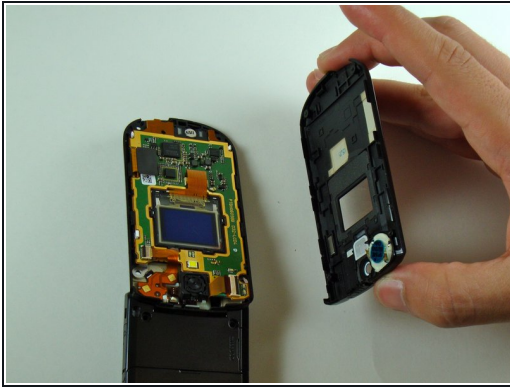



- Separate the faceplate from the phone.

## Step 7 — Camera

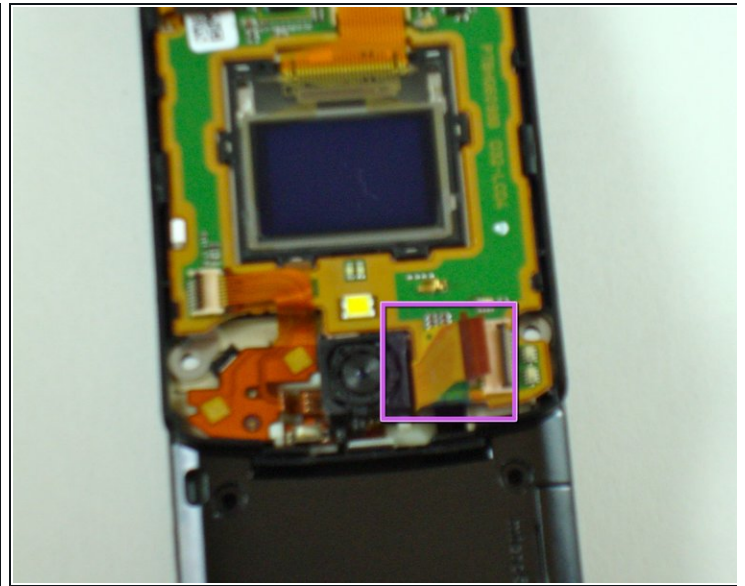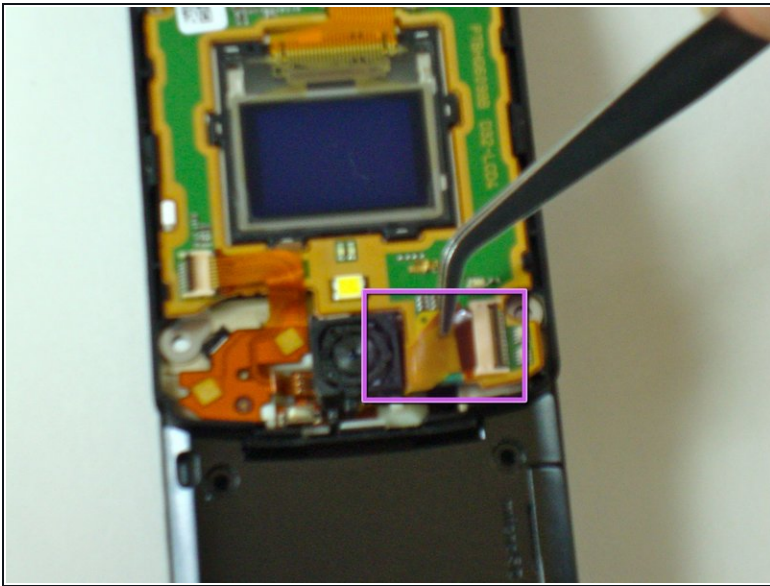

- Firmly grab the flexible circuit with tweezers to detach (or use your fingers if you can manage a firm grip).

## Step 8

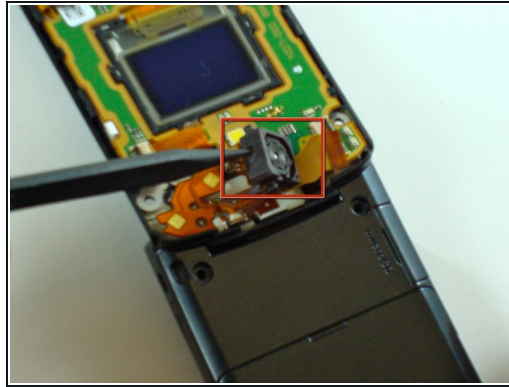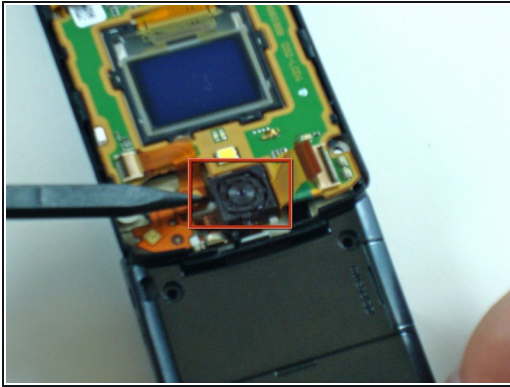

- Carefully pry up the camera unit with a spudger.
- ⚠ Be careful not to damage the camera unit.
- The camera should now be separated from the phone.

---

To reassemble your device, follow these instructions in reverse order.