

Samsung Galaxy S5 microSD Card Replacement

This guide will show you how to replace the microSD card in a Samsung Galaxy S5.

Written By: Justin Uchimura



INTRODUCTION

For the official iFixit guide to repair your Galaxy S5 nicroSD card, click here. The guide you are currently viewing is duplicate content, archived here for historical purposes only.

TOOLS:

۶


• iFixit Opening Tools (1)

Step 1 — Battery



- Remove the rear case by using moderate force to pry the divot on the left of the rear facing camera with a plastic opening tool or your fingernail.
- Continue to lift the case, working your way around the perimeter until the entire rear cover is removed.

Step 2

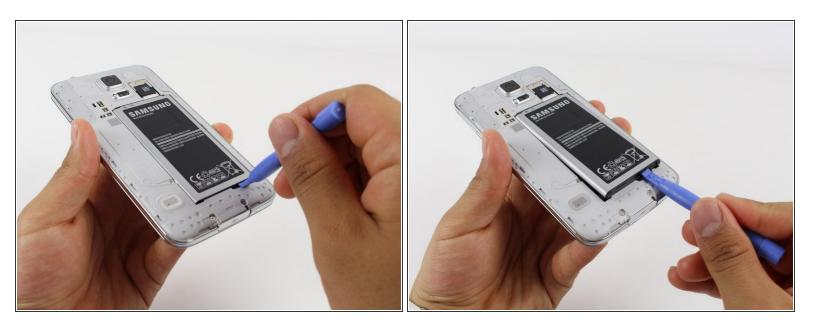

- Lift the battery upward with your finger or plastic opening tool by pushing on the notch located on the bottom of the battery.
- Remove the battery from the phone.

Step 3 — microSD Card



- Gently slide out the SD card using your fingernail or a plastic opening tool.
- For reassembly, gently slide in the microSD card until it stops.

To reassemble your device, follow these instructions in reverse order.