




# LG VX8550 Speaker Replacement

Written By: Nathan Jones

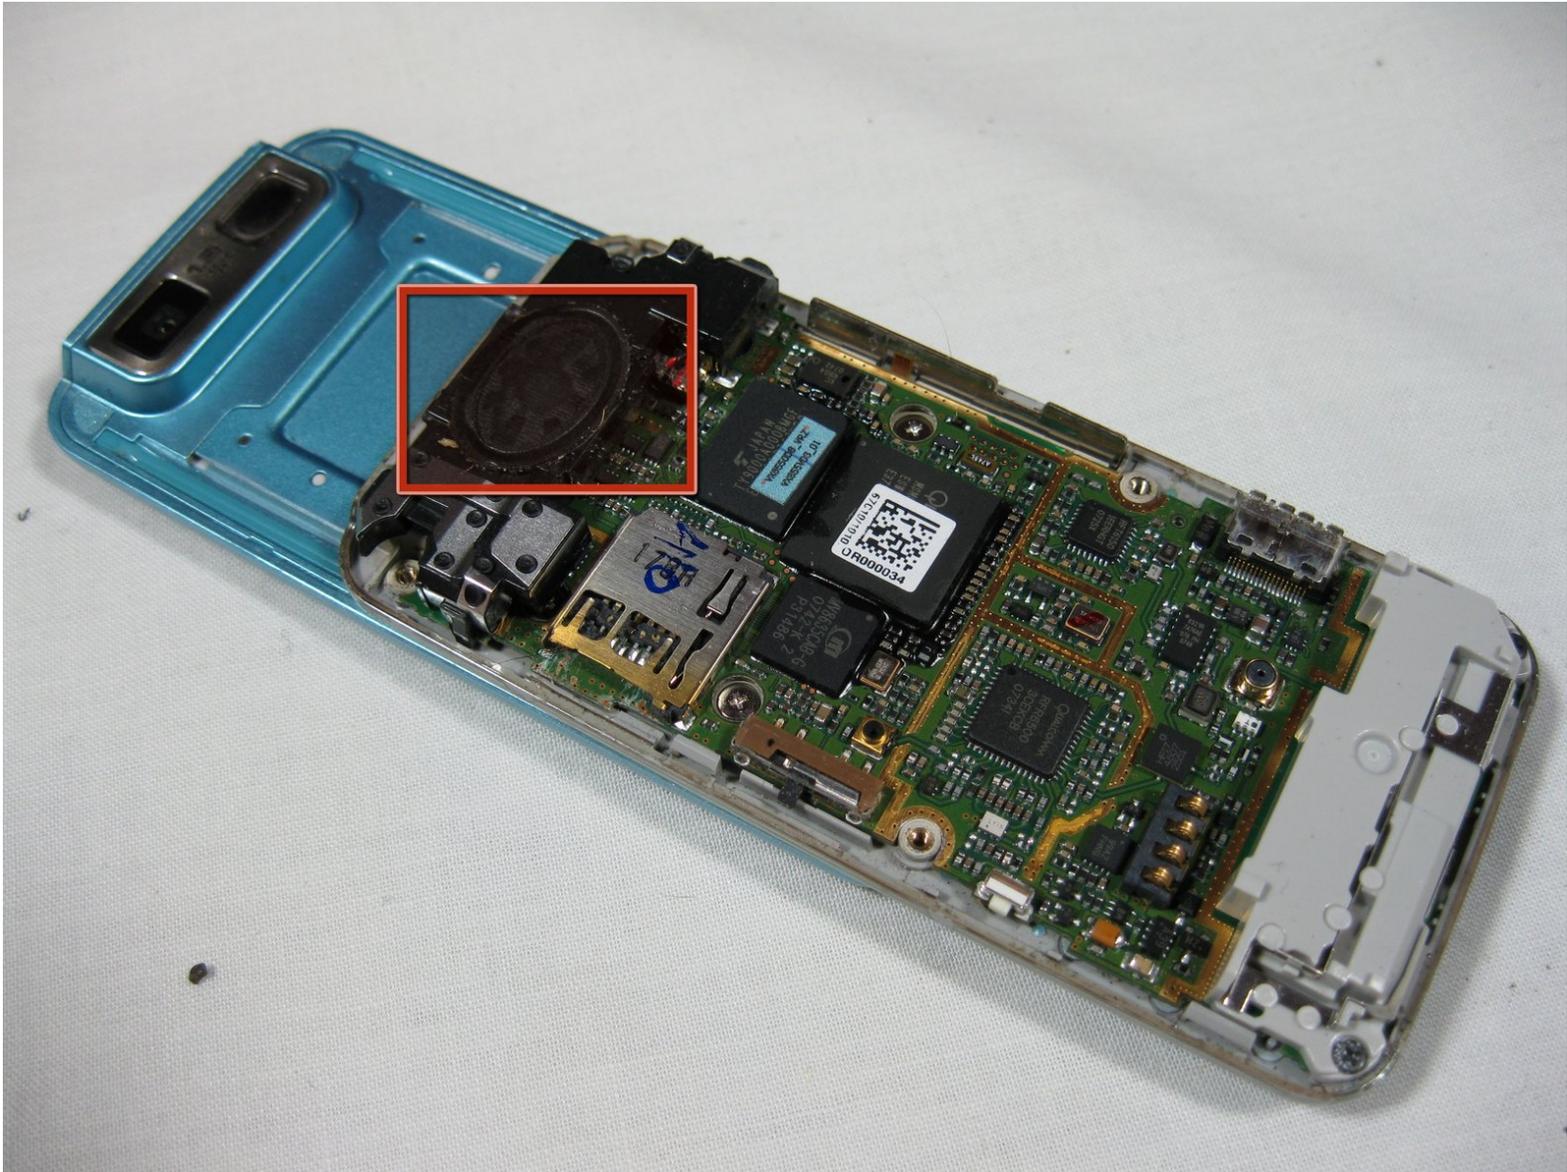

---

## INTRODUCTION

Steps to replace the LG VX8550 speaker

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [Push Pin](#) (1)
-

## Step 1 — Battery




- Slide the battery release up.

## Step 2



- Remove the battery by lifting away from the case.

### Step 3 — Case

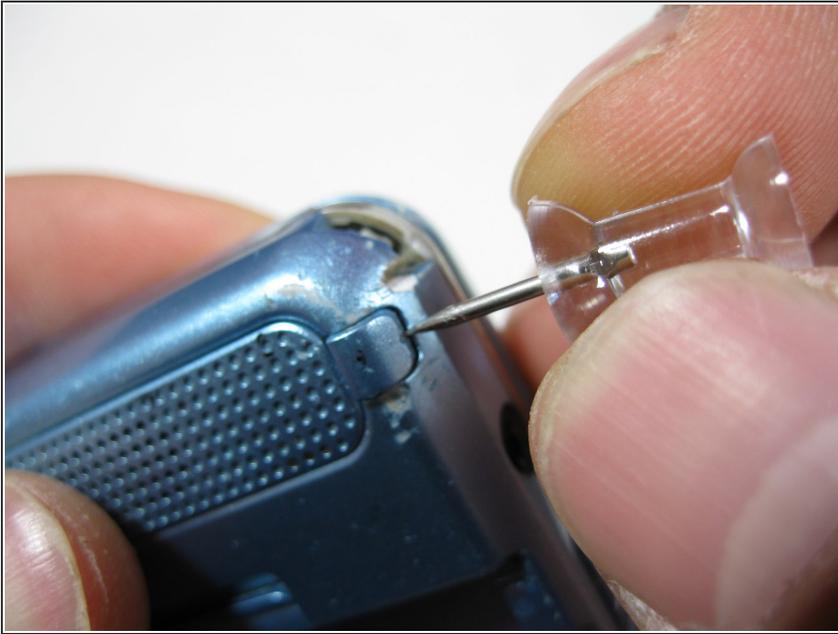


- Remove the 2 screw covers next to the rear speaker with a Push Pin.

### Step 4



- Remove the 4 cover screws with a Philips #00 screwdriver.

## Step 5

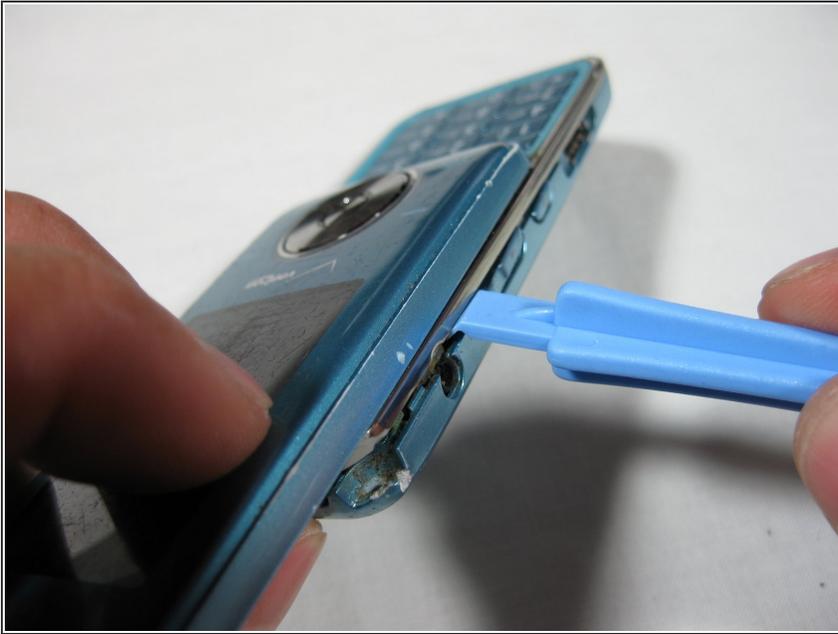

- Use the iPod opening tool to pry off the back casing.

## Step 6




- Continue sliding the iPod opening tool around the seam of the casing to separate the front and back casings.

## Step 7



- Separate the casing halves.
- ⚠ Be sure to keep track of the side buttons as they fall out.

## Step 8 — Speaker

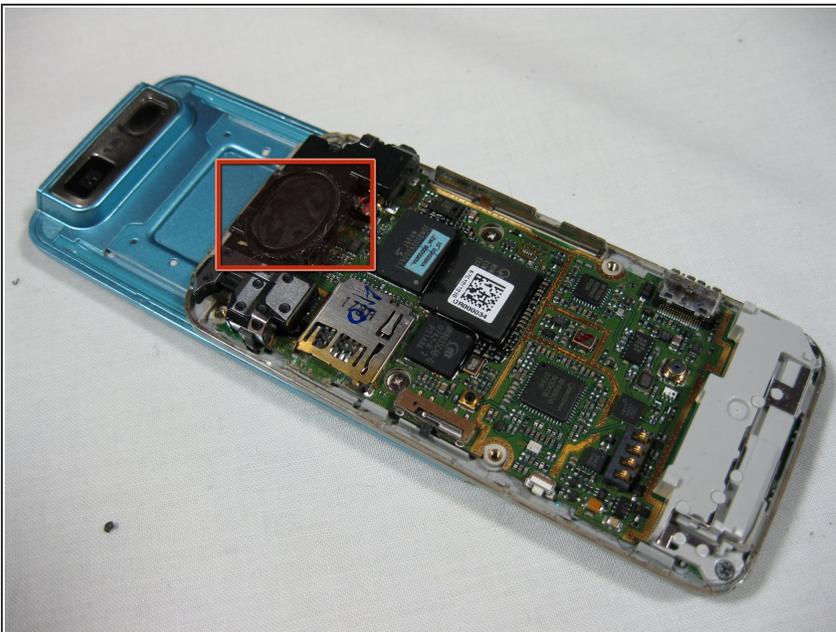


- With the back casing removed the speaker is visible.

## Step 9




- Lift up under top end of circuit board with the Spudger to access retaining clip.

## Step 10

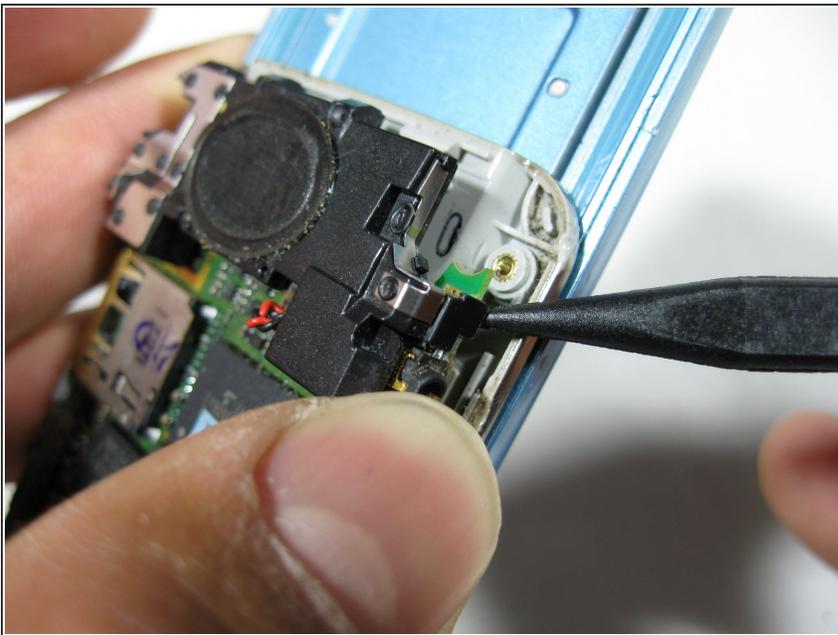


- Carefully pry up on retaining clip with the Spudger to release the speaker.

## Step 11

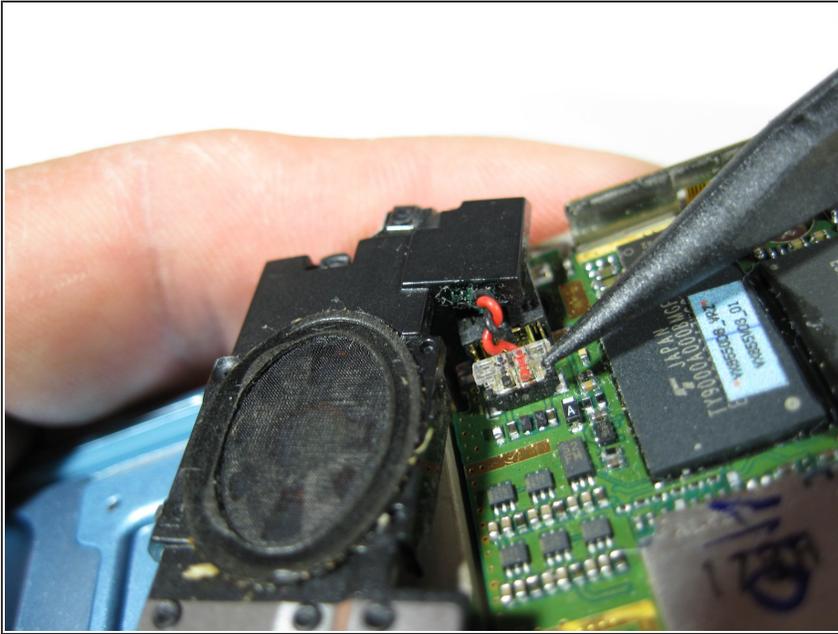

- ⚠ Carefully unplug speaker connector from circuit board with your fingers.

## Step 12

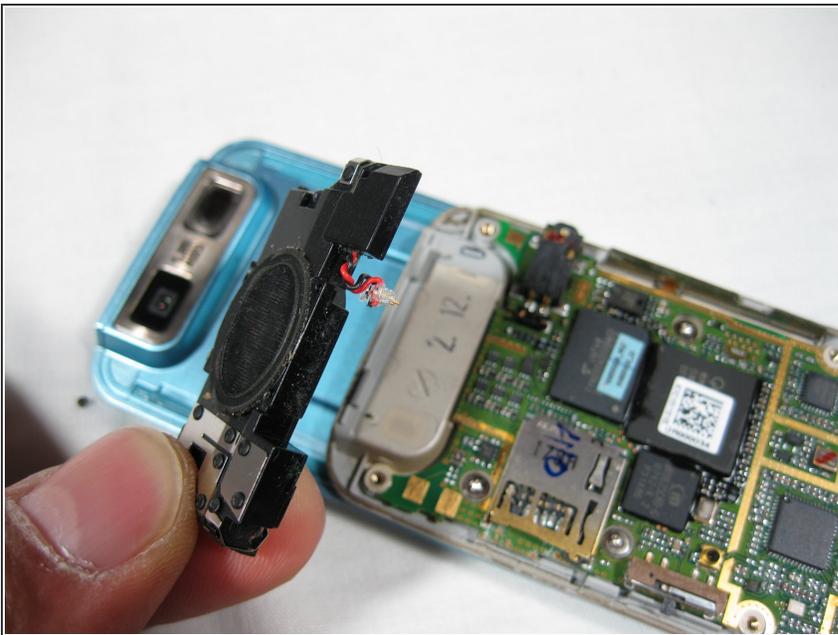

- Remove the speaker by lifting up.

To reassemble your device, follow these instructions in reverse order.