



LG VX7000 External LCD Display Replacement

Sat on your phone and cracked the outer screen?...

Written By: Nichole Shaw



INTRODUCTION

Sat on your phone and cracked the outer screen? Then here is the guide on how to replace it.

NOTE: Replacing the outer screen requires replacing the entire outer casing.

TOOLS:

[Phillips #00 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)

Step 1 — External LCD Display




- Using a pair of [tweezers](#), remove the rubber screw covers located at each corner of the main screen.

ⓘ NOTE: There will be a total of four rubber screw covers removed.

- Turn the screwdriver counterclockwise to unscrew the screws located under the recently removed rubber plugs.

ⓘ NOTE: The screws can not be completely removed from their holes.

Step 2

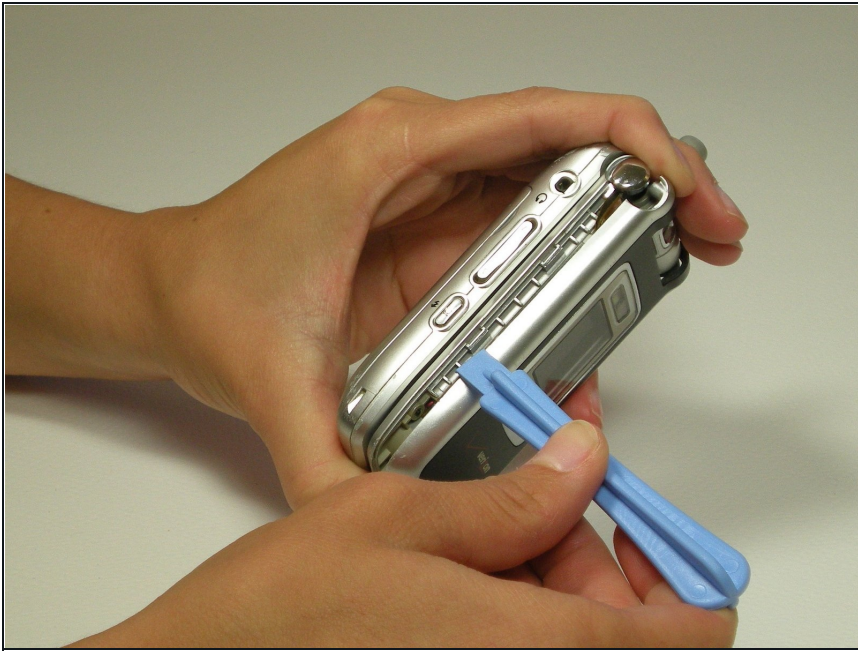

- Using the "iPod Opening Tool", separate the faceplate from the front of the phone.
- ⓘ NOTE: There will be a significant amount of resistance when separating the faceplate from the phone.
- Align the new faceplate in the place of the previously cracked faceplate, and press the new faceplate onto the phone.

To reassemble your device, follow these instructions in reverse order.