




# iMac Intel 21.5" EMC 2805 Fan Replacement

Prereq for removing fan after the hard drive brackets.

Written By: Walter Galan

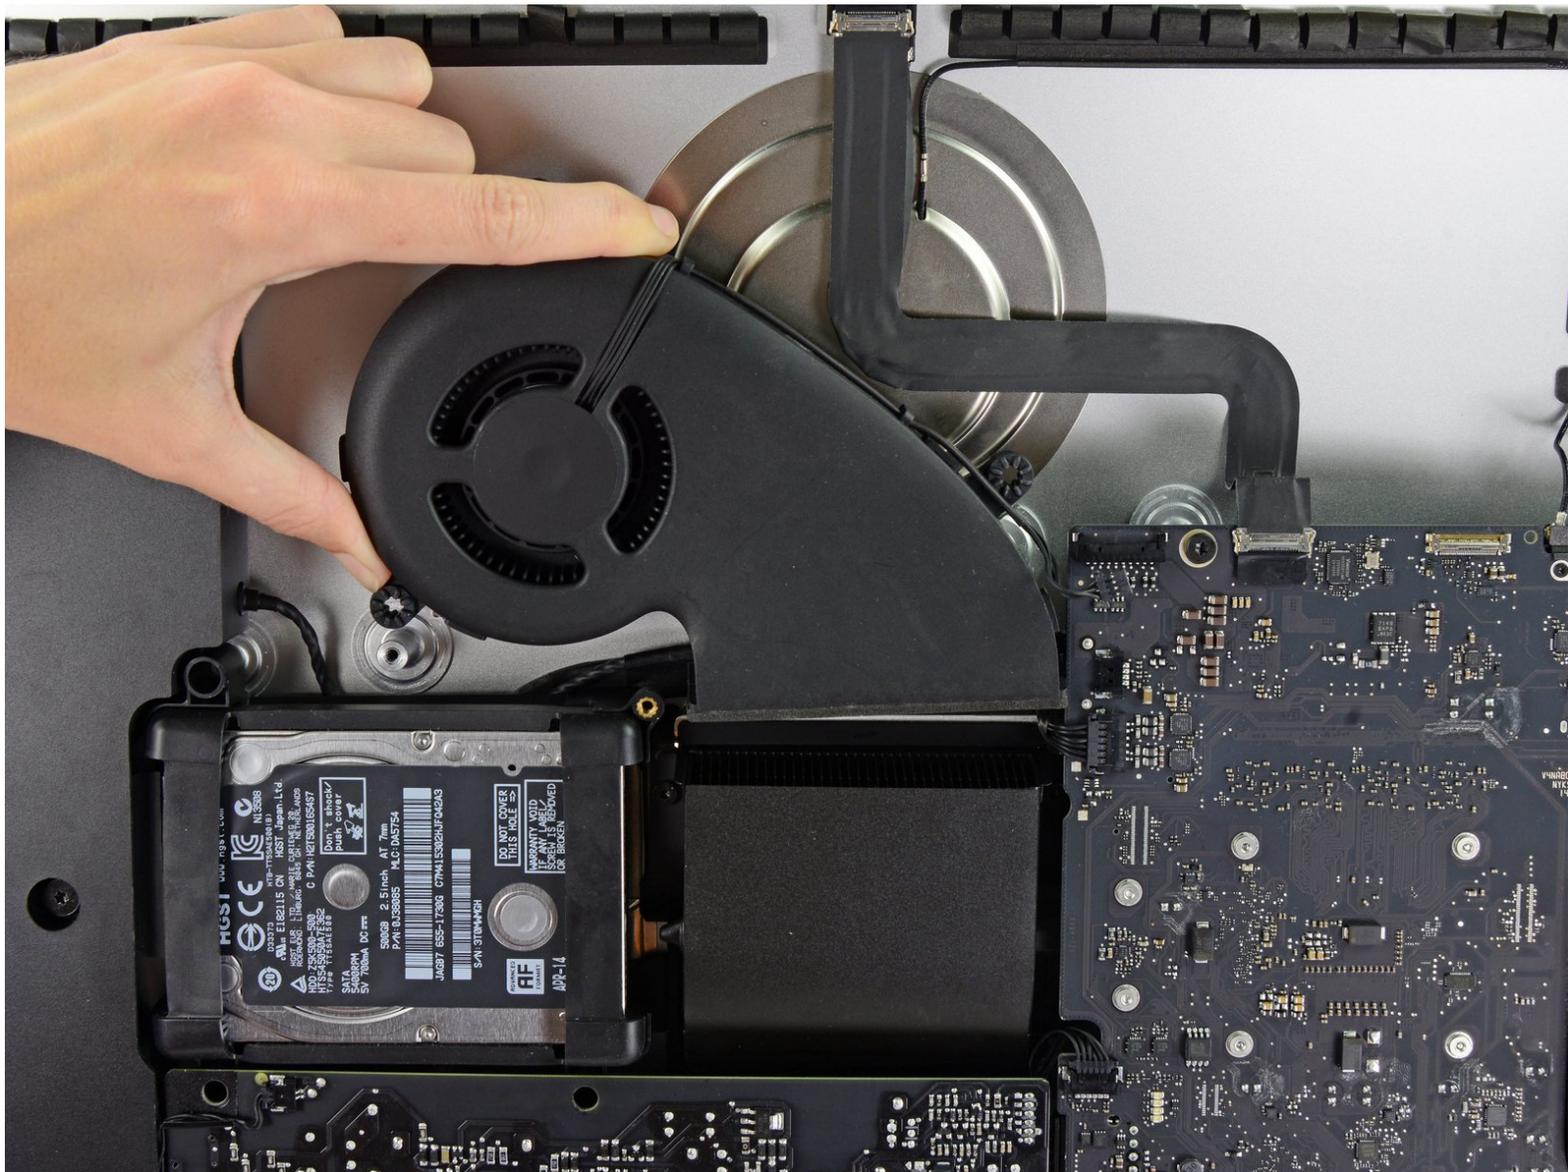

---

## INTRODUCTION


Prereq for removing fan after the hard drive brackets.

---

### TOOLS:

- [Spudger](#) (1)
  - [T10 Torx Screwdriver](#) (1)
-

## Step 1 — Fan

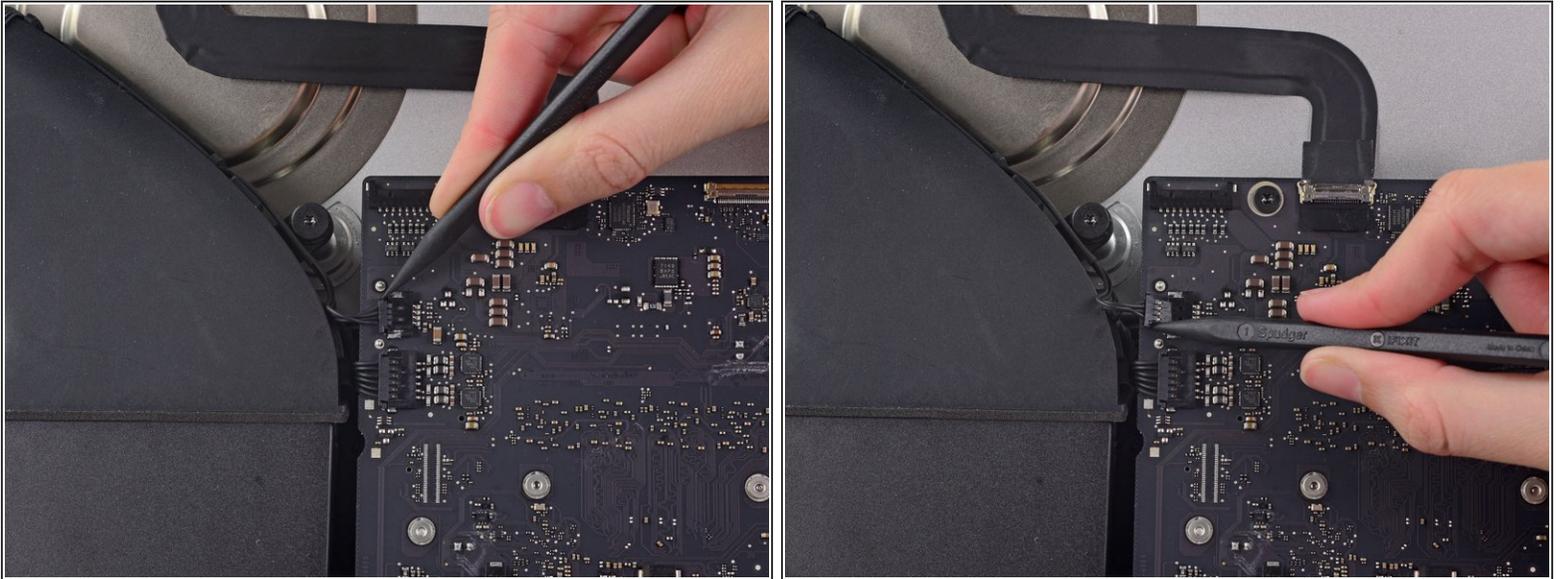


- Use the tip of a spudger to push the fan cable connector out of its socket on the logic board.
- ⓘ It is recommended to carefully push on both sides of the connector to *walk* it out of its socket.

## Step 2



- Remove the following screws securing the fan to the rear enclosure:
  - Two 12.5 mm T10 screws
  - One 9.9 mm T10 screw

### Step 3

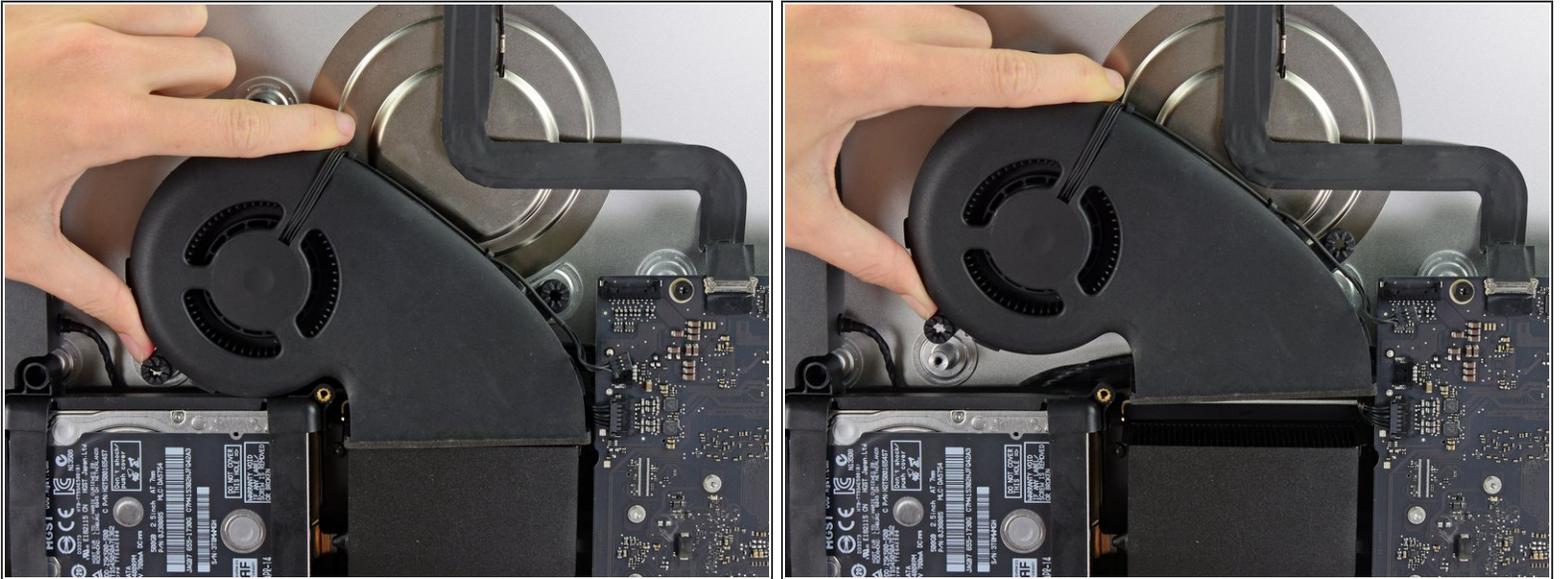

- Lift and remove the fan from the iMac.

To reassemble your device, follow these instructions in reverse order.