



Petzl E03 050 Headlamp Elastic Strap Replacement

This guide will explain the steps necessary to remove the worn elastic strap.

Written By: Princess



INTRODUCTION

Is your elastic headband lost its elasticity? You may need to replace the elastic headband. This guide will explain how to remove the worn headband.

Step 1 — Slide the Lefthand Strap



- Slide the lefthand portion of the elastic headband into the middle opening on the mount.

Step 2 — Remove the Lefthand Strap




- Pull the lefthand portion of the elastic strap through the middle opening.

Step 3 — Slide the Top Strap



- Slide the top portion of the elastic strap into the middle opening of the top bracket on the mount.

Step 4 — Remove the Top Strap

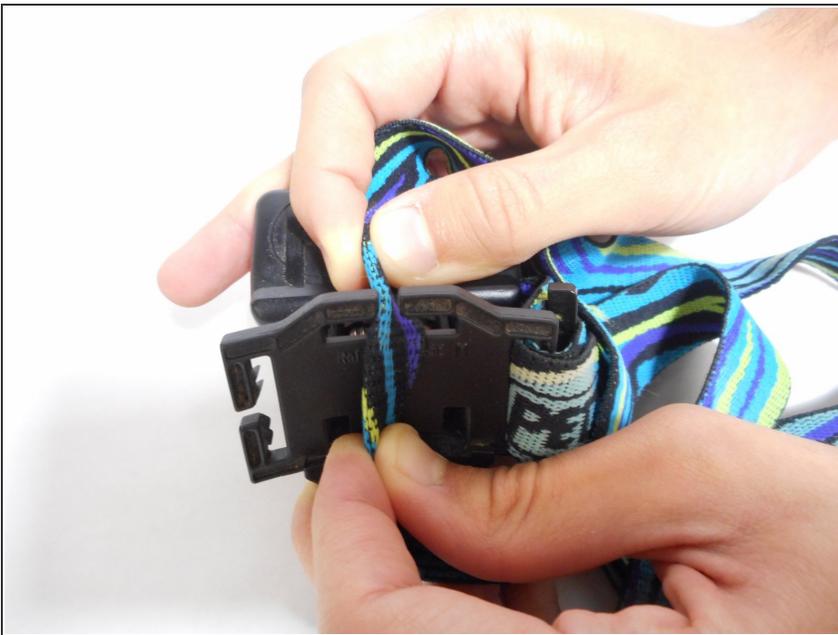

- Pull the top portion of the elastic strap through the top bracket on the mount.

Step 5 — Slide the Righthand-Upper Strap




- Slide the top layer of the righthand elastic strap into the middle bracket on the mount.

Step 6 — Remove the Righthand-Upper Strap




- Pull the top of the righthand strap through the middle bracket on the mount.

Step 7 — Slide the Righthand-Lower Strap

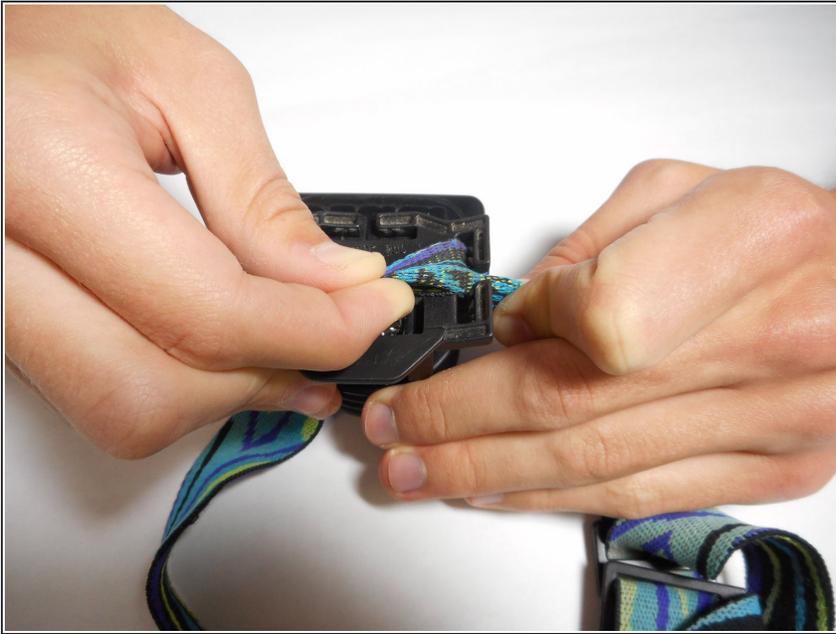

- Slide the bottom of the righthand elastic strap into the middle bracket on the mount.

Step 8 — Remove the Righthand-Lower Strap

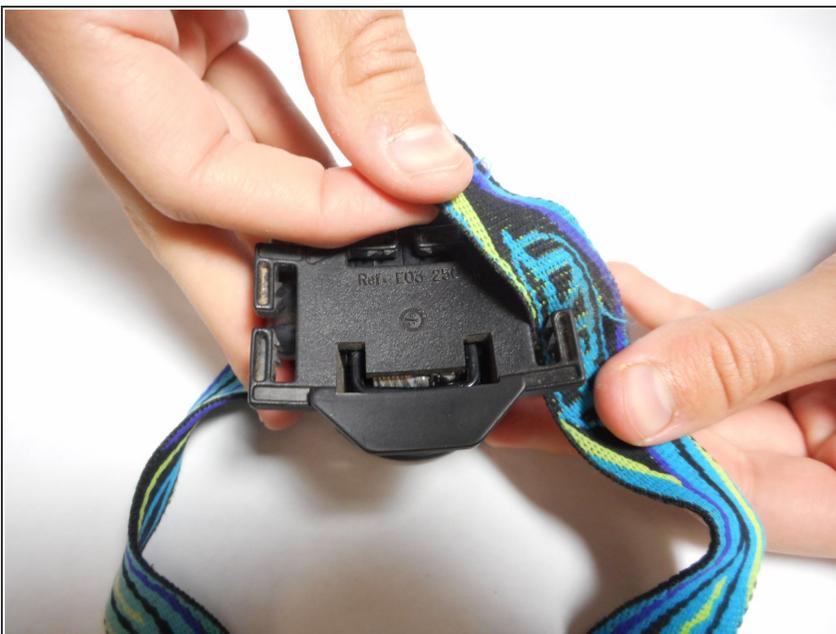

- Pull the bottom of the righthand strap through the middle bracket on the mount. The strap should now be completely free from the mount.

To reassemble your device, follow these instructions in reverse order using your replacement Petzl elastic headband.

