



# the Nokia 6230b Camera Replacement

This guide will be used to help you remove and replace the camera in your Nokia 6230b.

Written By: Job Jao



---

## INTRODUCTION

The camera is attached to the motherboard in your phone. A T6 screwdriver is needed to access the camera.



### TOOLS:

- [T6 Torx Screwdriver](#) (1)
-

## Step 1 — Back Cover



- Press down the button on the back panel.

## Step 2



- Push the back cover upwards.




### Step 3



- Remove the back cover from the phone.

### Step 4 — Front Cover

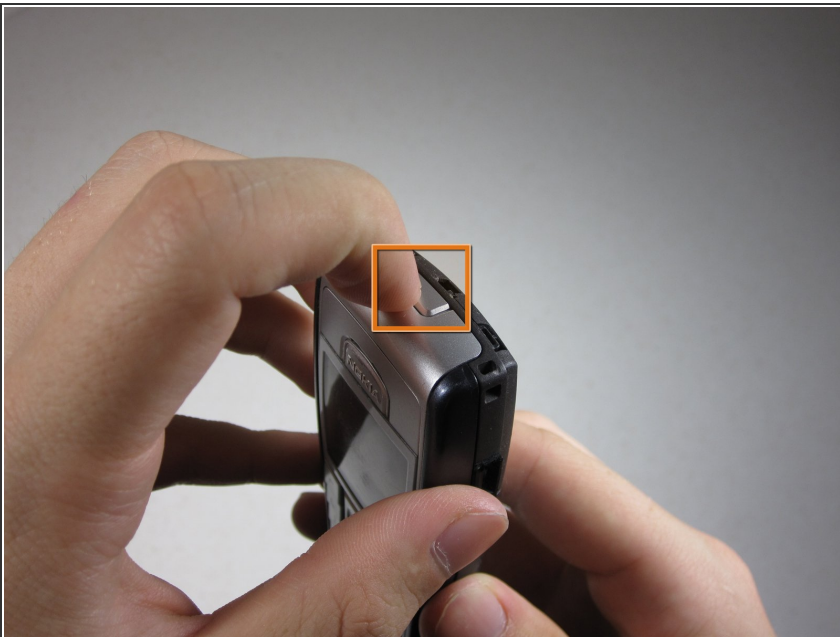


- Press the silver button on the top of the phone.

## Step 5



- Slide your thumbnail down the case seam to separate the rest of the case.

## Step 6

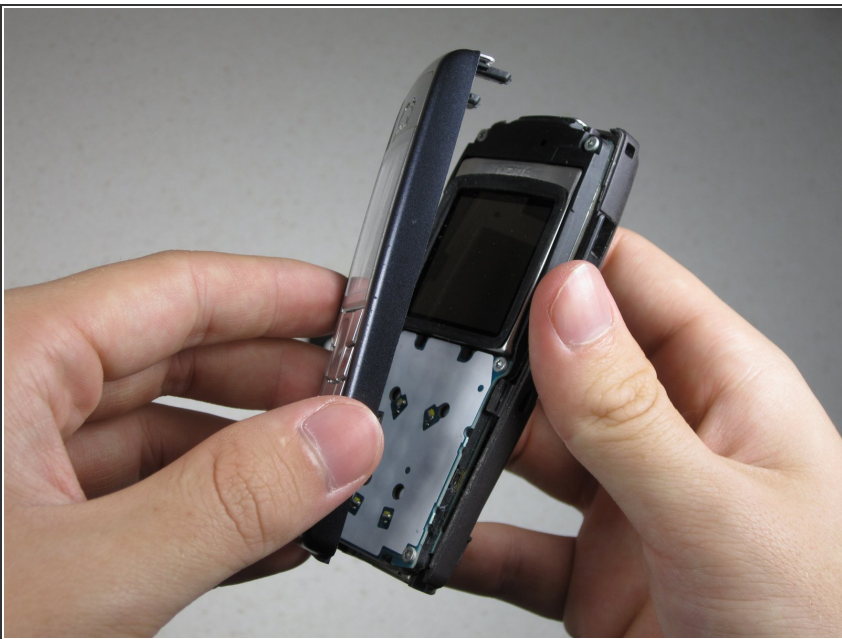

- Gently remove the case.

**⚠ Careful! Do not bend the plastic tabs.**

## Step 7 — Motherboard



- Using a T6 Torx Screwdriver, unscrew and remove the six screws shown in the picture.

## Step 8



- Remove the panel that covers the motherboard.

**i** If replacing the speaker, stop at this step and skip forward to the first step of the speaker guide.




## Step 9



- Remove the LCD screen frame.

## Step 10

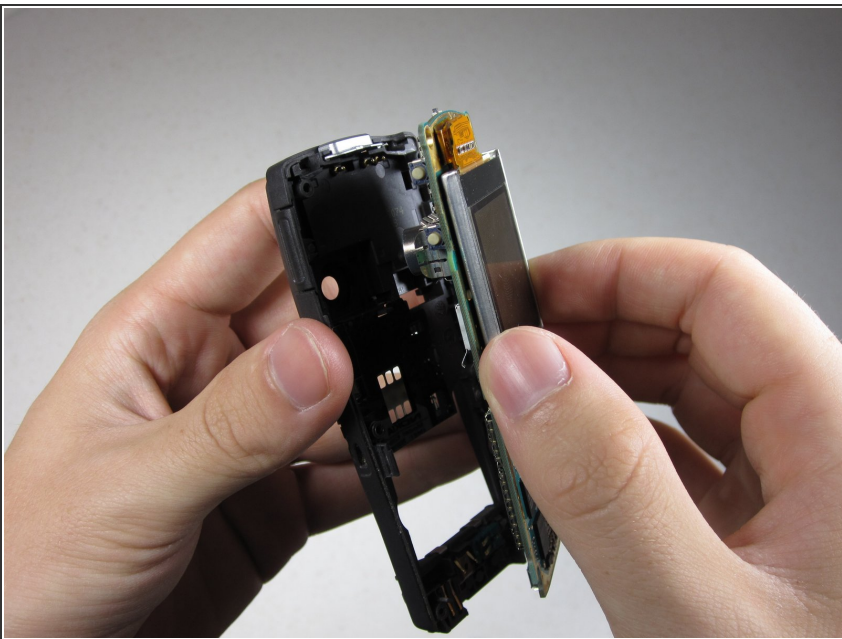


- Remove the motherboard.

## Step 11 — Camera



- Locate the camera on the circuit board.


## Step 12

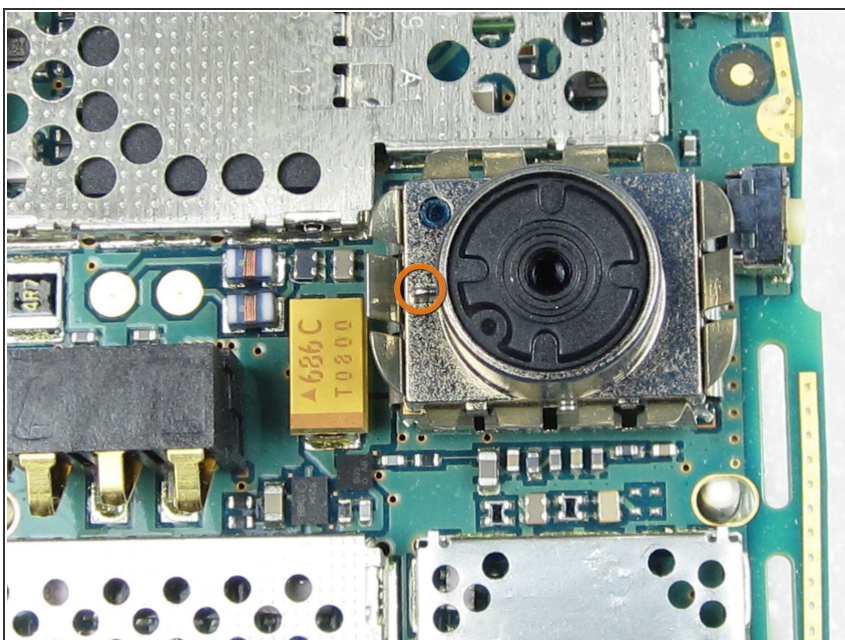

- Place the circuit board on a firm, static free surface (no cloth/carpet).
- NOTE: The circled alignment notch points to the left.




## Step 13

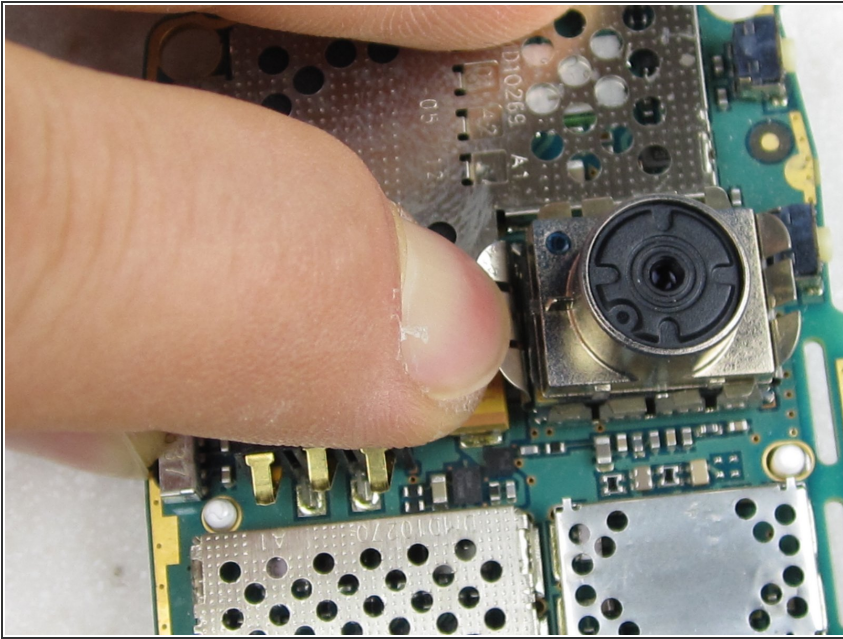


- Pull the left holding tabs to the left.

## Step 14

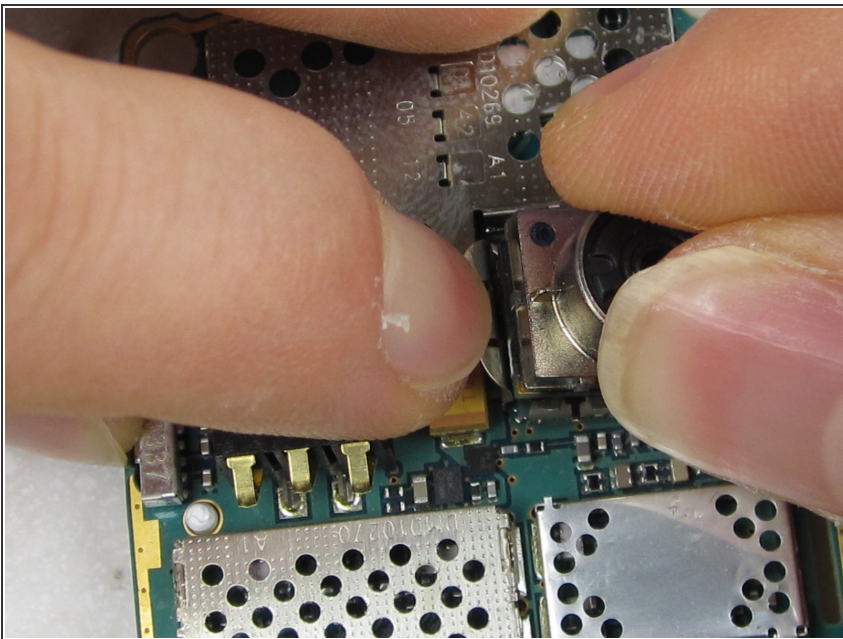


- Lift out the left side of the camera.

## Step 15

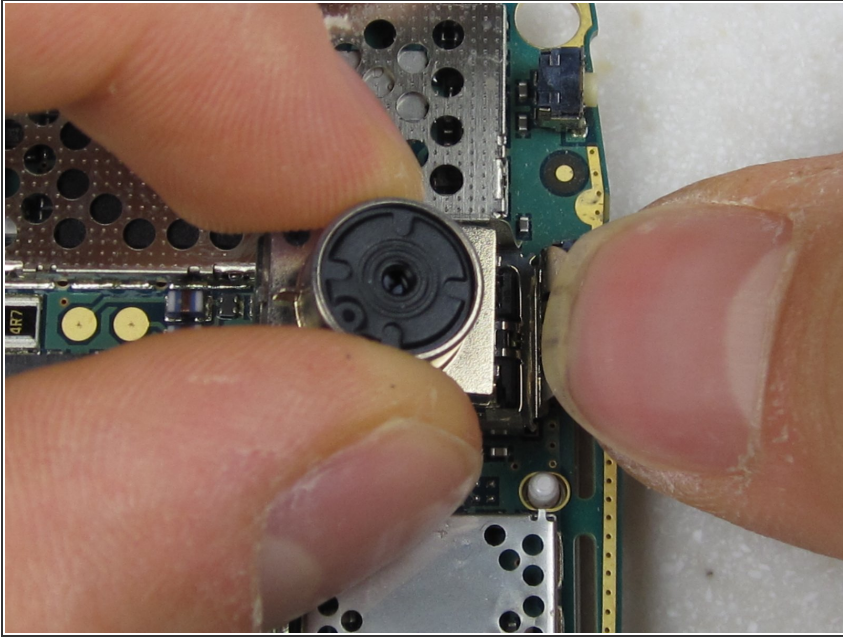

- Pull the right holding tabs to the right.

## Step 16

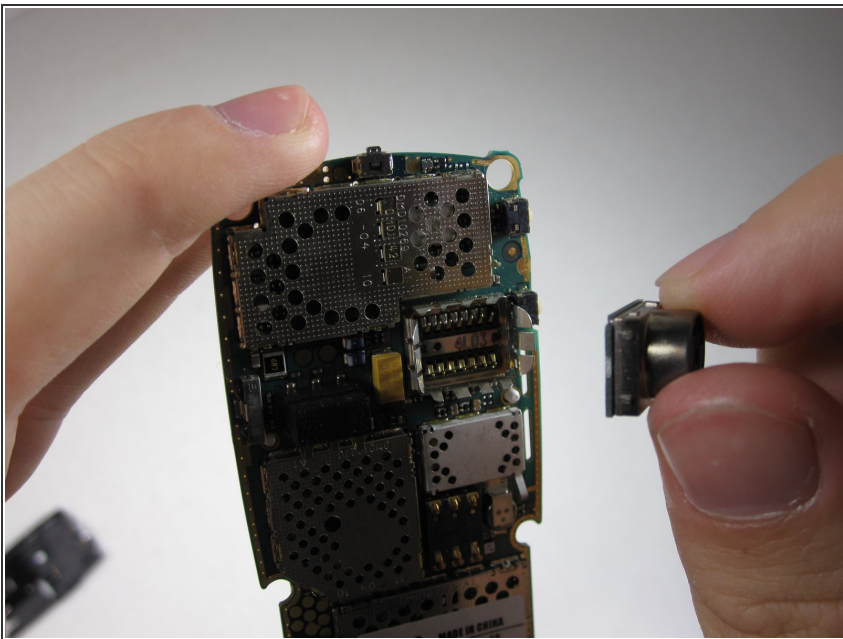

- Pull camera off of board.

To reassemble your device, follow these instructions in reverse order.