



Motorola V557 Headphone Jack Replacement

This guide is for the purpose of replacing the...

Written By: Alex Georges



INTRODUCTION

This guide is for the purpose of replacing the headphone jack on a Motorola V557 cellphone.

TOOLS:

Push Pin (1)

Spudger (1)

T6 Torx Screwdriver (1)

Step 1 — Battery




- First, on the back of the phone find the silver button on the top left corner of the phone.
- Simultaneously push down the button and slide the back plate down to reveal the battery.

Step 2



- Grab the lower edge of the battery at the two bottom corners.
- Pull upward on the edges to remove the battery.

Step 3 — SIM Card

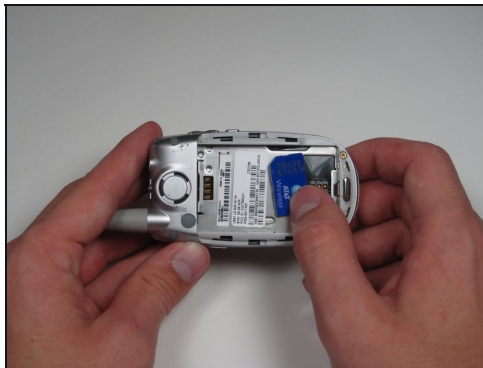

- Push the metal slider towards the top of the phone until it clicks out of the original position.
- Gently slide out and remove the SIM card.

Step 4 — Antenna



- Grip the antenna and twist it counterclockwise to loosen it.
- When it has been loosened all the way, pull gently to remove the antenna piece.

Step 5 — Rear Casing




- Using the push pin, gently pry the top two screws of the cover off.
- The cover in the upper left of the back plate does not need to be removed.

Step 6





- At the corners of the phone, remove all four 6.0 mm Torx screws, using your screwdriver.

Step 7

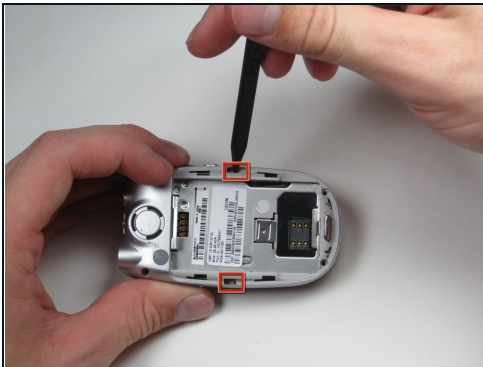

- Next, insert a spudger into the marked holes. One at a time pry away from the phone to release the internal tabs.
- Then, separate and detach the rear casing.

Step 8 — Headphone Jack

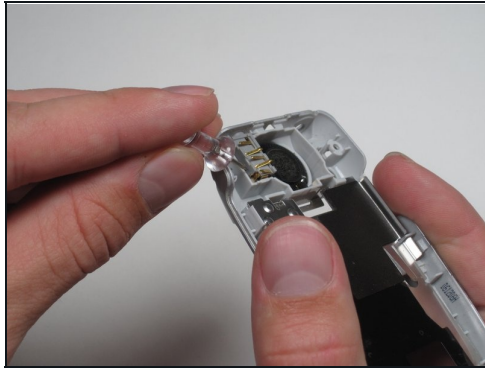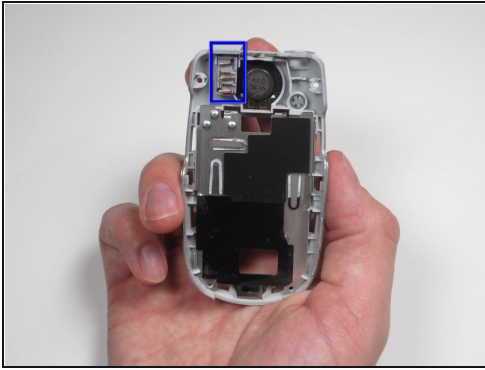

- Lastly, using a push pin, lift out and to the left to release the headphone jack assembly.
- Insert the new headphone jack assembly and repeat these steps in reverse order.

To reassemble your device, follow these instructions in reverse order.