



Fujifilm FinePix XP10SE Battery Replacement

This will demonstrate the steps necessary to replace the battery on the Fujifilm FinePix XP10SE.

Written By: Bryan



INTRODUCTION

Removing and replacing the battery is a very simple operation and requires no special tools. The most important aspect is that you are replacing the battery with the correct one. Please consult a local or online retailer in order to procure this part.

Step 1 — Battery Replacement




- Locate the bottom of the case.

Step 2



- Pull down gray tab until it unlocks battery compartment.

Step 3

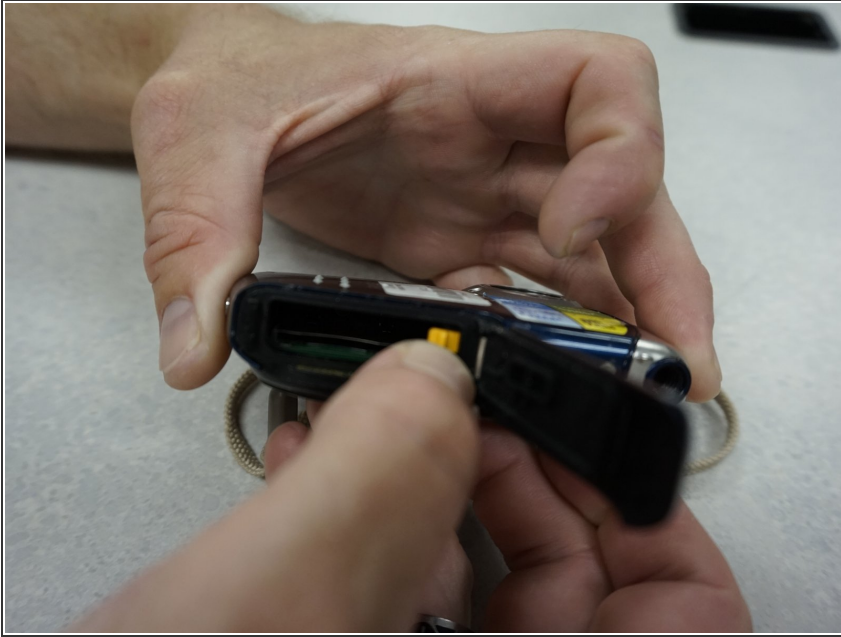

- Pull orange tab to the side to release the battery.

To reassemble your device, follow these instructions in reverse order.