


Polaroid S10 Battery Replacement

Prerequisite only

Written By: Christofer



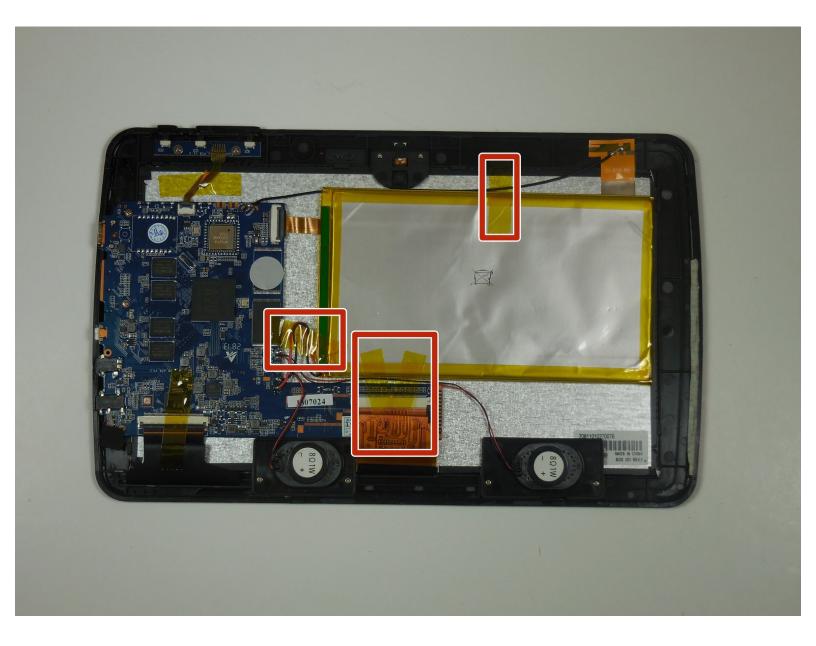


Step 1 — Removing the backcover



- Place an opening pick between the volume button and the back cover.
- (i) More than one pick may be needed, but avoid placing more than two picks in the same space.
- \bigwedge Excessive force on the pick will break the volume button.
- Carefully remove the back cover using the metal spudger.
- (i) It is normal to hear a snapping noise due to the plastic tabs on the back cover.

Step 2 — Battery

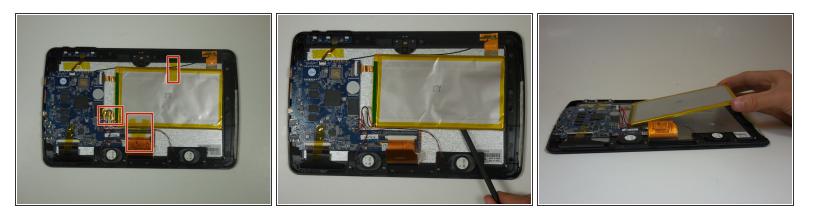

• Use a spudger to carefully remove the tape nearest to the battery.

1 Use caution while removing tape. Too much force can damage the device.

- Gently use the spudger to remove the battery out of place by wedging it out from the bottom.
- A Do not move the battery. Moving it could cause the cables to be ripped out.

To reassemble your device, follow these instructions in reverse order.