



Lenovo ThinkPad T400s LCD Screen Replacement

This guide will show you how to safely disconnect and remove your LCD screen.

Written By: Christopher Noone



INTRODUCTION

The LCD screen and its peripherals are very sensitive and mishandling may result in a missing dot, line, or pixel problems. To ensure that no damage is done to the LCD screen:

- Don't apply pressure to the LCD
- Always hold the LCD from the right and left edges
- Don't apply any pressure to the lower part of the LCD



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — LCD Screen




- Use a #0 Phillips head screwdriver to remove the two 3mm screws that hold the screen bezel in place.

Step 2



- Using the plastic opening tool, gently pry off the plastic LCD screen frame around the entire perimeter.
- ⚠ Be careful while prying the frame off, because the plastic tabs that hold it in may break.

Step 3

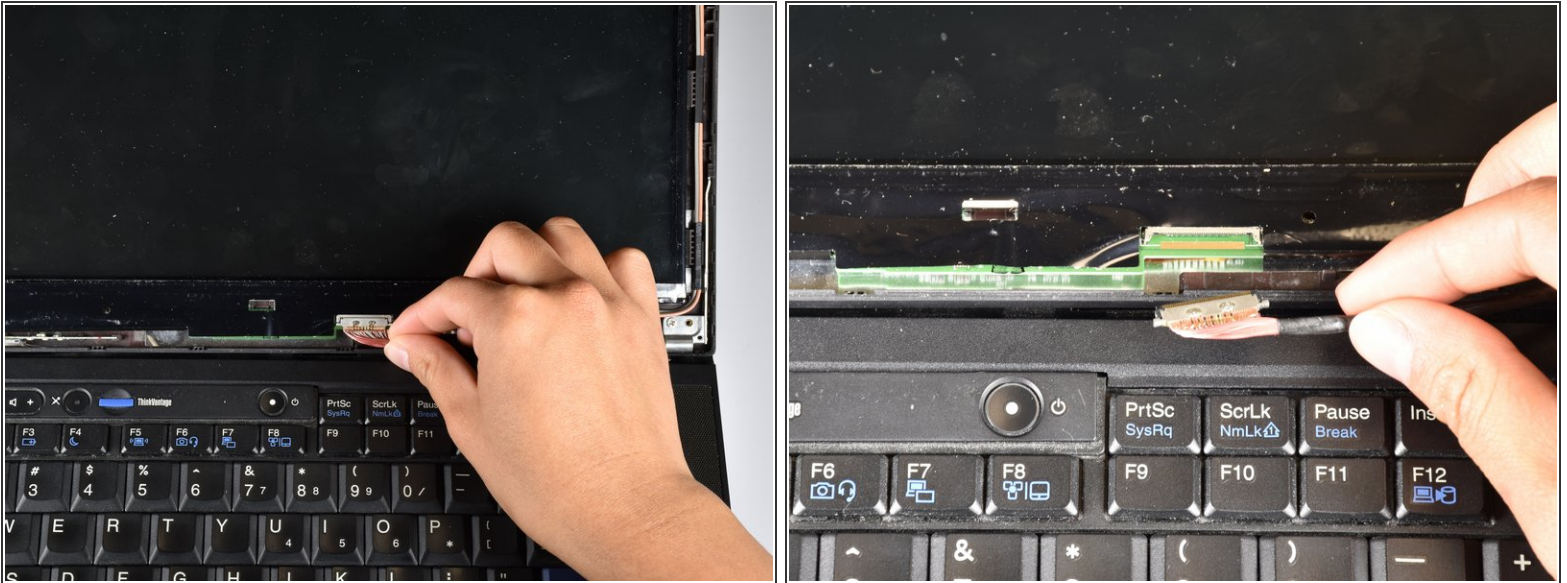

- Remove the LCD connector by pulling on the ribbon cable at the connection.

Step 4



- Lift the LCD screen out to replace.
- ⚠ Make sure to remove the screen with both hands and from opposite edges of the screen.

To reassemble your device, follow these instructions in reverse order.