




# Repairing iBook G4 Restart error

This Guide shows one of two ways fix the restart screen error.

Written By: izzyj2001

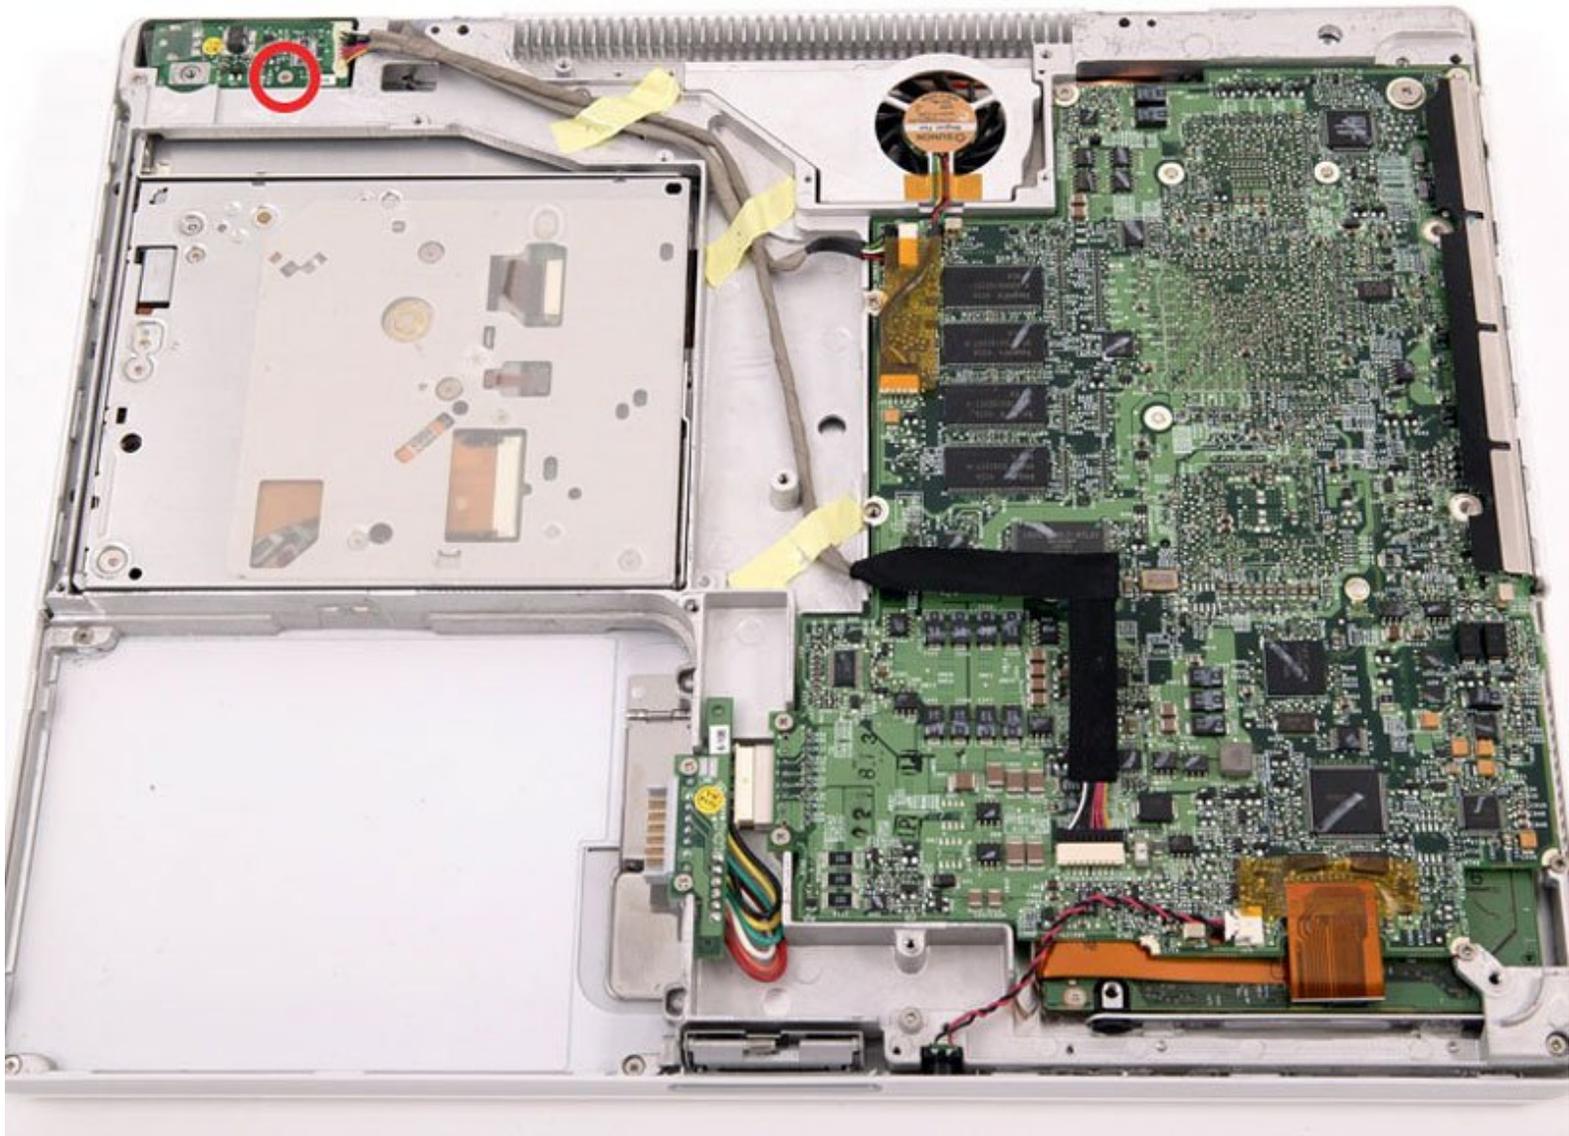

---

## INTRODUCTION

[video: <https://youtu.be/52-nCu2wW1M>]

---


### TOOLS:

- [T8 Torx Screwdriver](#) (1)

Might need a T9

- [Phillips #00 Screwdriver](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — Repairing iBook G4 Restart error

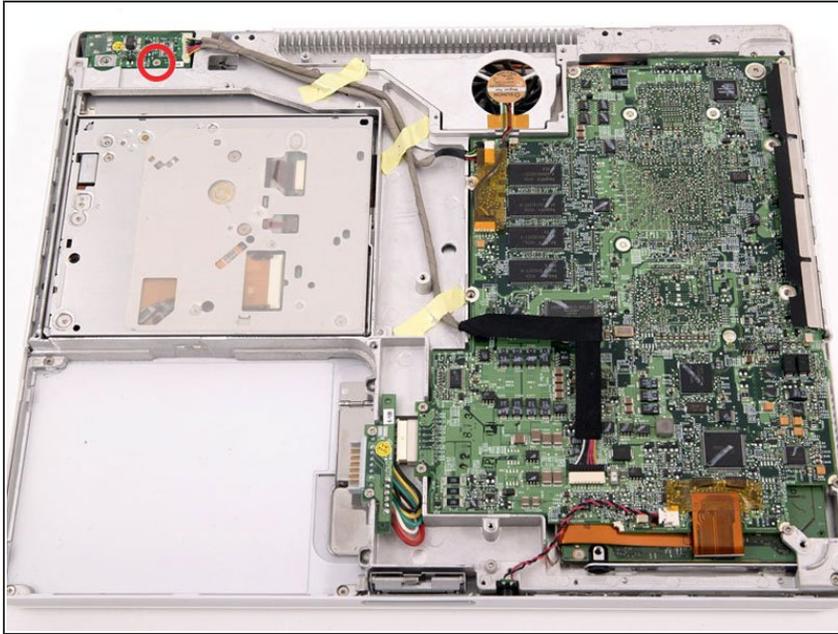

- First take apart the iBook.

## Step 2



- Now find your airport card and take it out.
- Next put it back in but leave the screws loose

### Step 3



- Next put your iBook back together. Now your iBook should work.

To reassemble your device, follow these instructions in reverse order.