




HP 7 Plus 1302 Back Cover Replacement

Replacing the Back Cover of your HP 7 Plus 1302

Written By: Marquies

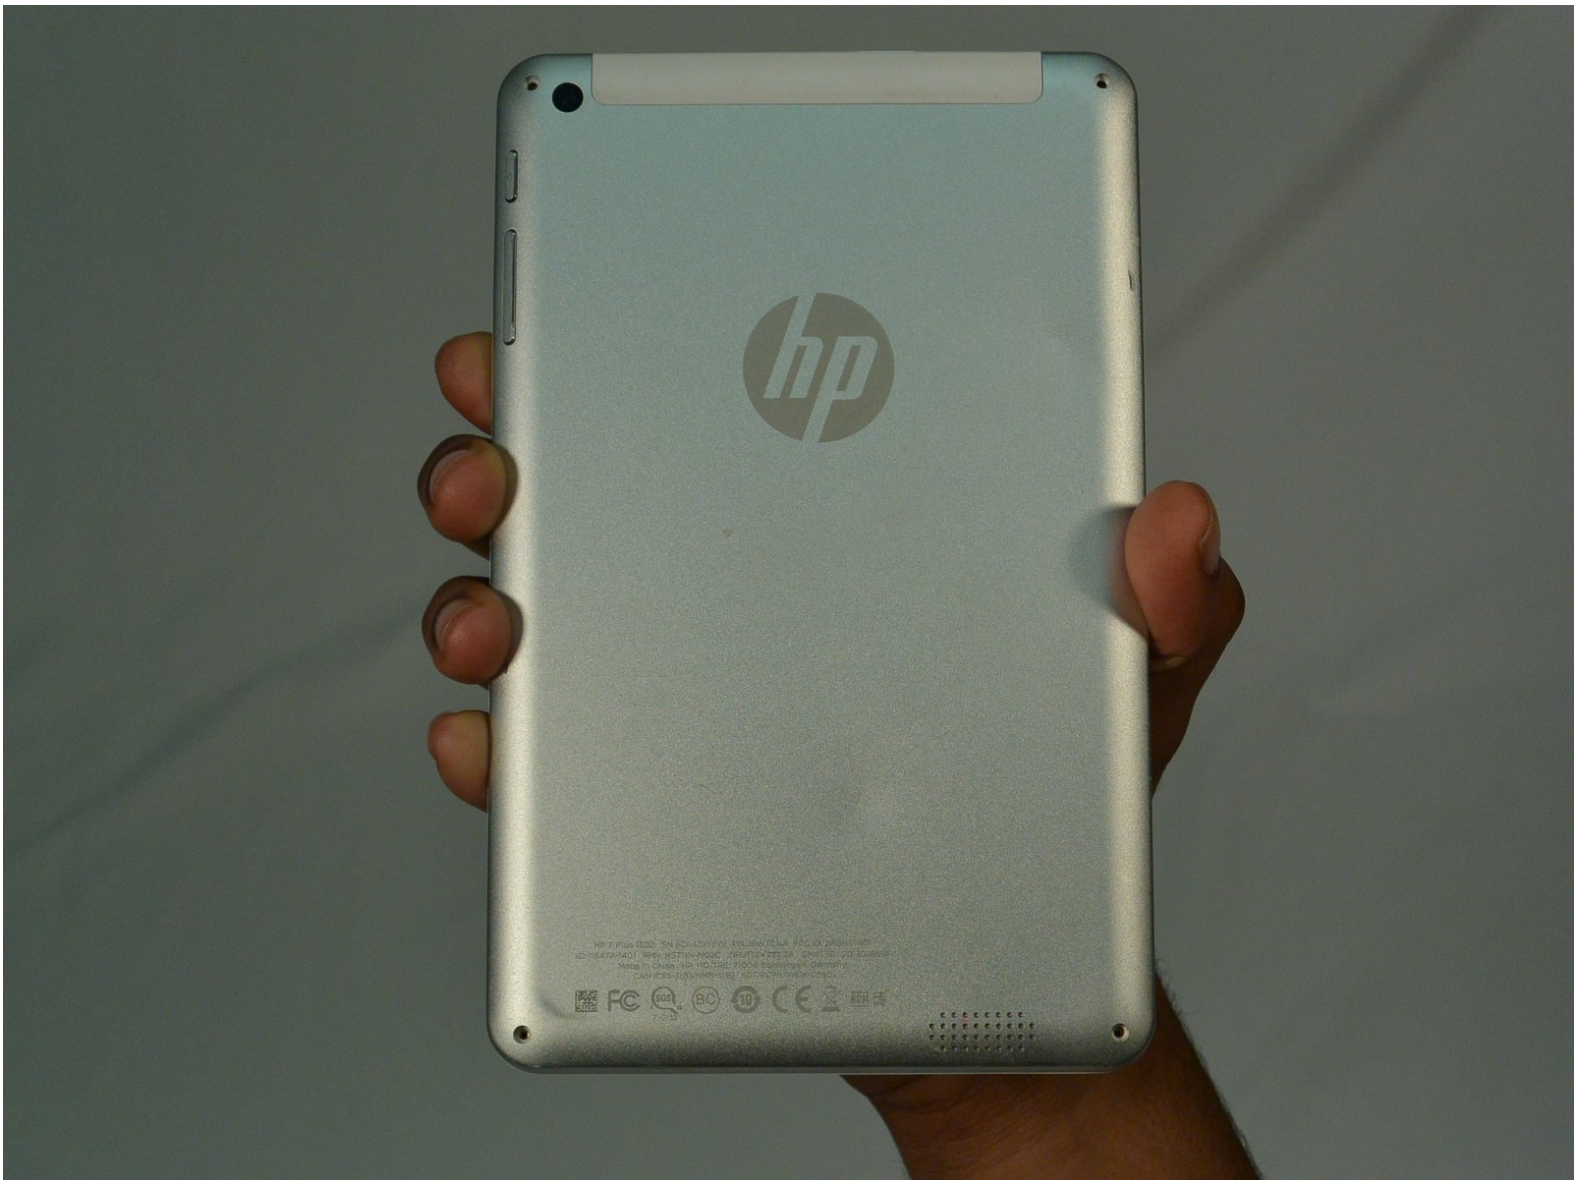

INTRODUCTION


Need to remove your back cover to replace it or access internal parts? Use this guide to get it off (requires T5 Torx Screwdriver)



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [T5 Torx Screwdriver](#) (1)
-



Step 1 — Back Cover

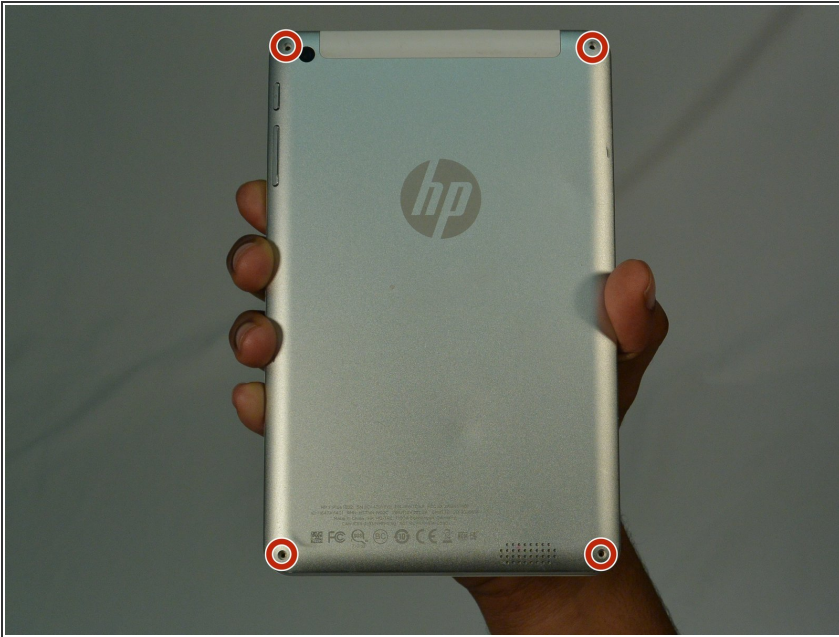

- Using the T5 Torx Screwdriver, remove the T5x3mm screws located in all 4 corners.

⚠ Device should be turned off and unplugged before starting the replacements.


Step 2

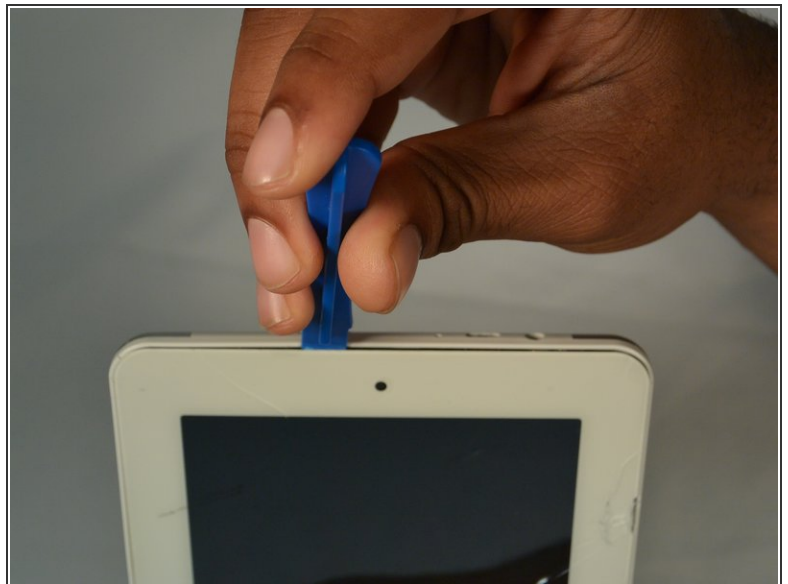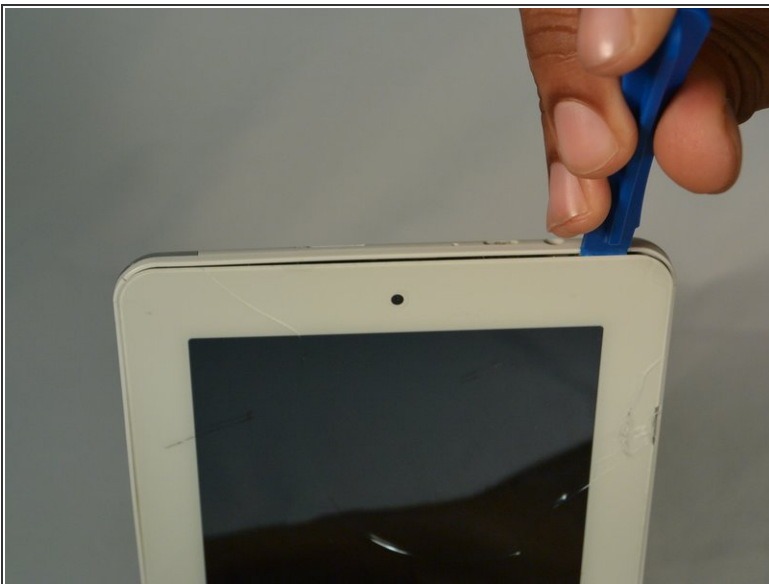

- Use the plastic opening tool to push in between the front and the back of the tablet.
- Slide the plastic opening tool around all 4 sides of the tablet to separate the back cover.

⚠ Be careful when you are trying to remove the back as it can damage the screen if you force it too much.

Step 3

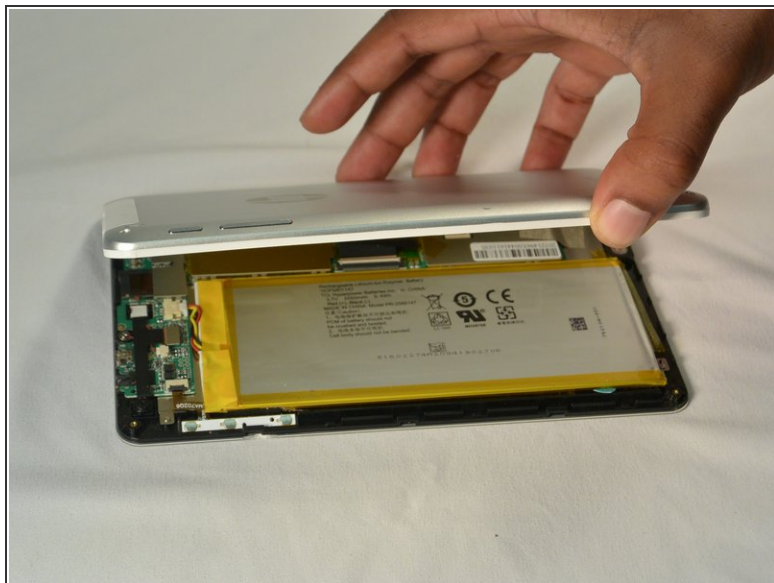

- Continue sliding the plastic opening tool around the tablet until all 4 sides are separated from each other.
- Remove the back cover.

To reassemble your device, follow these instructions in reverse order.