

# **Dell Inspiron 9100 Fan 2 Replacement**

Removal of fan #2.

Written By: charlierefvem



### INTRODUCTION

This guide requires a Phillips #00 screwdriver

## FTOOLS:

• Phillips #00 Screwdriver (1)

#### Step 1 — Battery



• Unplug the laptop from the power adapter and turn the power off.


A Failure to unplug laptop before proceeding could result in risk of electric shock!

#### Step 2




- Slide the battery-lock tab and hold.
- Flip the battery away from the chassis to remove it.

#### Step 3 — Fan 2

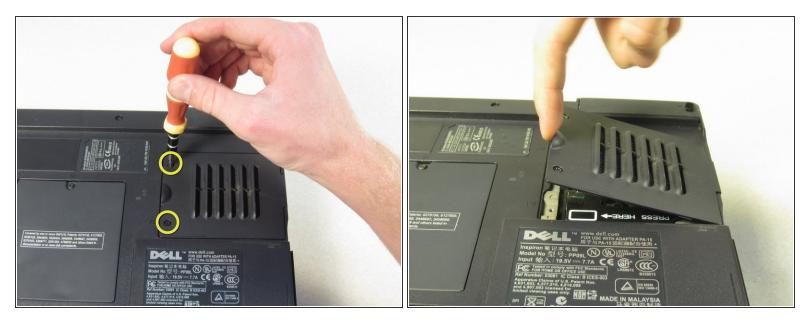

- Undo the two screws on the fan cover labeled "F2"
- (i) These screws will remain in the panel
- Remove cover plate.

#### Step 4

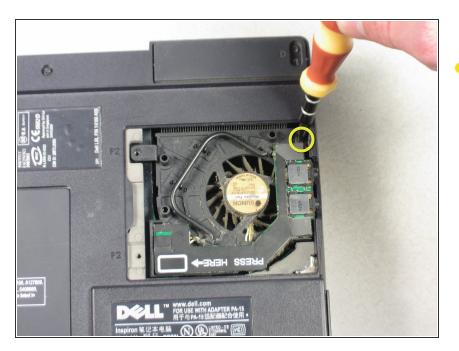

• Remove the single 6mm screw holding the fan in place.

#### Step 5



- Flip the handle up.
- Use the handle to pull the fan away directly up, away from case.

To reassemble your device, follow these instructions in reverse order.