




Acer Aspire 5100 Mini PCI Card Replacement

Replace the Mini PCI card in your Acer Aspire 5100.


Written By: Walter Galan

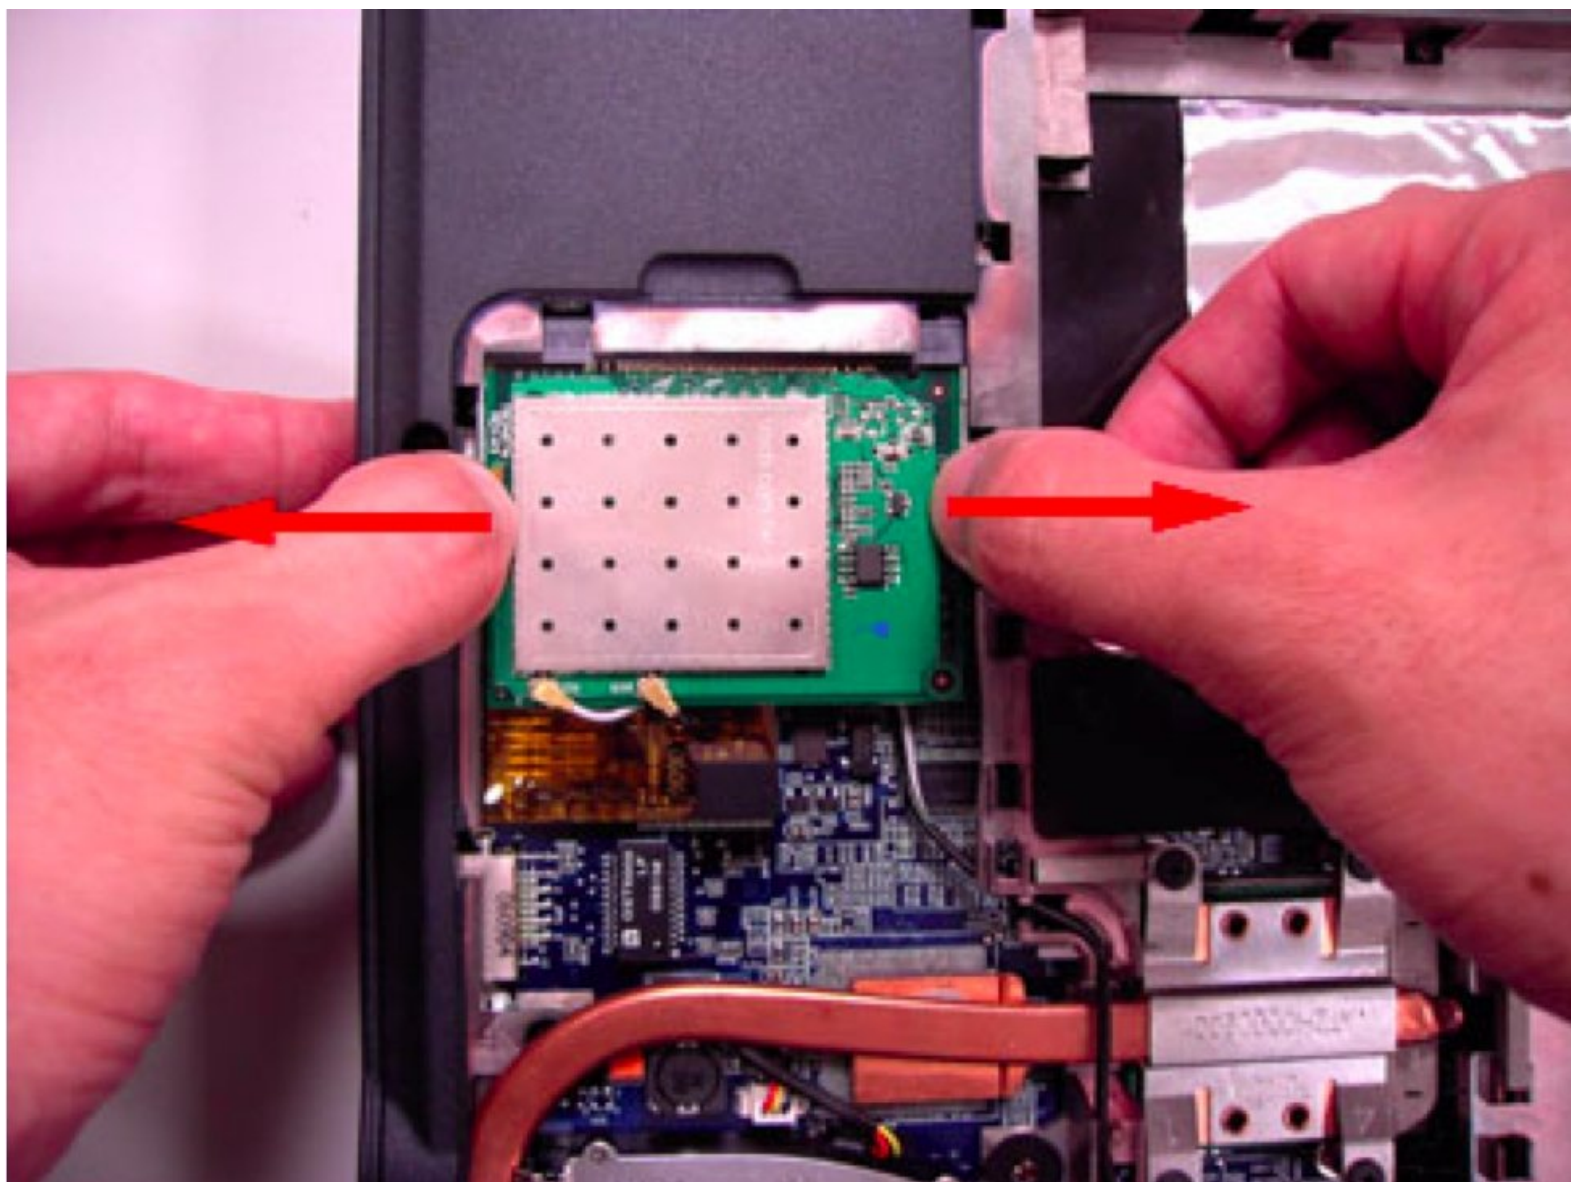

INTRODUCTION


Replace the Mini PCI card in your Acer Aspire 5100.

Step 1 — Mini PCI Card

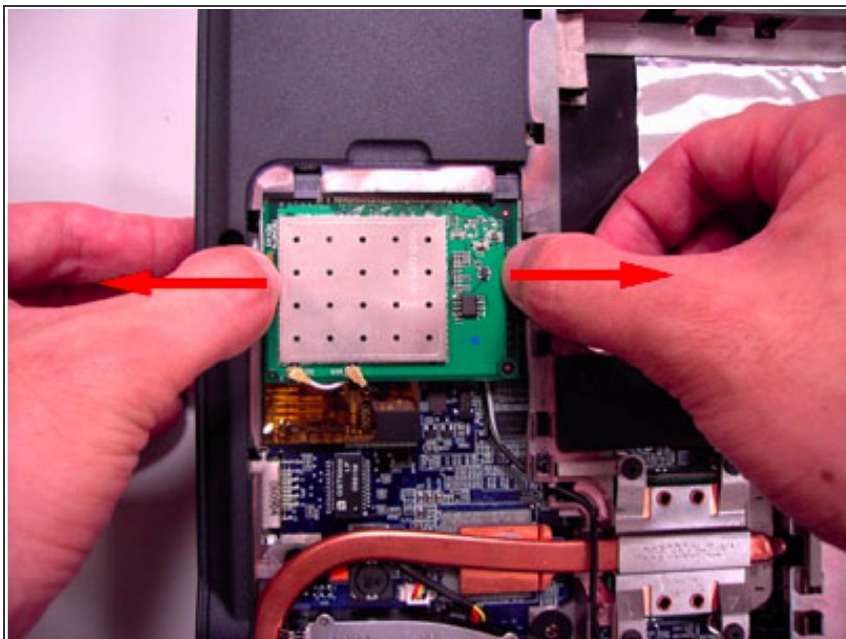


- 5. Pull the Mini PCI card locks at the same time as the arrows indicate.

Step 2

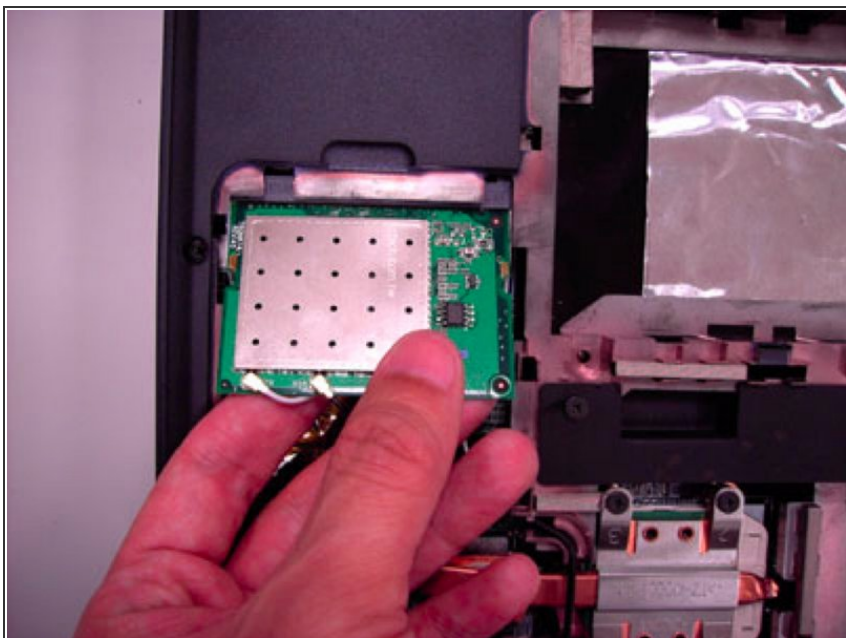

- The Mini PCI card will pop up then detach it.

Step 3

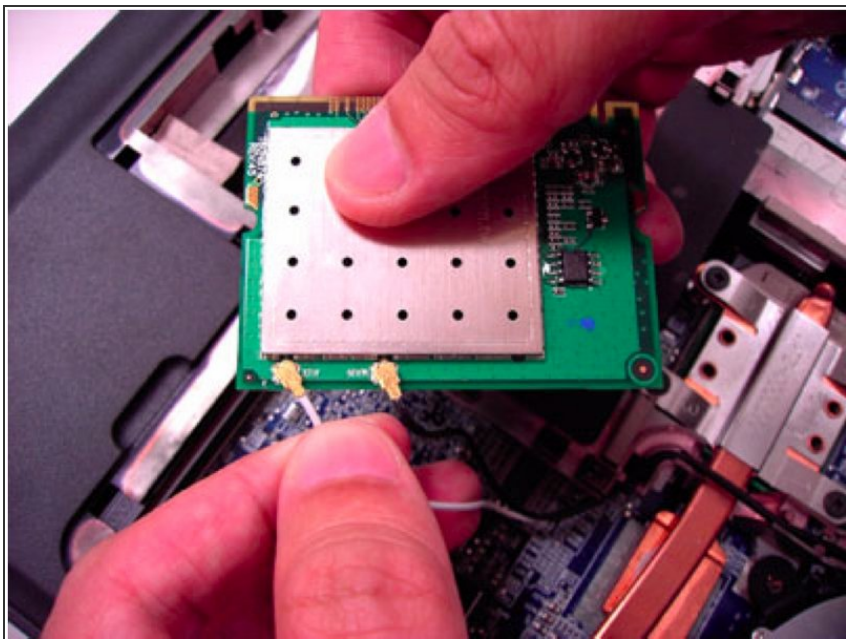

- Disconnect the auxiliary antenna cable (gray) and the main antenna cable (black). You now have the Mini PCI Card

To reassemble your device, follow these instructions in reverse order.