


# Fitbit Zip Teardown


Written By: Nathanael

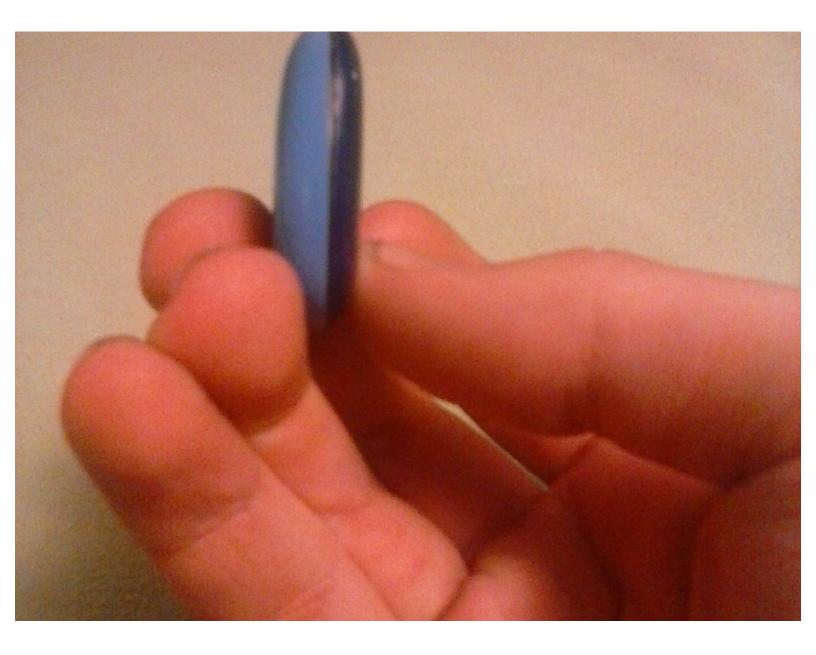

# F TOOLS:

- iFixit Tech Knife (1)
- Spudger (1)

### Step 1 — Fitbit Zip Teardown

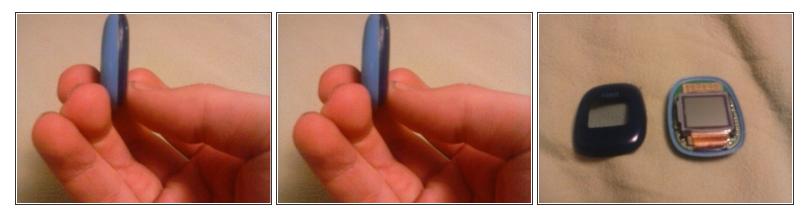

 Use your iFixit Pro Tech Knife to slice and pry the different colored front and rear cases apart, as shown

### Step 2



• Remove the logic board/display assembly from the rear case

#### Step 3



• Use your knife to slice off the bottom edge of the sticker found here on the rear of the board

#### Step 4



- Use a spudger to gently pry the display away from the logic board
- Pry softly in each corner of the display, under the black frame

## Step 5



 Seems to be it. The display doesn't appear to be separable from the logic board, sadly, making repairability completely out of the question.