



HTC Evo 3D Screen Replacement

This is a guide on how to remove and replace the screen on an HTC Evo 3D. Replacement of the screen is done when you have a broken or damage screen.

Written By: Carlos De Lima



INTRODUCTION

In this guide we will show how to replace the screen on an HTC Evo 3D. This will include disassembling internal features of the phone in order to remove the screen.

TOOLS:


- [Precision Tweezers Set](#) (1)
 - [Screwdriver](#) (1)
 - [Heat Gun](#) (1)
 - [Suction Handle](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Motherboard



- Remove the outer casing of the phone with your hands by prying and lifting at the latch.

Step 2

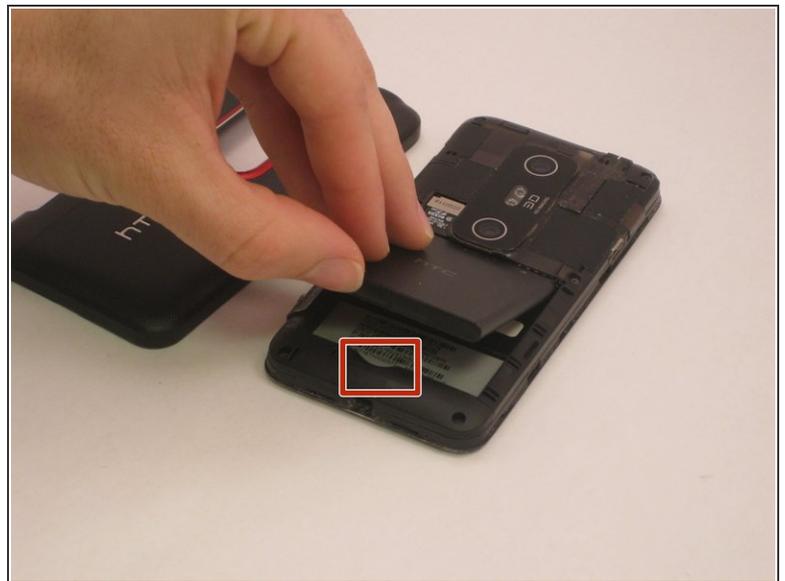


- Remove the battery with your hands, lifting at the marked area.
- Remove the SD card by gently pulling down on the bottom of the card.

Step 3




- Remove the four T5 screws using the corresponding screwdriver.
- Remove the two J000 screws using the corresponding screwdriver.

Step 4

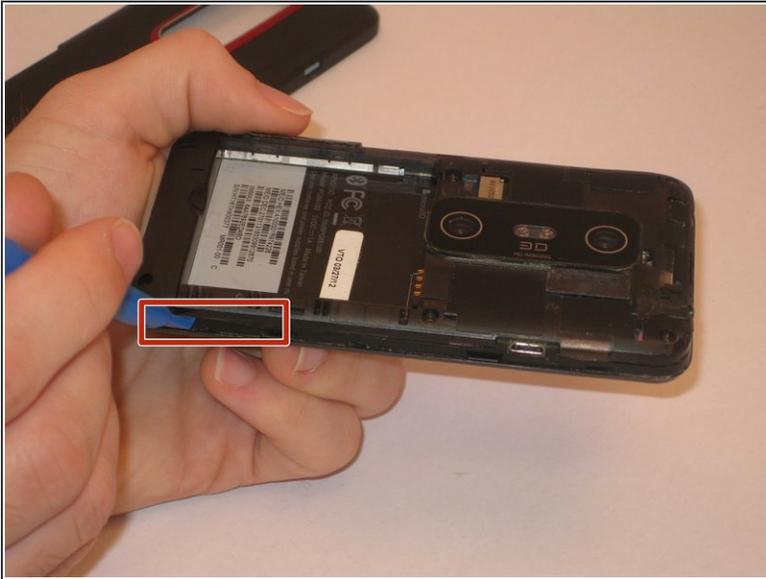


- With the battery, SD card, and screws removed, the inner case of the phone can now be removed.
 - Using the plastic opening tool, pry the inner case off at the marked area. Continue prying around the entire perimeter of the phone.
 - This will remove the inner case, and allow access into the inner portion of the phone.
- ⚠ Be sure not to rip or damage the ribbons inside this shell.

Step 5

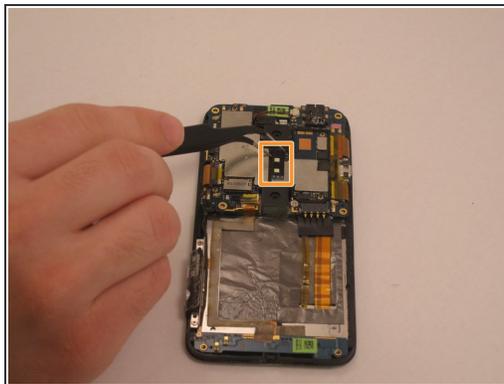


- Pictured here is the motherboard.
- Using precision tweezers, remove the flash mechanism by prying the sides of the piece.

Step 6

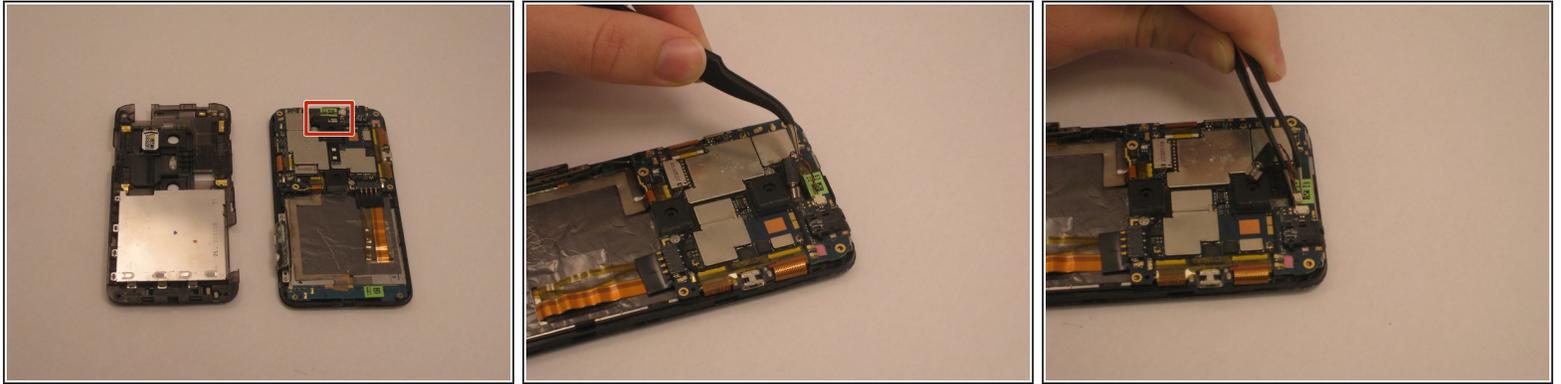


- Next we will remove the vibration mechanism shown here.
- Using precision tweezers or fingers, gently pull on the wires connecting the vibration mechanism to the motherboard.
- The piece should come loose easily.

Step 7

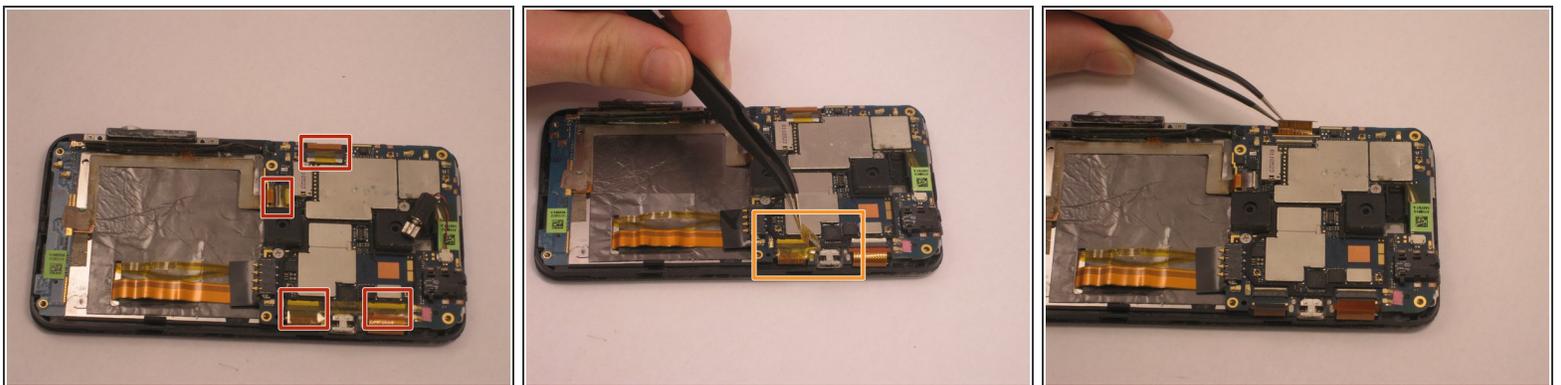


- The next step is to disconnect all ribbons attached to the motherboard.
- Begin by using tweezers to remove the plastic covering the ribbons.
- Each ribbon needs to be removed by unlocking the white tab and pulling on the ribbon.
 - Unlock by lifting the white tab directly up.
 - ⚠ The ribbons easily rip and require careful handling.

Step 8

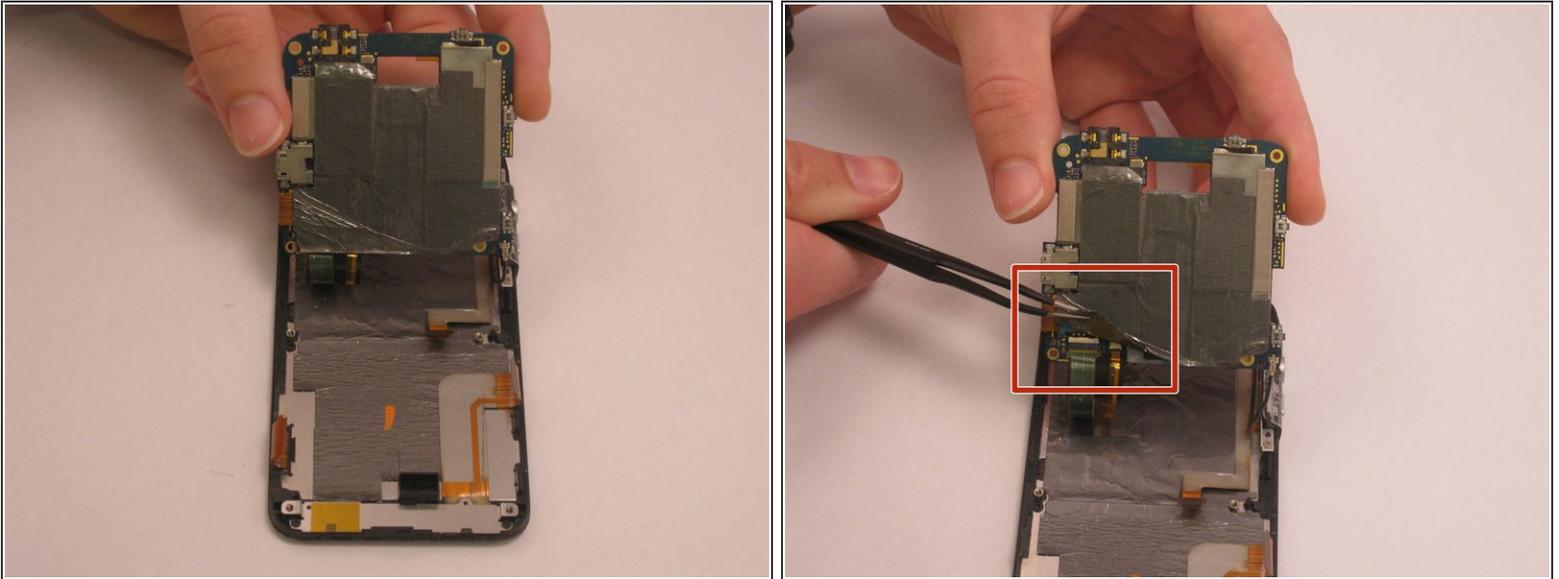

- At this point the motherboard is almost fully detached.
- Lift the motherboard and using precision tweezers, peel up the insulation cover on the bottom left corner.

Step 9

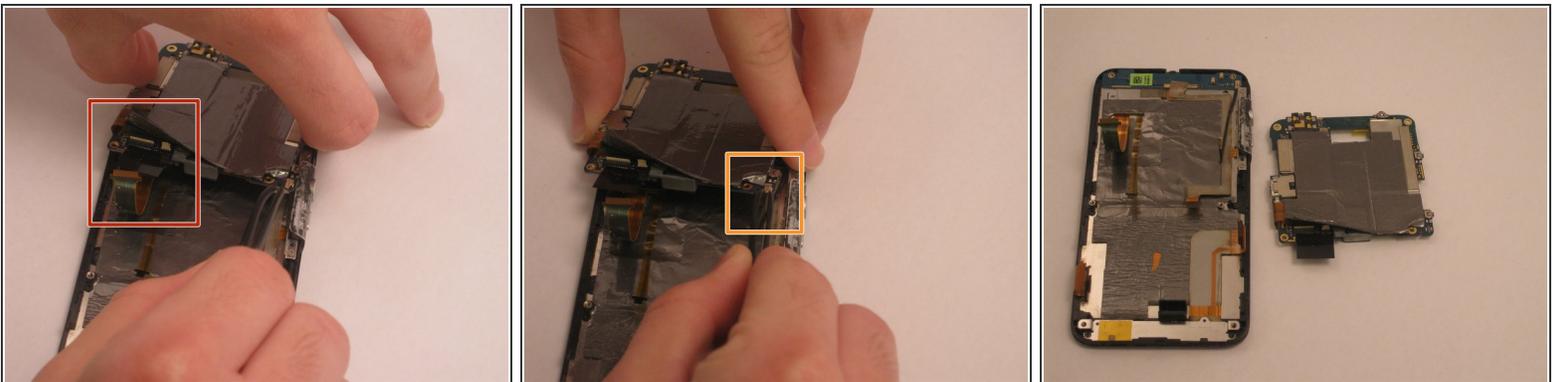

- Disconnect the two ribbons on the backside of the mother board using precision tweezers.
- Disconnect the Cellular/WiFi antenna by pulling directly up on the black wire.
- The motherboard will now be free from the rest of the phone.

Step 10 — Screen




- Once the motherboard is removed, heat up the frame of the screen for 30 seconds with a heat gun or a hair dryer. This will make removal easier.

 Be careful not to overheat the device.

- Use the plastic opening tool to pry open up one side of the screen.
- Use the plastic opening tool to move around the borders and loosen the screen.

Step 11

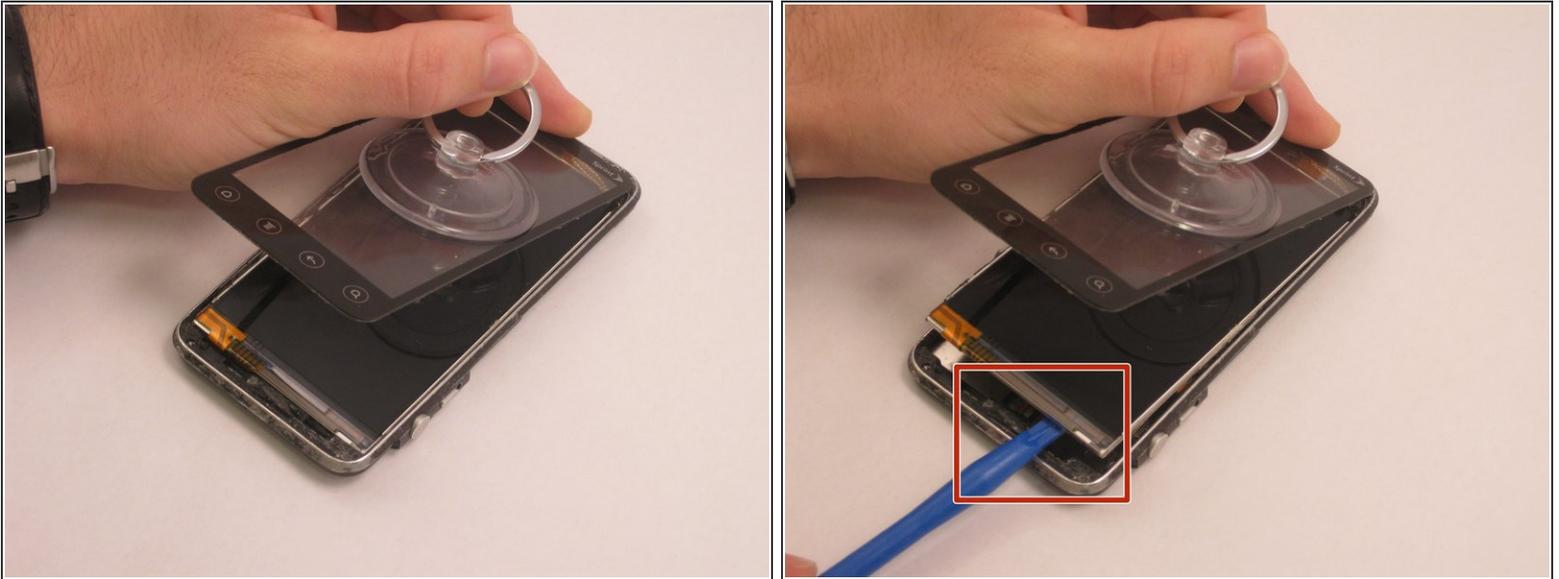

- Use the suction cup to remove the screen off the device.
- ⚠ Be careful not to tear off the flex cable.
- After lifting the screen, begin prying the digitizer using a plastic opening tool.
- Continue with this process around the entire perimeter of the phone.

Step 12



- Once all the adhesive is separated, carefully remove the screen from the device.
 - Due to the removal of the motherboard, the screens should be easily removed from the phone.
- ⚠ Be careful not to cut off the flex cables or the tape.
- ℹ If needed, use heat to make the removal of the tape and cables easier.

To reassemble your device, follow these instructions in reverse order.