



iRobot Roomba 560 Battery Replacement

Replace the battery in your Roomba 560.

Written By: Mairead Blaes



INTRODUCTION

Use this guide to replace the Roomba's battery if the device shows signs of a faulty or damaged battery. Signs of a bad battery include an inability to hold charge or a short run time while cleaning. Battery damage can be caused by overuse, or exposure to heat and water.


TOOLS:

- [JIS #1](#) (1)

PARTS:


- [iRobot Roomba Replacement Battery for Select 500, 600, and 700 Series](#) (1)

Step 1 — Side Sweeper

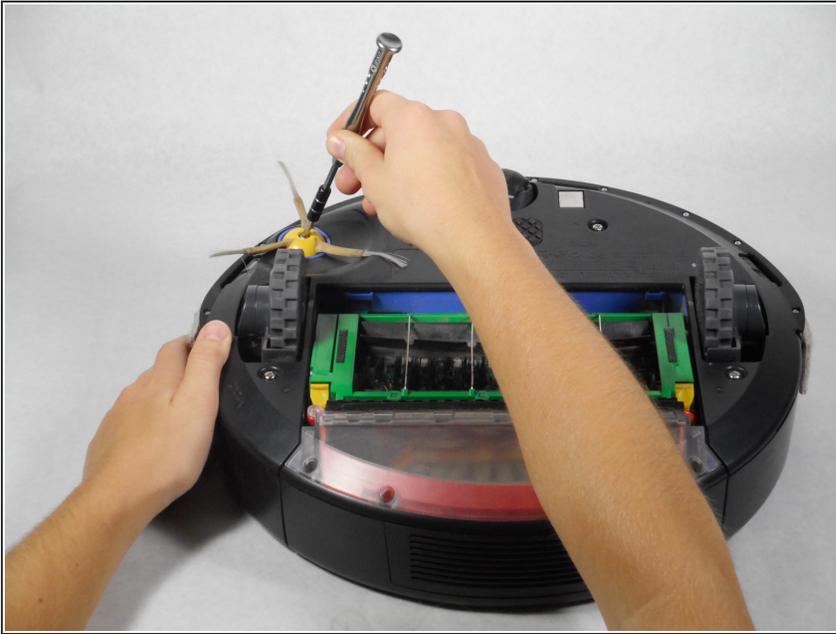

- Flip the Roomba upside down.
- Unscrew the single 5 mm screw on the yellow side sweeper using the Phillips #2 driver.

Step 2

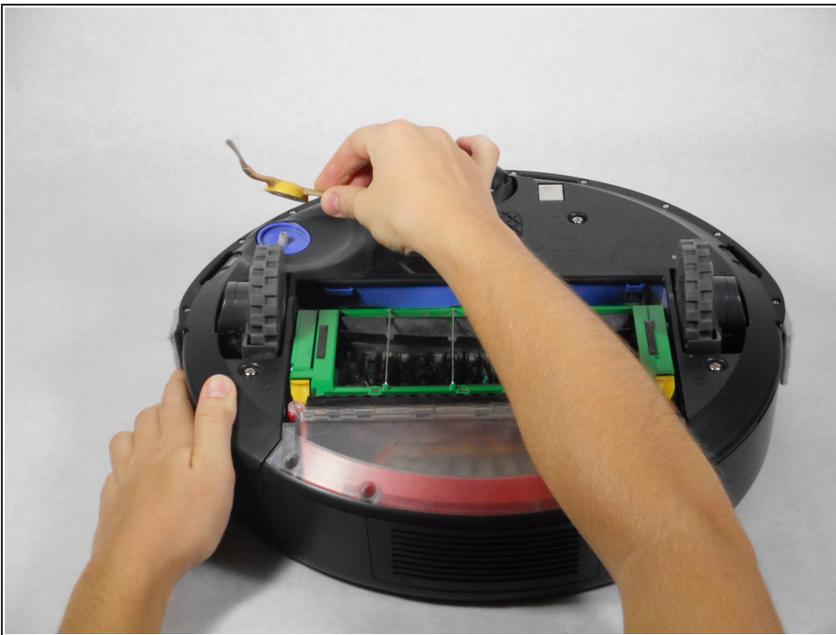

- Lift the yellow side sweeper, removing it from the device.

Step 3 — Battery



- Using the Phillips #2 driver, remove the four 10 mm screws that hold the back panel in place.

Step 4



- Lift up the back panel to remove it from the device.

Step 5



- Lift up the yellow battery by pulling up the green tabs on its side.

 Handle the battery with care.

To reassemble your device, follow these instructions in reverse order.