


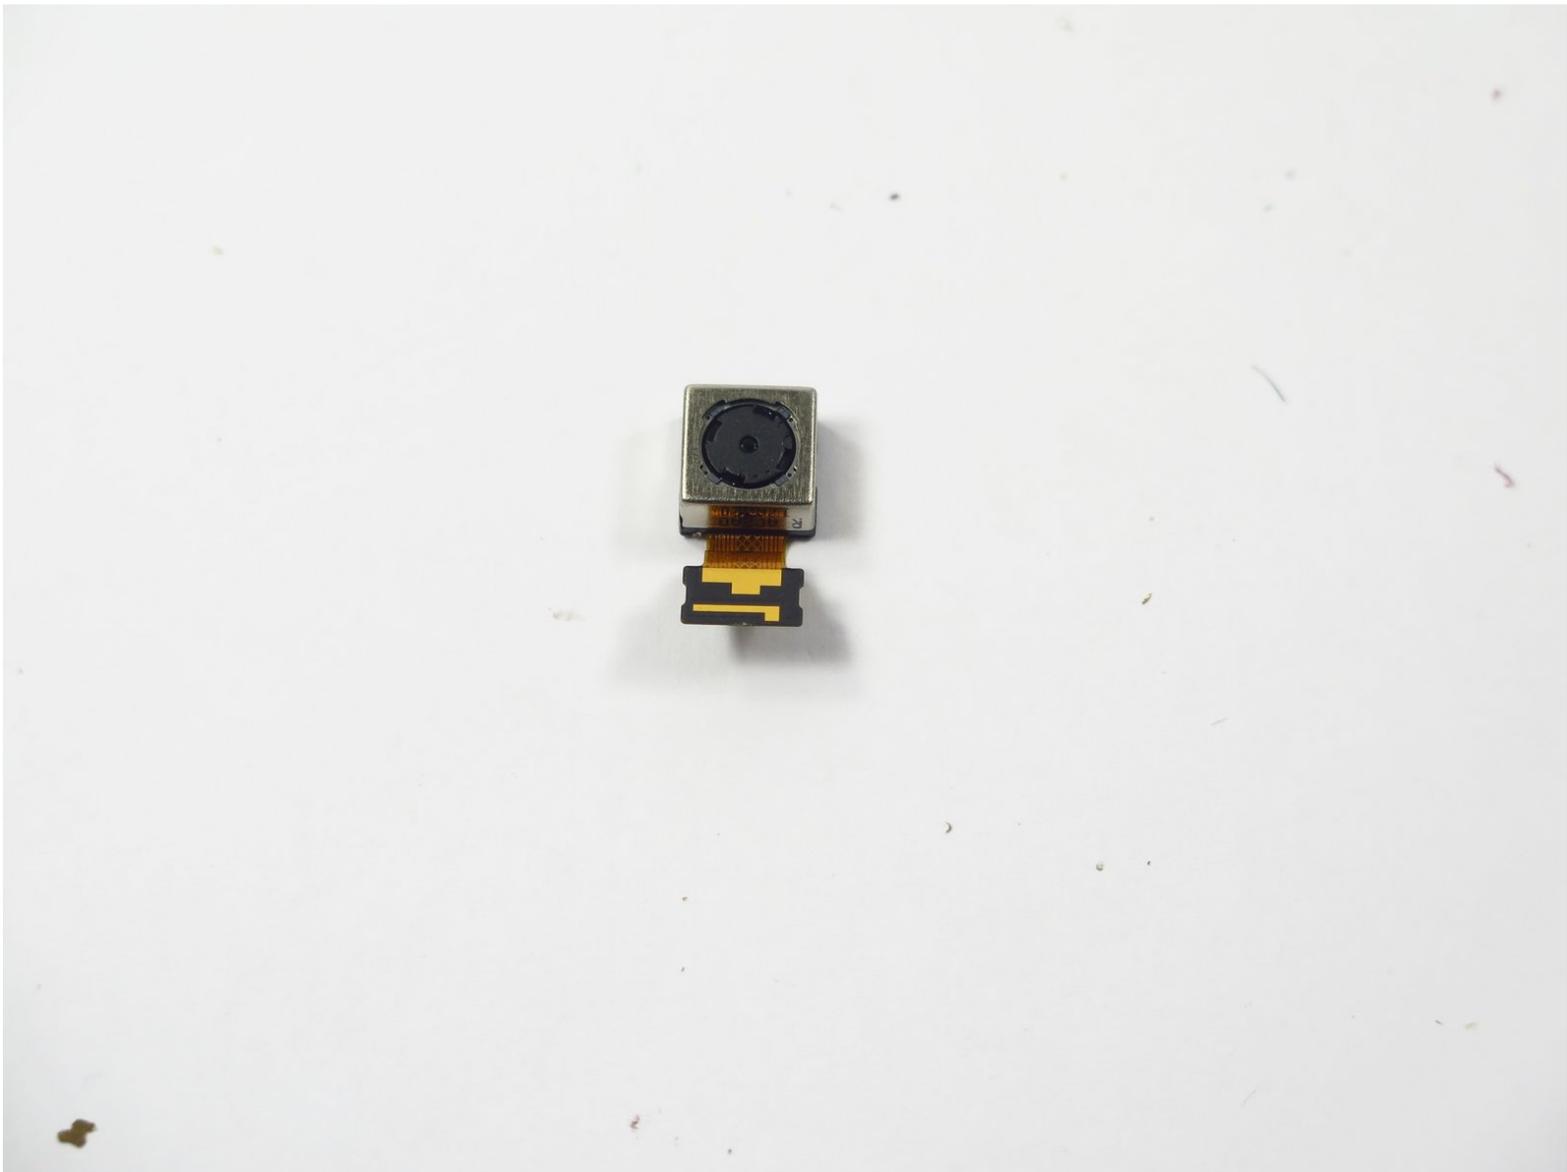

LG Optimus F3 Back Camera Replacement

Replace the back camera of an LG Optimus F3.

Written By: Jonathan Fang



INTRODUCTION

This is a replacement guide on how to replace your back camera unit on your LG Optimus F3.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [64 Bit Driver Kit](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Back Camera



- Remove the battery cover. Unsnapping each corner will allow the cover to come off.

Step 2

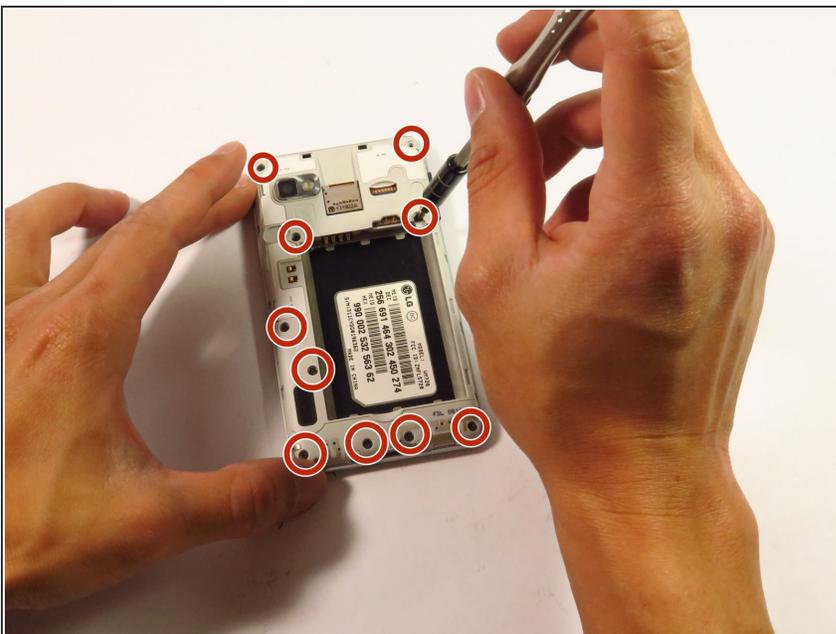

- Unscrew the ten 1.0 mm screws on the back.

Step 3



- Separate the rear plastic case by inserting the opening tool between the seams on all sides.

Step 4



- Located at the top left corner is the camera unit.

Step 5




- Use a plastic opening tool to detach the connector between the back camera and the motherboard.

Step 6



- Use the tweezers to remove the camera by pinching the sides and carefully pulling up.

Step 7

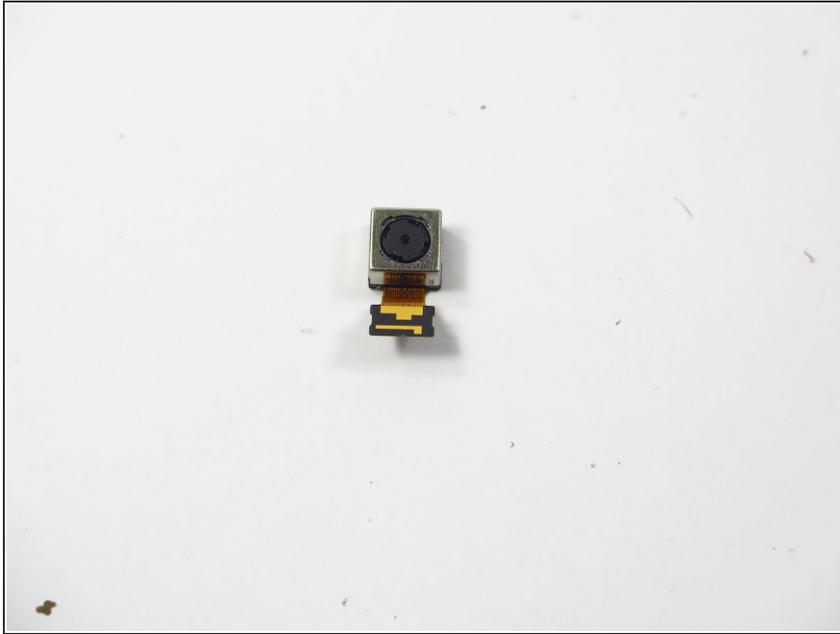

- There you go !

To reassemble your device, follow these instructions in reverse order.