


HTC Ozone LCD Display Replacement

Written By: Marco Jokada

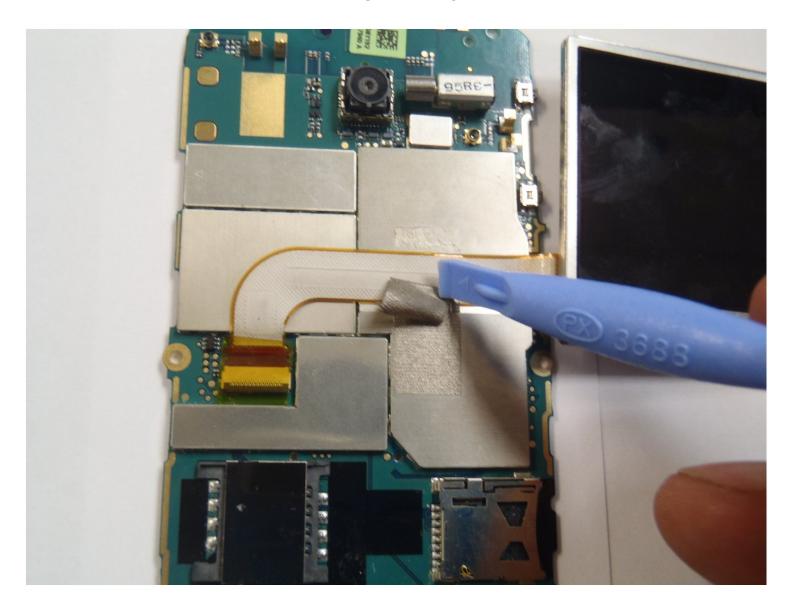

TOOLS:

iFixit Opening Tool (1) Tweezers (1)

Step 1 — Rear Battery Cover



- Flip the phone over to have the rear cover facing up.
 - The camera lens should be towards the top of the phone.



- Slide the cover up, towards the top of phone, to unlock the battery cover.
- Lift the cover off phone and remove it.

Step 3 — Battery



• Use your finger to push the top of the battery downwards and lift the battery out of the phone.

Step 4 — Frame







• Remove the six Torx #5 screws that are securing the rear frame.

Step 5









- Pry the frame open, releasing the eight plastic tabs around the edge of the frame, using the plastic opening tool.
 - (i) A plastic card can be used instead of the plastic opening tool.


Step 6 — Motherboard

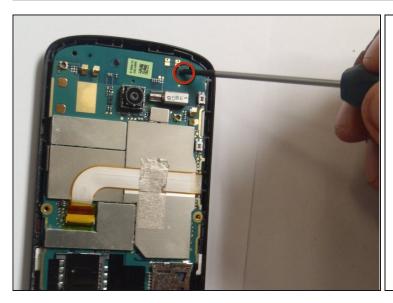


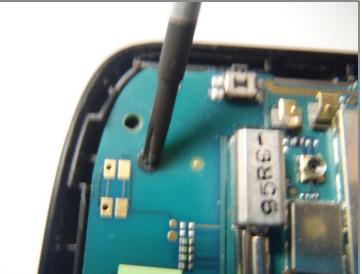

 Remove the single Phillips #0 screw that is securing the motherboard to the front case of the phone.

Step 7

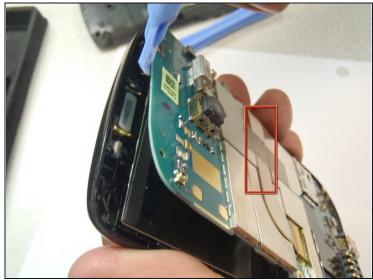

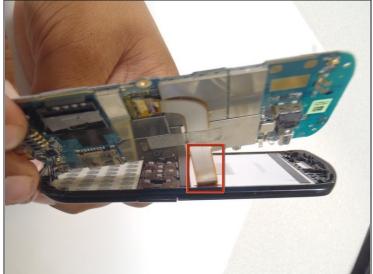

 Pry the motherboard away from the front of the plastic case using a plastic opening tool.


 \triangle Be careful not to break the ribbon cable when prying away the motherboard.




• Remove the plastic cover from the LCD display and the motherboard.

⚠ The Motherboard and the LCD are still attached together.

Step 9 — LCD Display

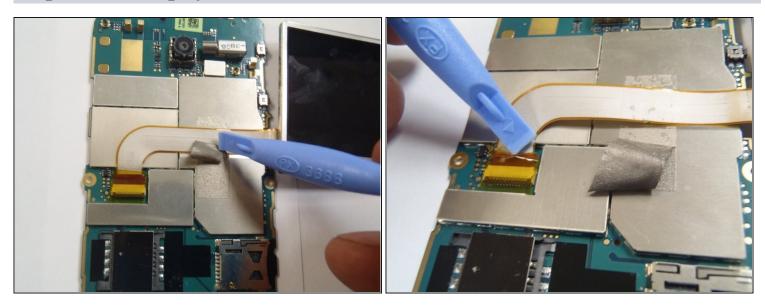


• Remove the gray tape securing the ribbon cable.

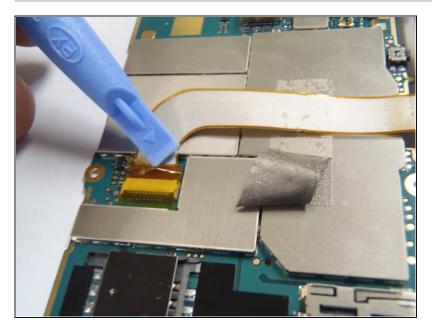

 Remove the yellow tape securing the connector lock.

Step 11

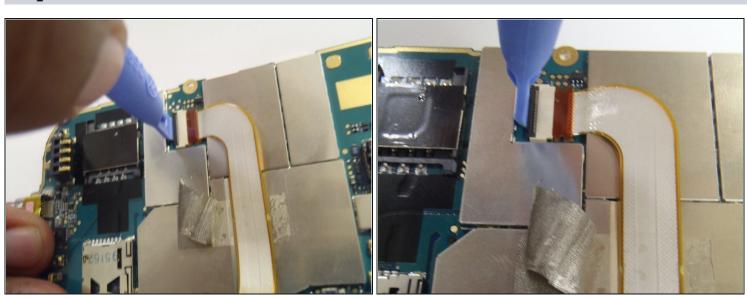


• Carefully lift the black lock to release the ribbon cable, using the plastic opening tool.



 Pull the ribbon cable upwards, disconnecting it from the Motherboard.

Step 13

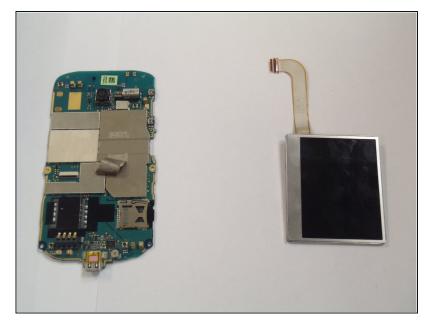

• Lift the Motherboard away from the LCD display.

To reassemble your device, follow these instructions in reverse order.