



LCD Replacement

How to replace the LCD and tactile touch screen (Both need to be changed at the same time).

Written By: Kevin Tran

INTRODUCTION

For those who aren't **confident** for the replacement of the screen, you have to know that it was my first time i changed a screen, so don't worry.



TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #000 Screwdriver](#) (1)

Step 1 — LCD



- Required tools:
- Tools
- LCD Screen and Tactile touch screen
- Optional: Double sided adhesive tape

Step 2




- Don't forget to remove the SIM card and the SD card.

Step 3



- Remove the case tab on the bottom of the phone with a spudger or a pick.

Step 4

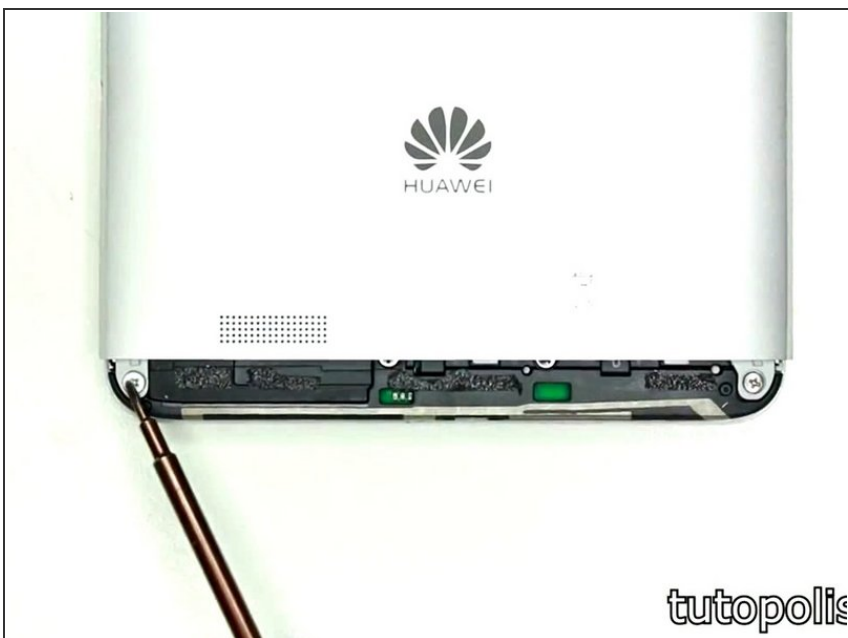

- Unscrew the two screws on the left and right of the case.

Step 5



- Using the spudger/pick, remove the rest of the rear case.
- Once this has been un-clipped, slowly lift the case until you can see the connector between the case and the main body of the phone. Un-clip this with your tool too.

To reassemble the device, follow the instructions in reverse order.