




# Moto X Pure Edition Back Panel Removal

== Prerequisite Only ==

Written By: Lucas Dos Santos

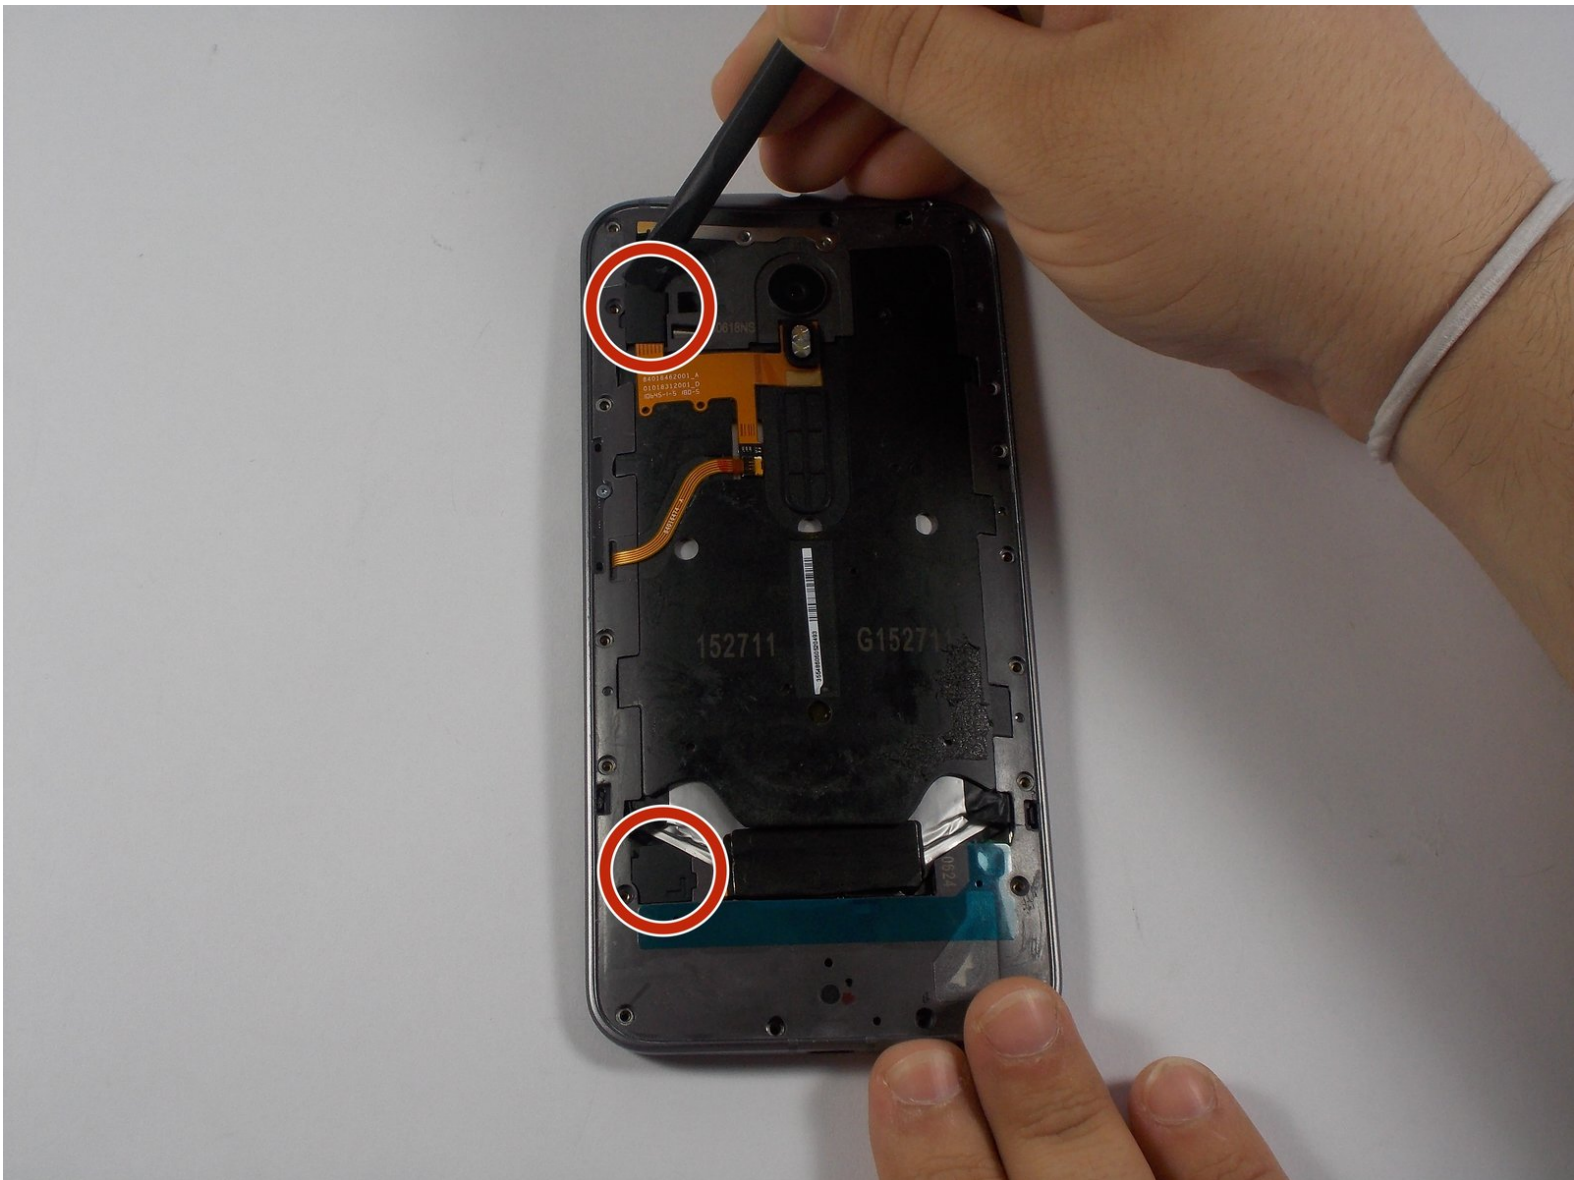



# INTRODUCTION

This is an old version of this guide. See the [new version](#) for the most up-to-date process.




## TOOLS:

- [SIM Card Eject Tool](#) (1)
  - [Spudger](#) (1)
  - [T3 Torx Screwdriver](#) (1)
  - [iFixit Opening Picks set of 6](#) (1)
-



## Step 1 — Back Panel

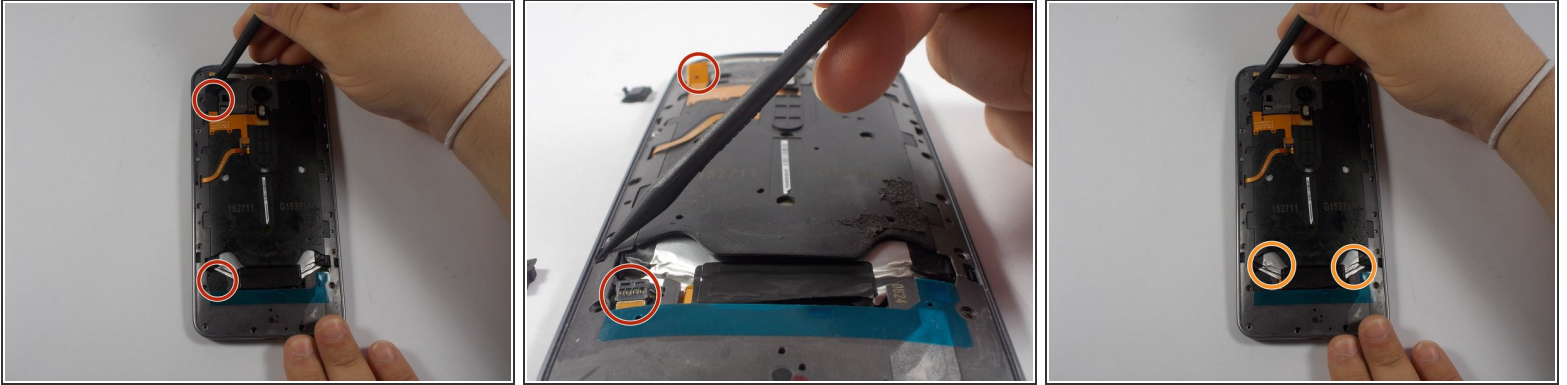

- Disconnect the two battery connections.
- Remove the two parallel black tabs by pulling on them.

## Step 2



**i** All screw lengths are 2.5mm

- Using the T3 screw driver, remove all 20 T3 screws.
- Do NOT remove the silver screw circled in orange.
- ⚠ This holds in the Power/Volume buttons and is not necessary to remove. There are 2 very tiny springs behind the volume buttons that are easy to lose if you remove this screw.
- Using the nylon spudger, remove the two clips holding the panel in place.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 05:05:01 AM (MST).



