



# Acer Aspire TimelineU M5-481TG Battery Replacement

How to replace a Acer Aspire TimelineU M5-481TG laptop battery.

Written By: Christina Crasto



## INTRODUCTION

The Acer TimelineU M5-481TG laptop is a 14-inch Ultrabook that is the smaller version to the Aspire TimelineU M5-581TG-6666 weighing in at 4.4 lbs. Several battery models exist for this laptop such as the AP12A3i, AP12A4i, 3ICP7/67/90, KT. 00303.002, BT. 00304.011. Other generic batteries exist but ensure that they are compatible with the M5-481TG model laptop.


Before performing any repairs, make sure the Acer Aspire TimelineU M5-481TG laptop is fully powered off and disconnected from its charger. Removing the battery includes first removing the keyboard and gently disconnecting wires to lift up the motherboard. Here is an [article](#) on how to identify a bad battery.

---

### TOOLS:



- [iFixit Opening Tool](#) (1)
  - [64 Bit Driver Kit](#) (1)
-

## Step 1 — Keyboard

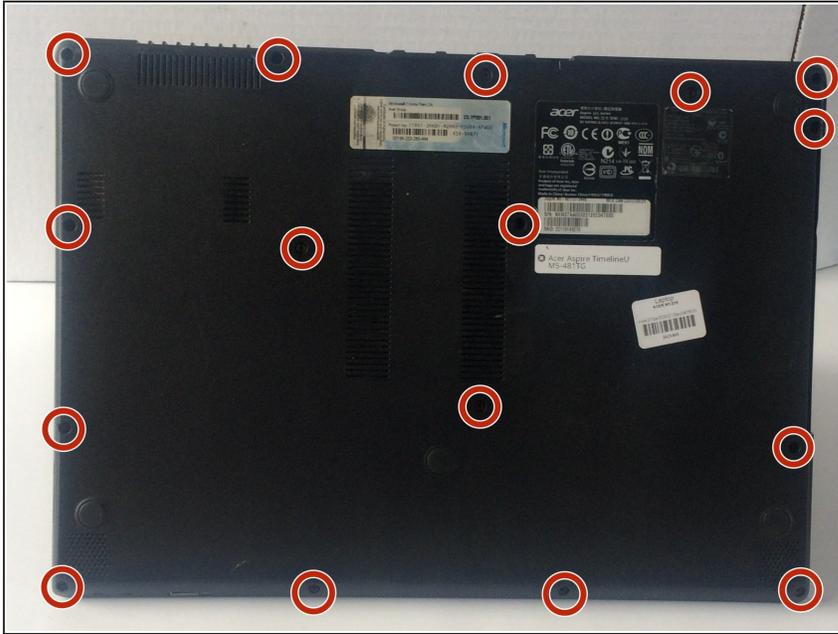


- With the laptop closed and powered off, place the laptop screen side down.
- Turn the laptop so that the hinges are closest to you.
- Remove sixteen 6 mm screws from the bottom of the laptop with the Phillips #00 screwdriver.

## Step 2

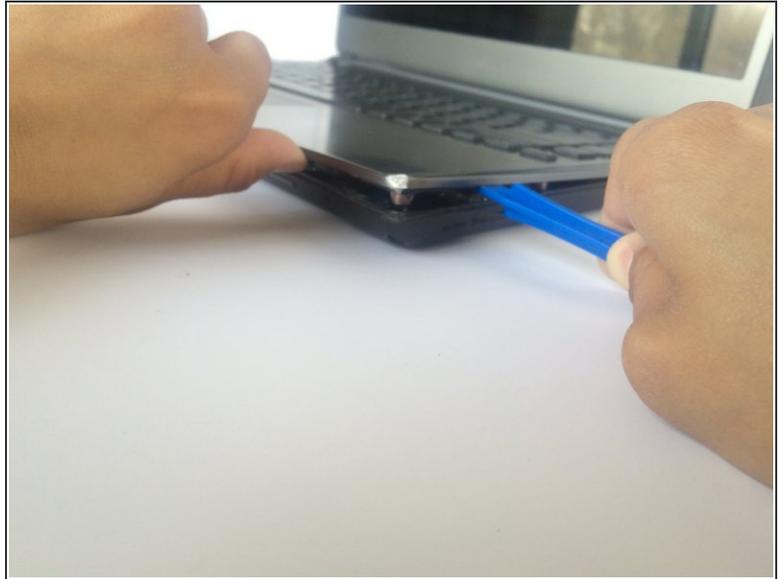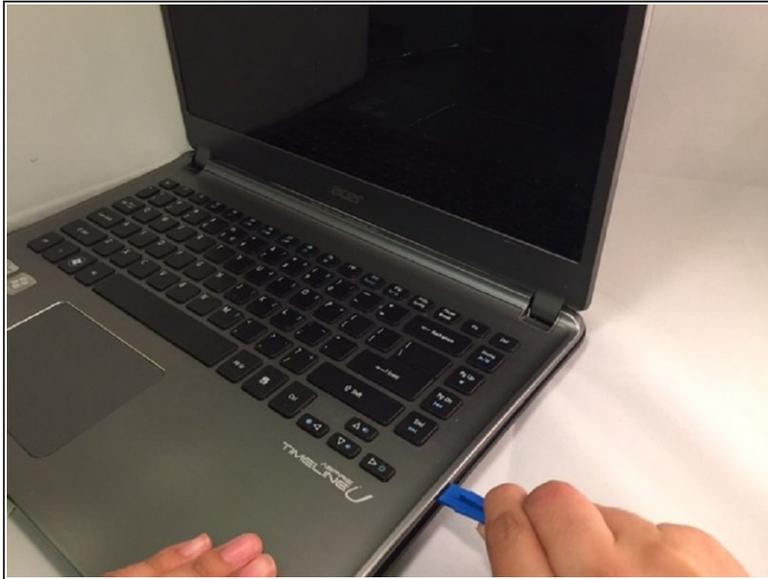

- Flip the laptop over and open the lid.
  - Use the plastic opening tool with the half centimeter wide tip to gently separate the bottom case of the laptop from the keyboard.
- ⚠ Potential for device damage: Do not apply too much force or you may break the clips.**
- Gently pull the keyboard upwards to a 45 degree angle.

### Step 3

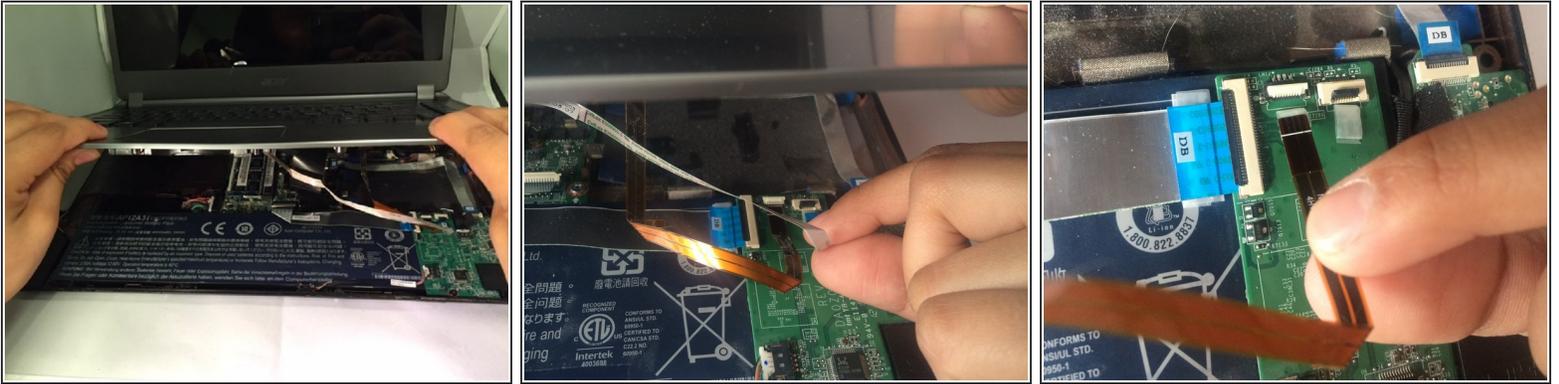

- Hold the keyboard open with one hand to extend the three cables (white, black and copper) still connecting the bottom of the keyboard to the back case.

**⚠ Be sure you are prying up the hinged retaining flap, not the connector itself.**

- Use your fingernail to flip up the small retaining flap of each zero insertion force connector and then gently pull each ribbon cable out one at a time.
- 📌 The white line on this ribbon cable marks the edge of the connection area. To reinstall, insert the cable into the connector up to this line and then close the retaining flap. If the cable doesn't insert easily up to (or very near to) this line, it's probably misaligned and needs to be gently removed and repositioned.

## Step 4



- Use both hands to remove the keyboard.

**⚠ Potential for device damage: Do not pull too forcibly or you could damage your keyboard.**

## Step 5 — Battery



- Gently disconnect the silver cable that stretches over the battery by using your fingernail to flip up the small retaining flaps on both sides of the zero insertion force connector.

⚠ **Potential for device damage: Be sure you are prying up the hinged retaining flap, not the connector itself.**


- ✦ The white line on this ribbon cable marks the edge of the connection area. To reinstall, insert the cable into the connector up to this line and then close the retaining flap. If the cable doesn't insert easily up to (or very near to) this line, it's probably misaligned and needs to be gently removed and repositioned.

## Step 6



- Remove one 3 mm screw from the side closest to you on the motherboard with a JIS #1 screwdriver.
- Remove one 4 mm screw from the right side of the motherboard with a JIS #1 screwdriver.

## Step 7

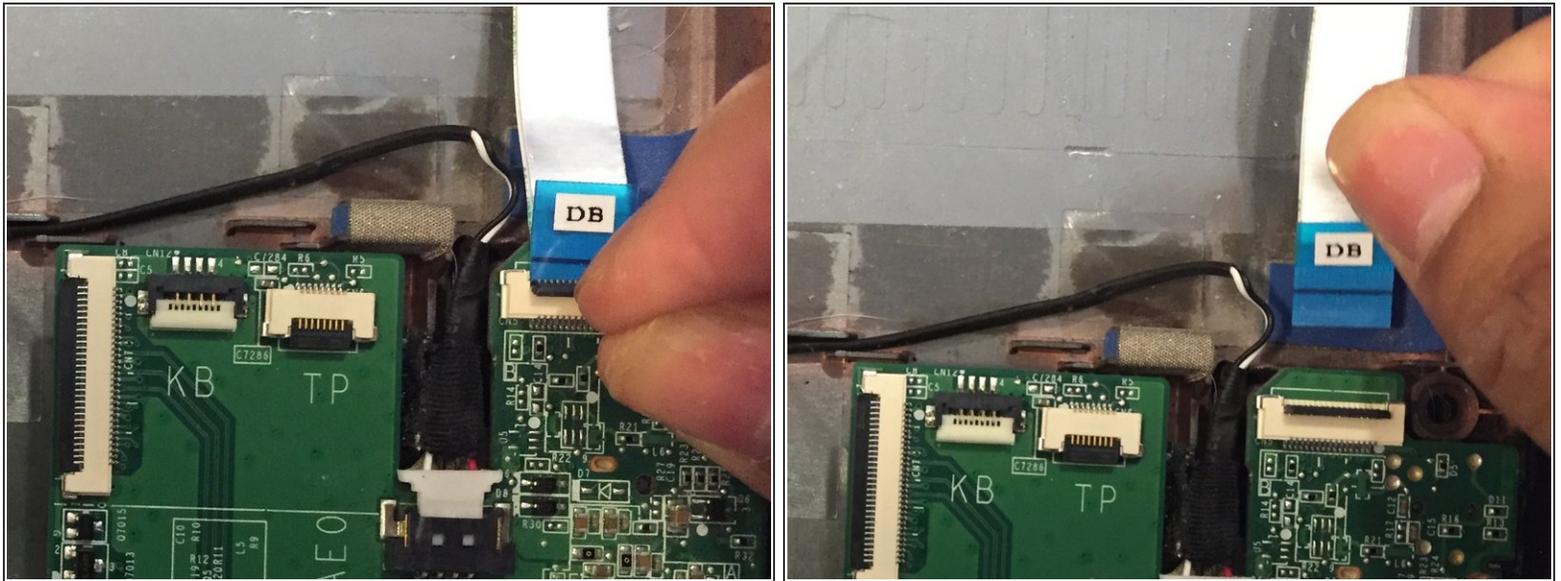


- Use your fingernail to flip up the small retaining flap of the zero insertion force connector and then gently pull out the silver ribbon cable.

**⚠ Potential for device damage: Be sure you are prying up the hinged retaining flap, not the connector itself.**

- ☞ The white line on this ribbon cable marks the edge of the connection area. To reinstall, insert the cable into the connector up to this line and then close the retaining flap. If the cable doesn't insert easily up to (or very near to) this line, it's probably misaligned and needs to be gently removed and repositioned.

## Step 8

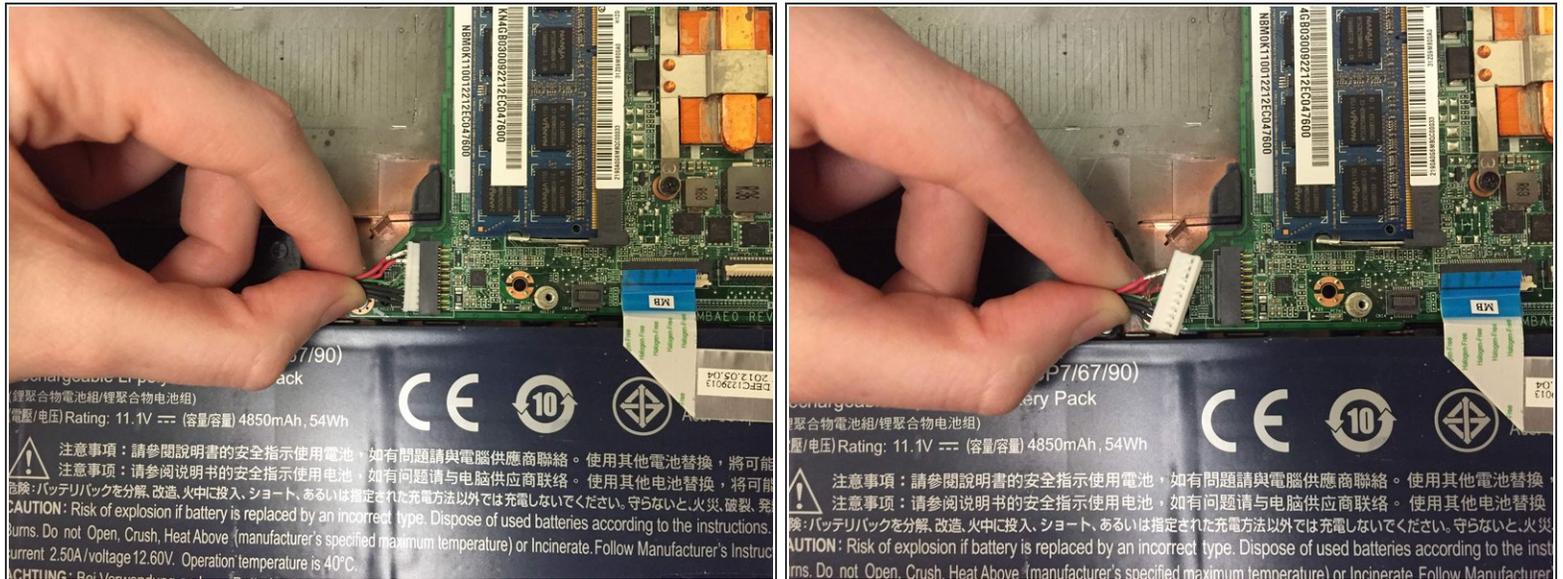

- Gently disconnect the six bundled cables (red, black, and green) attached to both the battery and motherboard by pinching them with your thumb and forefinger. Pull with moderate force towards the left to disconnect.

## Step 9



- Gently lift up the black-covered cables that remain connected to the motherboard at the bottom left of the laptop base.
- Move the cables toward the bottom edge of the laptop closest to you without disconnecting them.

**⚠️ Potential for device damage: Do not pull too forcibly or you could damage your motherboard.**

- Carefully lift up the motherboard and slide the battery to the left to pull it out.

This document was generated on 2021-12-27 12:32:55 AM (MST).

To reassemble your device, follow these instructions in reverse order.