



Wiko pulp 4g Touch screen Replacement

Follow this guide to replace the touch screen and other components inside the phone

Written By: Smilzo



INTRODUCTION


Follow this guide to replace the touch screen and other components inside the phone

Step 1 — Touch screen




- Remove back cover
- Remove battery

Step 2

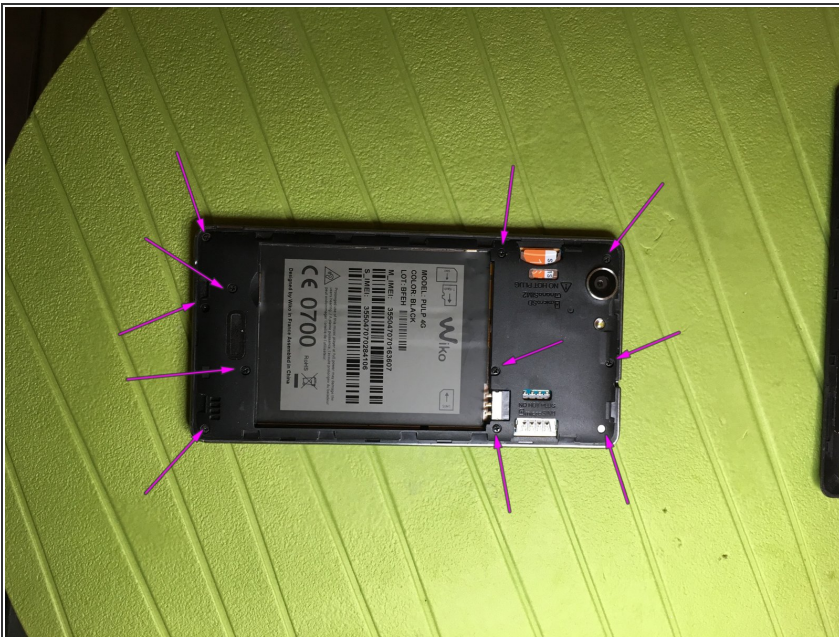



- remove the screws marked, attention is covered by a white sticker

Step 3

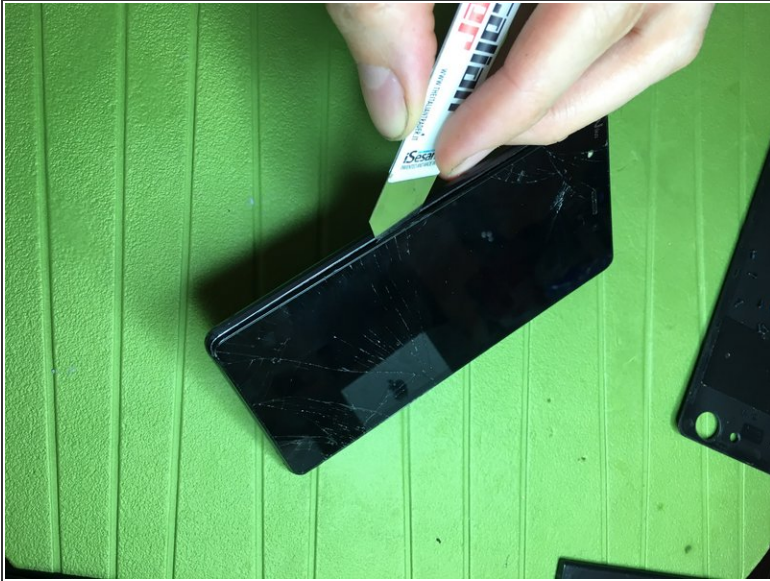

- using a thin tool separate the middle frame from the body display

Step 4

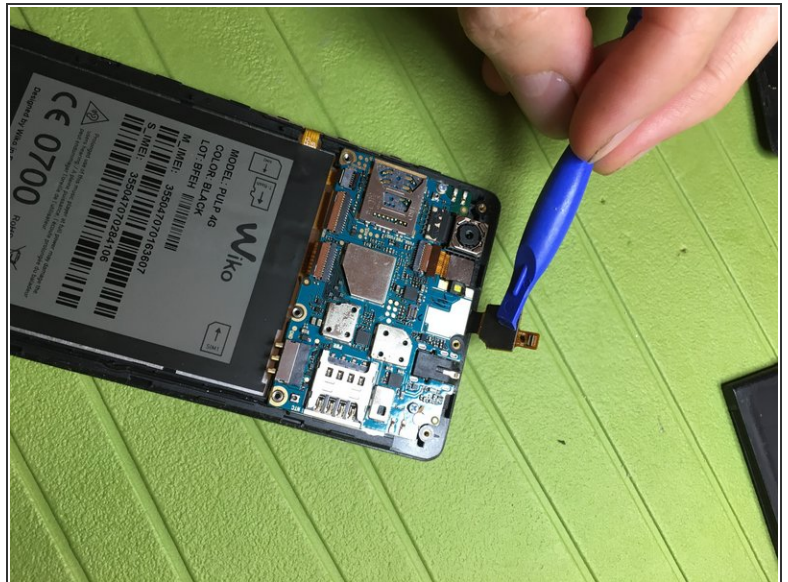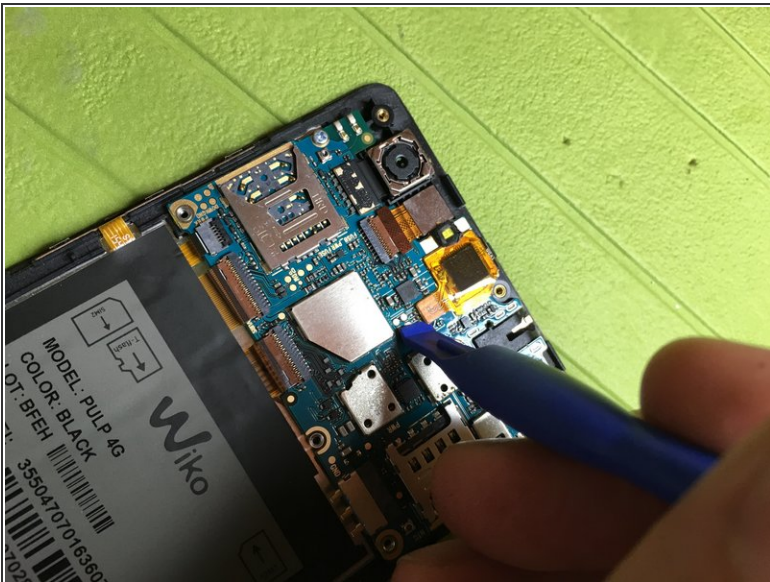

- unhook touchscreen connector

Step 5




- Remove 2 screws securing the motherboard
- Unfasten the connectors
- remove front and rear cameras

Step 6




- Unhook cable connection between top and bottom card
- remove top motherboard

Step 7

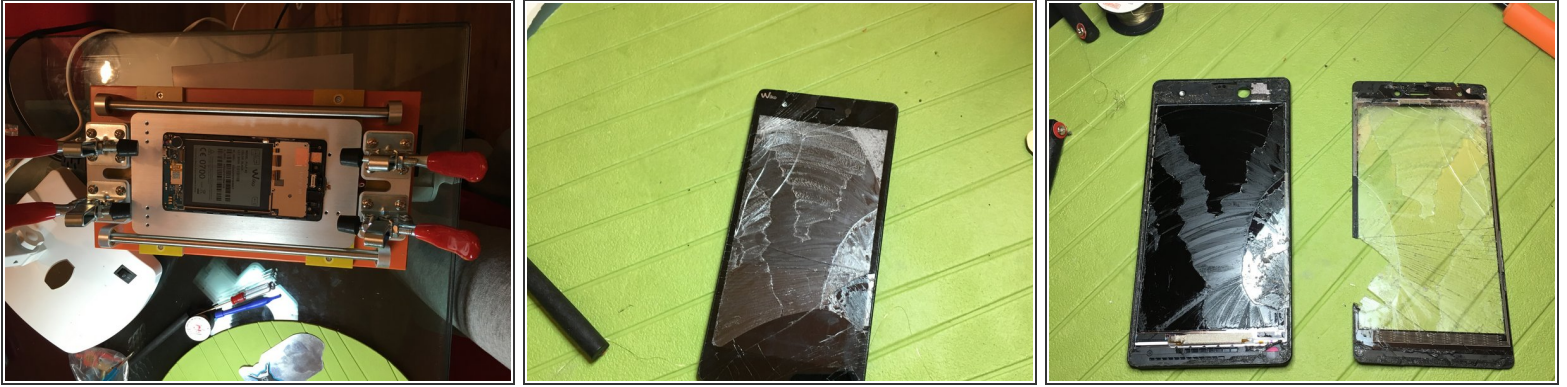

- Heat the phone with a 80-degree plate or with an appropriate dryer
- With the help of tools or special thin wire begin to separate from the touch glass display
- Utmost care not to break the display, be sure to insert between the touch screen display instruments and not between glass and touch screen ..
- There are no flat key is therefore the only attention to the display

Step 8

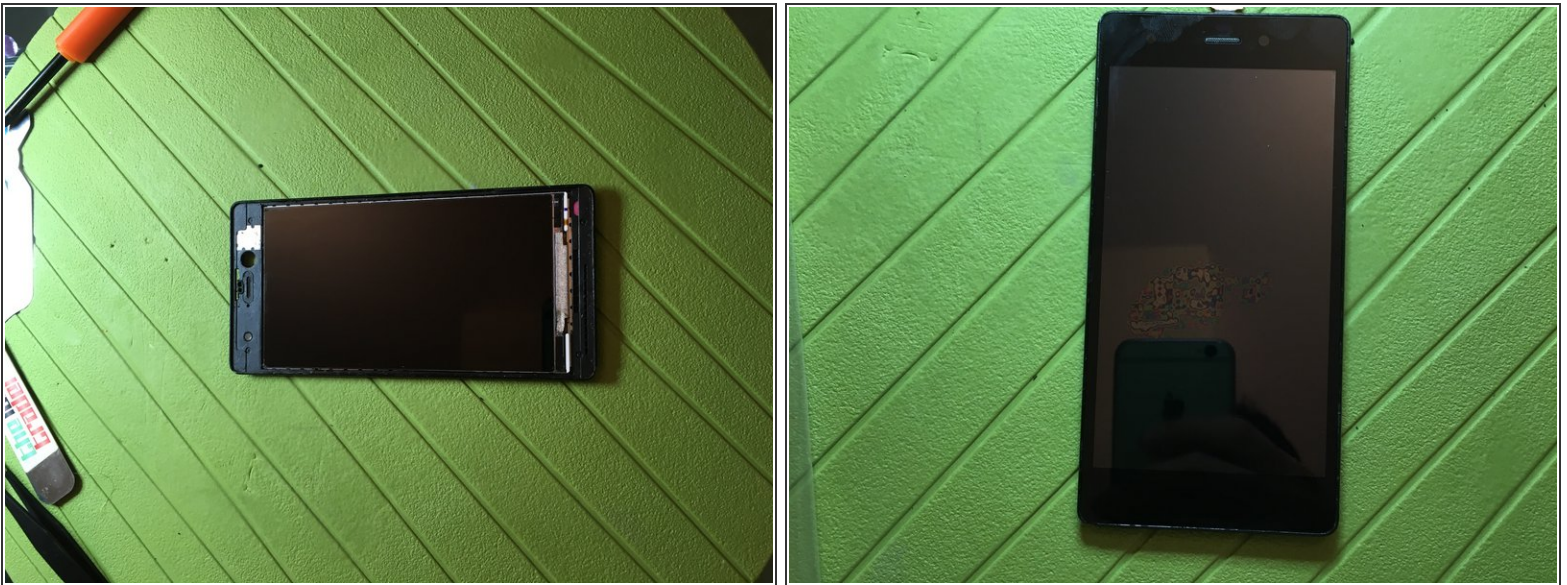

- Clean the display from the sticky residue
- applying adhesive on the edges and the new touchscreen glass

To assemble the device, follow these instructions in reverse order.