




# Porter-Cable PC60TAG Motor Brush Replacement

Replace the brushes of your Porter-Cable PC60TAG.

Written By: Mackenzie Fairbanks

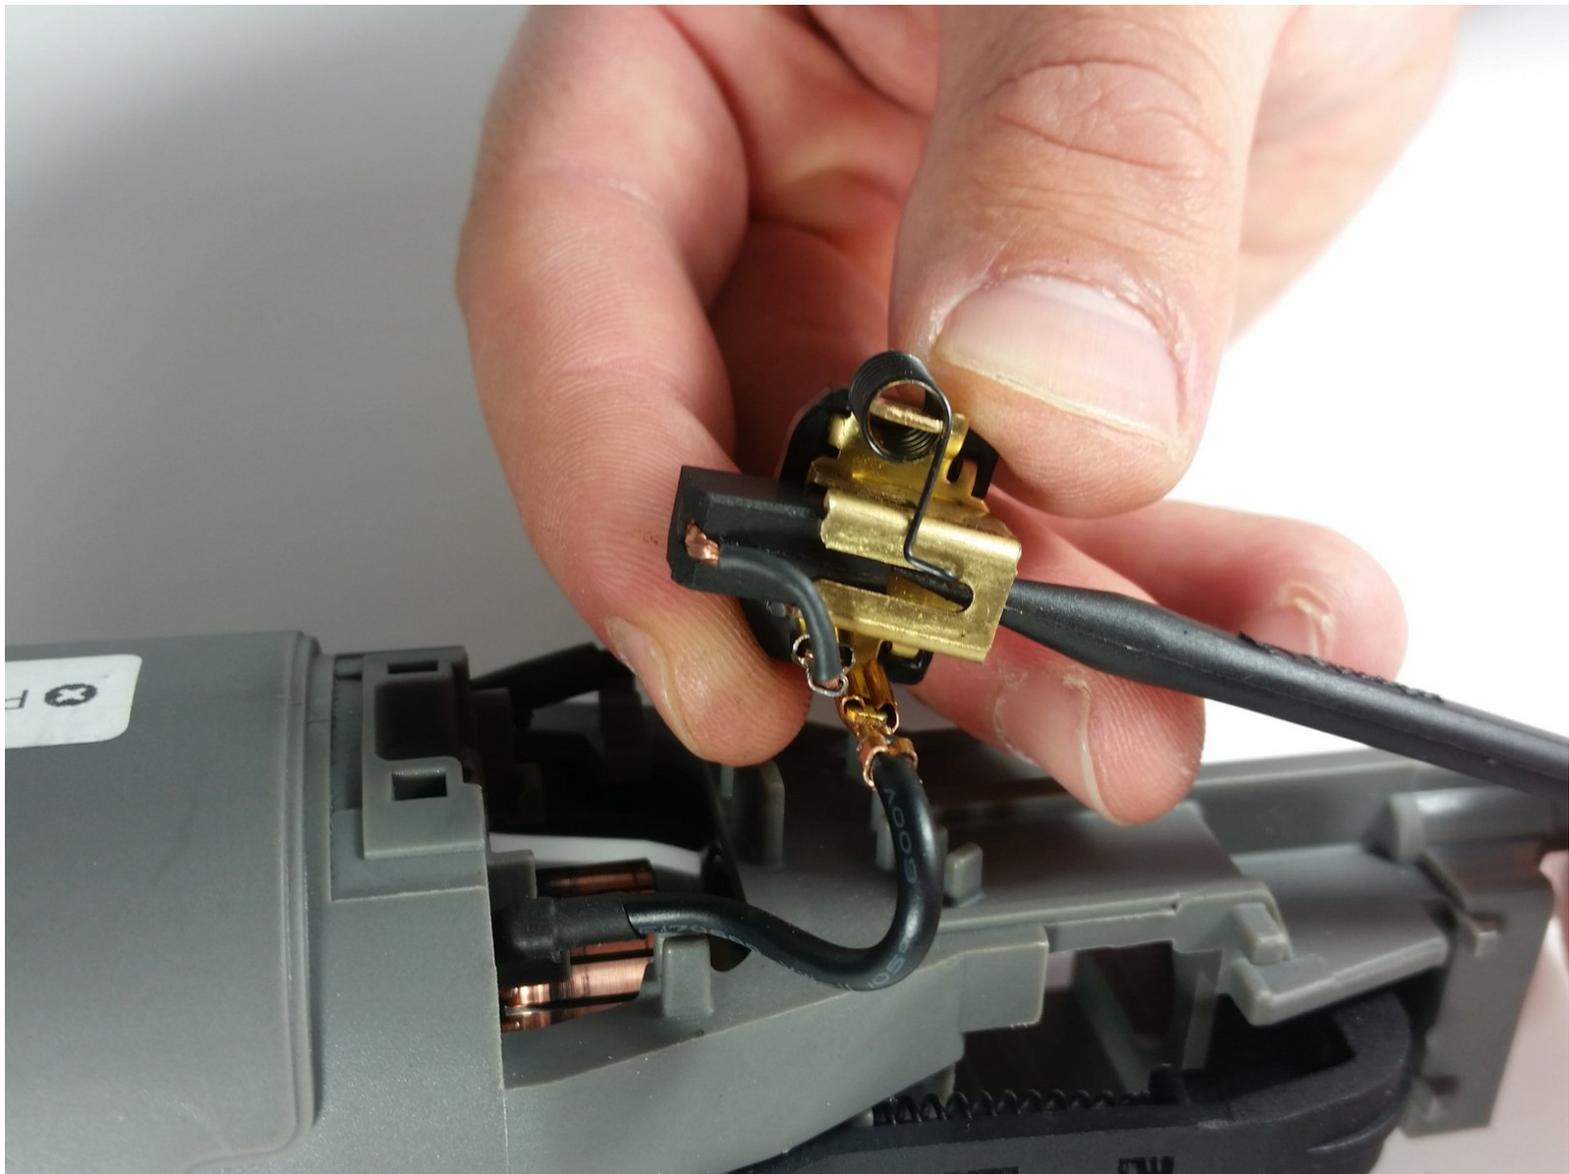

---

## INTRODUCTION

The motor brushes of the Porter-Cable PC60TAG provide a conducting path to the motor, and they may eventually wear down as the device begins to age. Use this guide to replace the brushes of your Porter-Cable PC60TAG.

---

### TOOLS:


- [Phillips #2 Screwdriver](#) (1)
  - [Heavy-Duty Spudger](#) (1)
  - [Small Needle Nose Pliers](#) (1)
-

## Step 1 — Motor Brush




- Using the Phillips #2 screwdriver, remove the 3/4" screw on the back cover.
- ⚠ Unplug the grinder before disassembling.

## Step 2

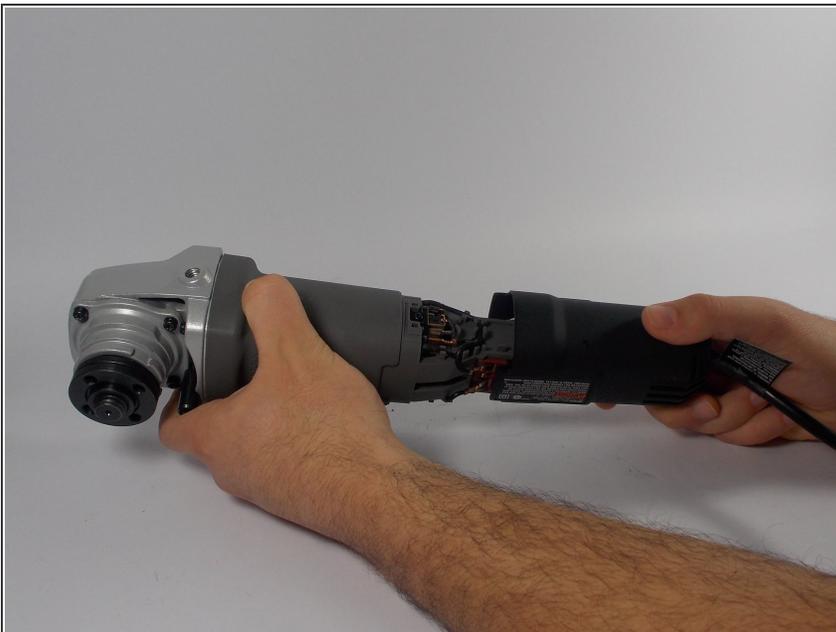

- Holding the front of the device, carefully slide the back cover over the cord.

### Step 3

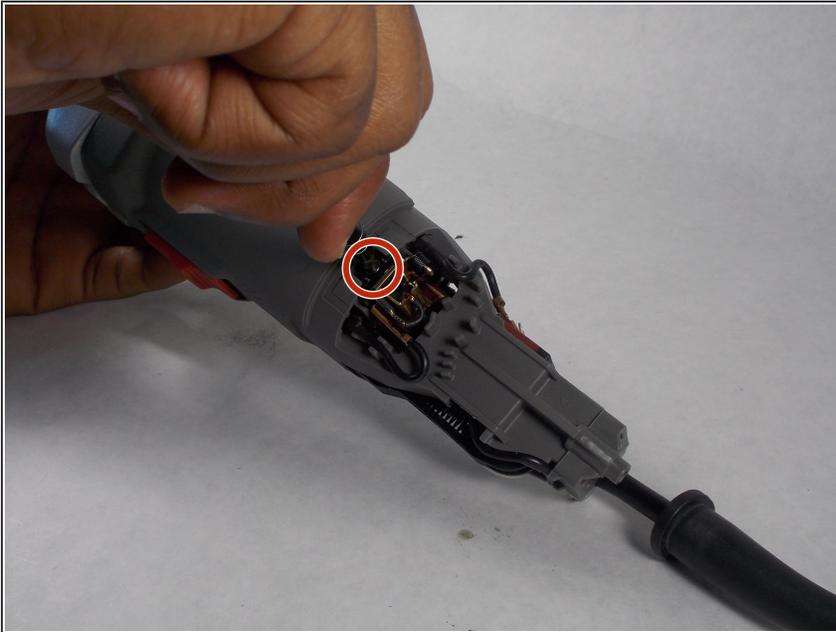

- Using the Phillips #2 screwdriver, remove the 1/2" screw holding on the motor brush arm.

### Step 4





- Carefully pull the motor brush arm away from the other device.

## Step 5




- Using the spudger, carefully lift the spring on the motor brush arm off of the motor brush and gently pull it to the side of the motor brush arm.
- ⓘ Be careful not to over bend the spring, as this could damage the spring and require replacement.

## Step 6

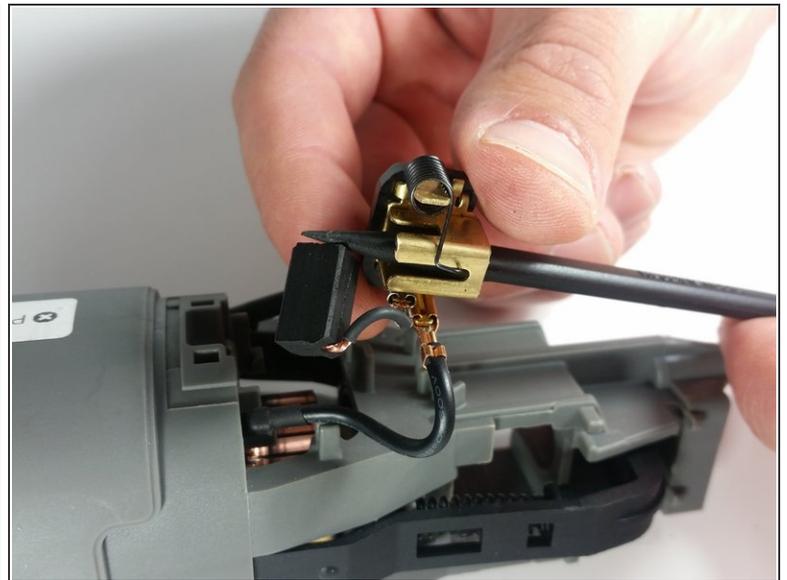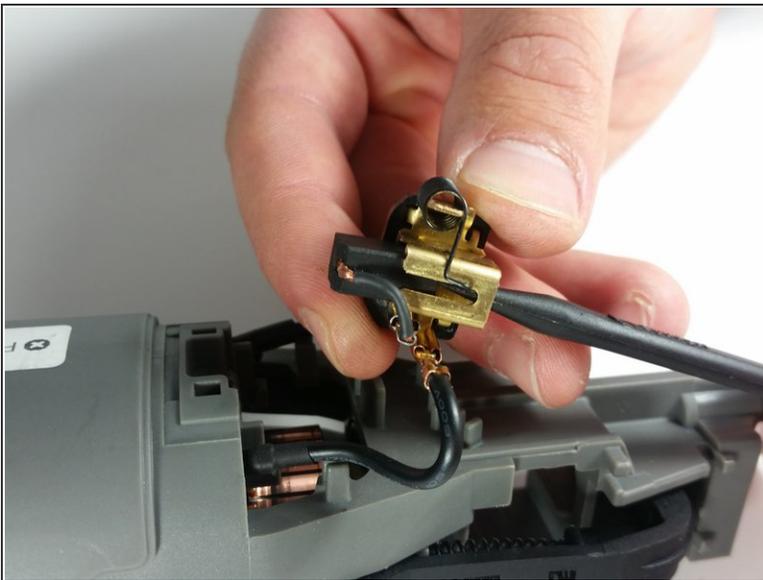

- Using the spudger, gently push the motor brush out of the arm.

## Step 7

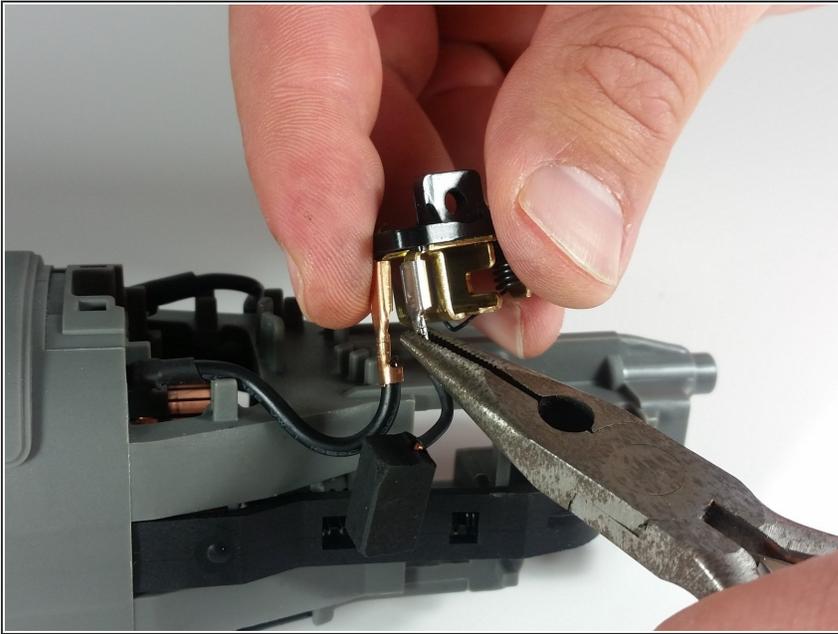

- Using a pair of needle nose pliers, gently pull the motor brush terminal off of the motor brush arm.
- Repeat steps 3-7 on the other side of the device.

To reassemble your device, follow these instructions in reverse order.