



HP ProBook 4520s Screen Replacement

This guide will show you how to access and replace the HP ProBook 4520s screen component.

Written By: Robert Spencer Harrison



INTRODUCTION

If your laptop screen is cracked or appears dark while the computer is running, replace the screen.

TOOLS:


- [Metal Spudger](#) (1)
 - [T9 Torx Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery




- Flip the 4520s upside-down with the front toward you.
- Push the two latches below the battery inwards at the same time.

Step 2

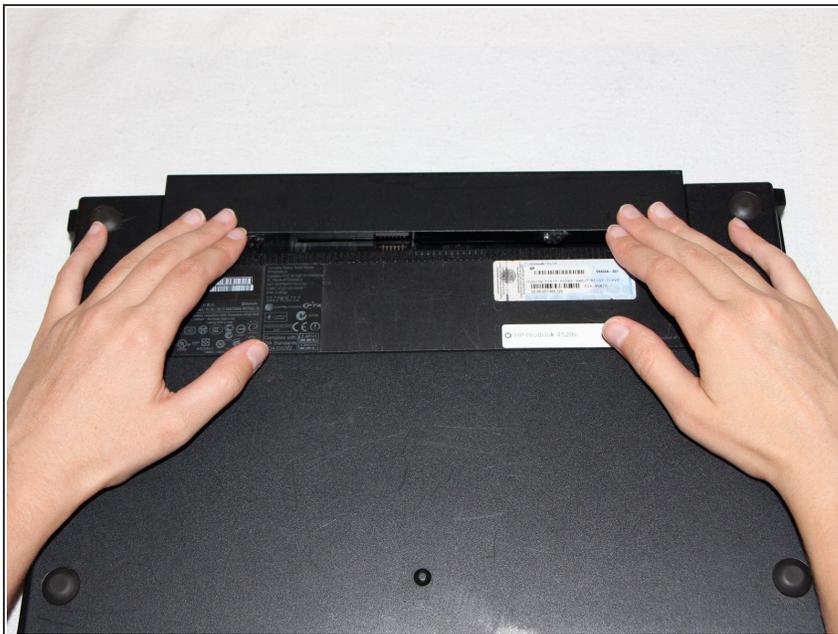


- Remove the battery by holding the latches and sliding the battery away from you.

Step 3 — Switch Cover

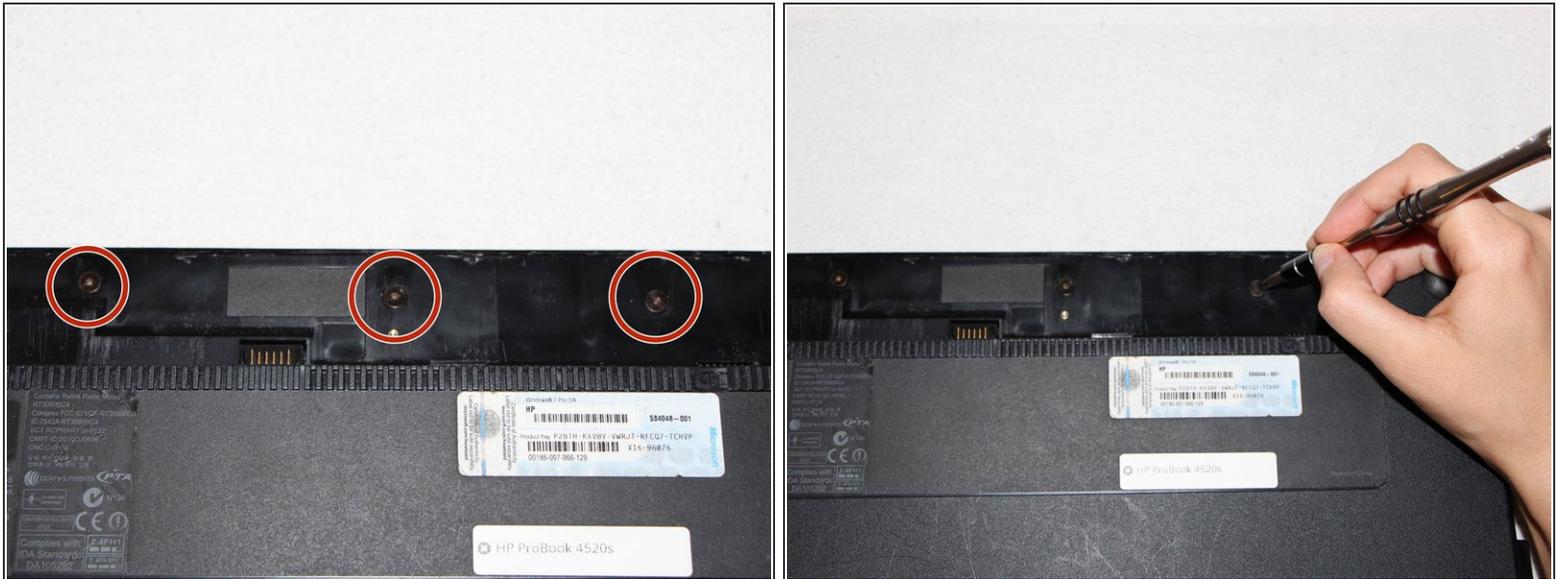

- Use a Phillips #1 screwdriver to remove three 2mm screws where the battery was located.

Step 4

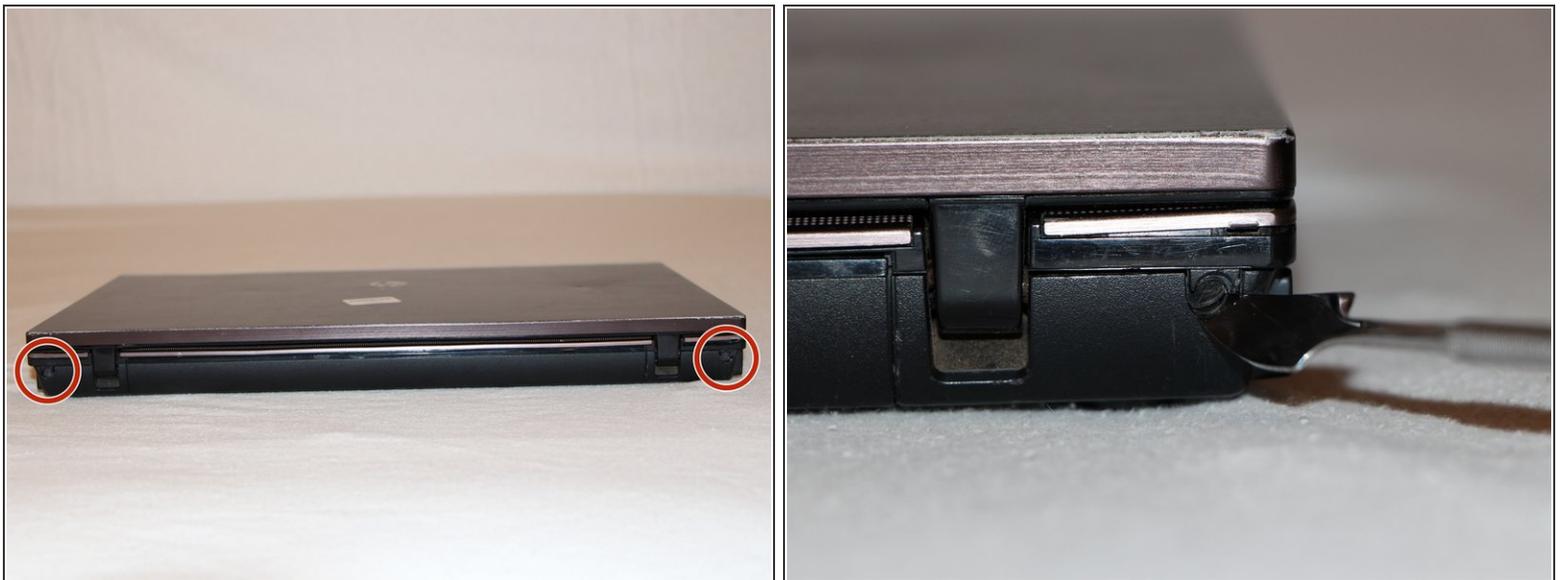

- Flip the 4520s over and rotate it so the back is facing you.
- Use a metal spudger to peel off two rubber caps located on either side of the battery port.

Step 5



- Use a Phillips #1 screwdriver to remove the 3mm screws behind the caps.

Step 6




- Rotate the 4520s and then open it with the screen facing you.
- The switch cover is located above the keyboard. Push the switch cover away from you until it comes loose from the 4520s.
- Lift the switch cover away from the 4520s and set it aside.

Step 7 — Screen



- Use a metal spudger to remove four rubber caps at the bottom of the screen border.

Step 8

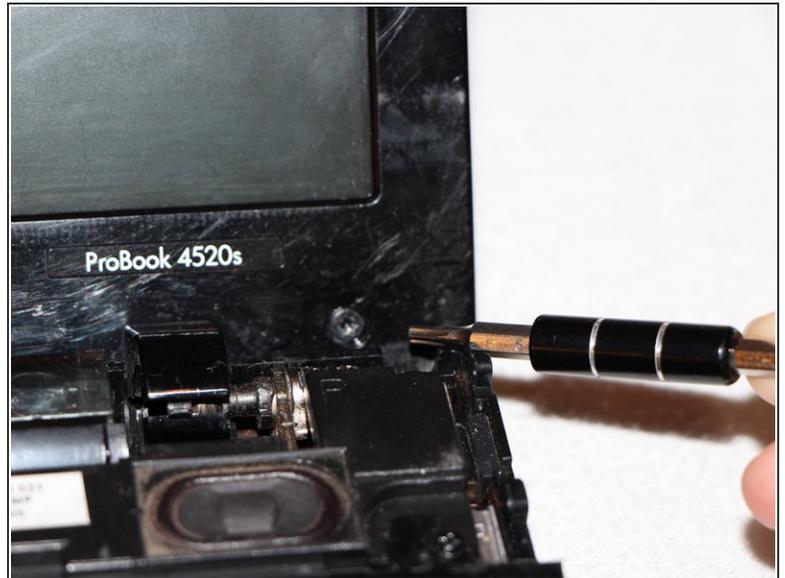

- Use a Torx (T9) head screwdriver to remove the four 5mm screws beneath the rubber caps.

Step 9




- Pry open the tabs behind the border of the screen using a metal spudger.
- Set the border of the screen aside.

Step 10



- Use a Torx (T9) head screwdriver to remove two 5mm screws above the screen, and two more screws below it.
- ☑ The bottom set of screws is installed on the innermost screw holes.

Step 11

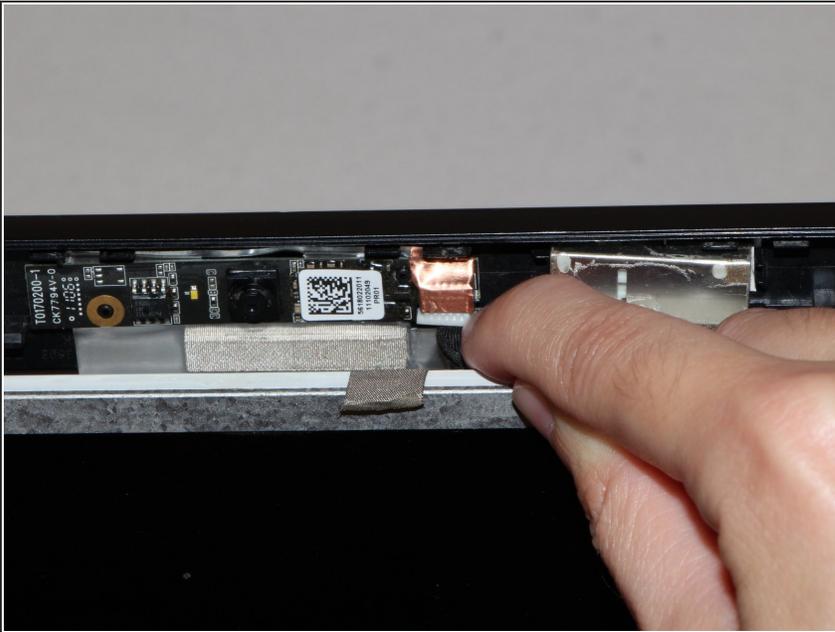


- Above the screen is a bronze port with a cable connected to it. Disconnect the cable using a metal spudger or your finger.

Step 12




- Gently push the back cover away.

Step 13

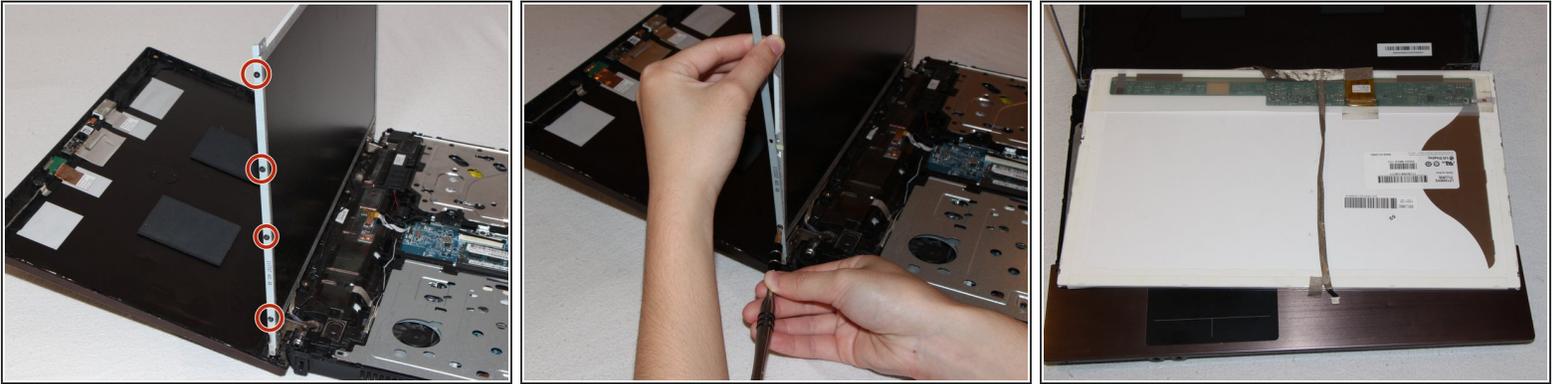



- Use a Phillips (PH1) head screwdriver to remove eight 2mm screws from the screen. Four of the screws will be on the left side and four will be on the right.
- Place the screen face down.

Step 14

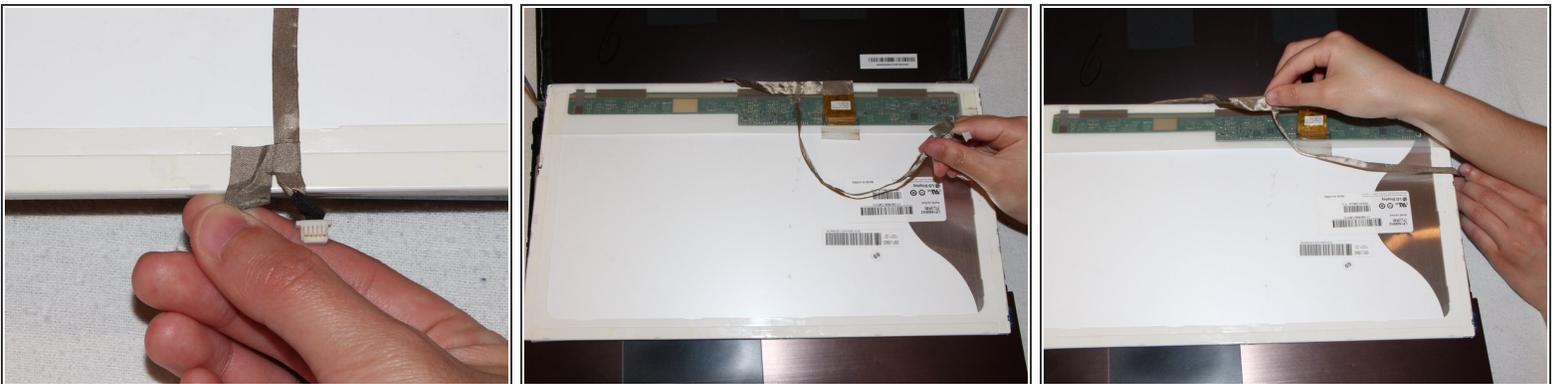

- Peel the ribbon cable away from the screen.

Step 15

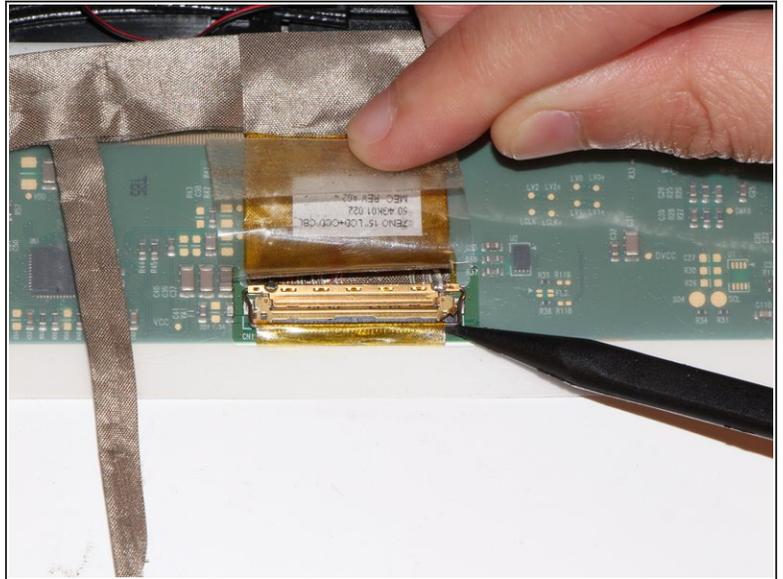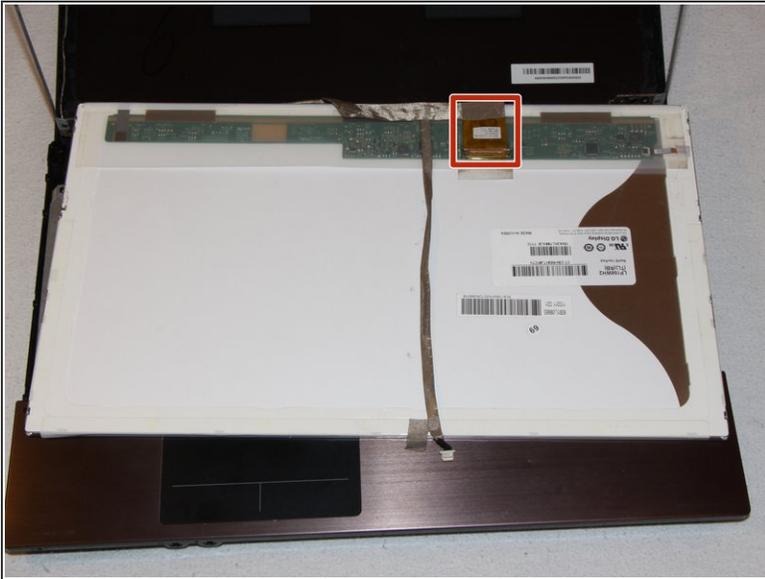

- To open the clamp for the ribbon cable, use a spudger to pry up the metal bar securing it to the screen.
- Disconnect the cable after freeing it from the metal bar

To reassemble your device, follow these instructions in reverse order.