




Acer Aspire One D257 Keyboard Replacement

Described how to remove the keyboard.

Written By: Claes

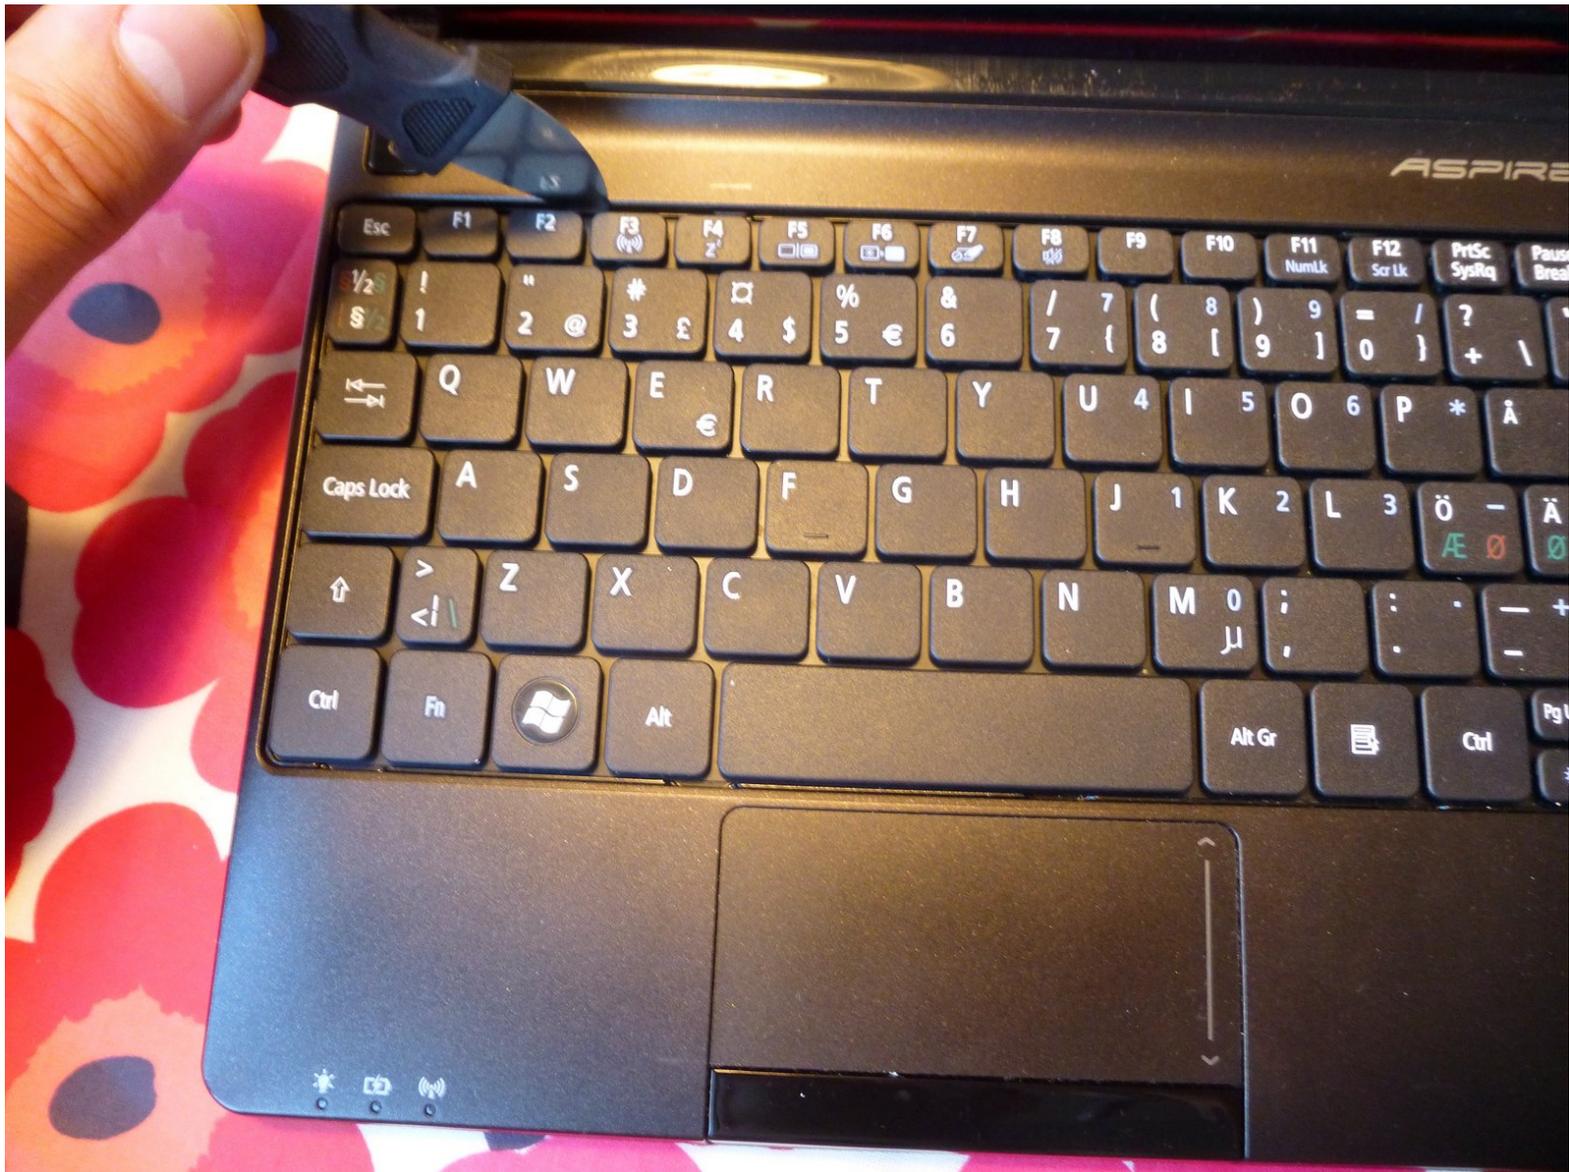

INTRODUCTION

Describes how to remove the keyboard.

TOOLS:


- [Jimmy](#) (1)
EU145259
 - [Metal Spudger](#) (1)
EU145012
 - [Spudger](#) (1)
-

Step 1 — Battery



- Put the netbook, so the back side is upwards.

Step 2

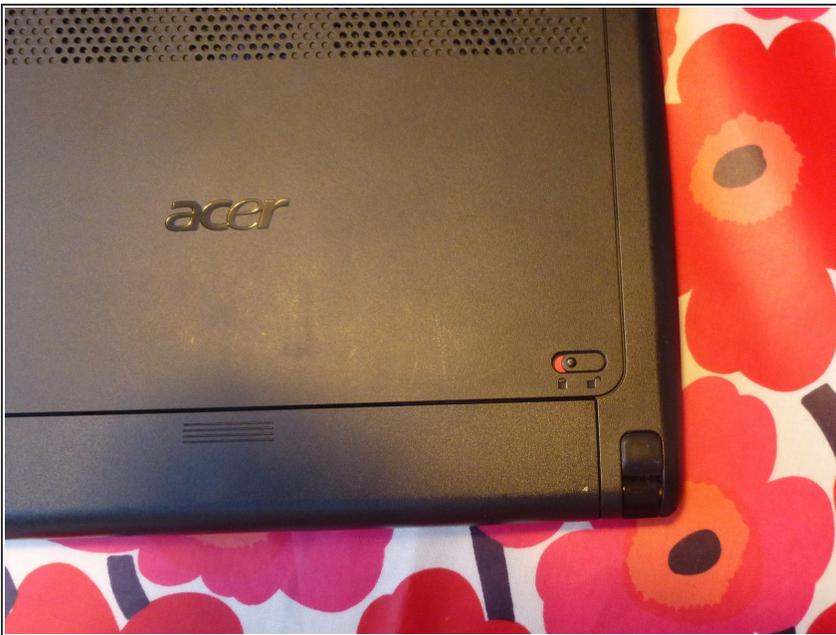


- Push the right lock to the right so the red filed is visible on the left.

Step 3




- Now move the left lock which is spring loaded to the left and keep it there. Then with the other hand remove the battery by pulling down.
- When reassembling the new battery push it up into the netbook and do lock the right by moving it to the left so the red field disappears.

Step 4 — Keyboard

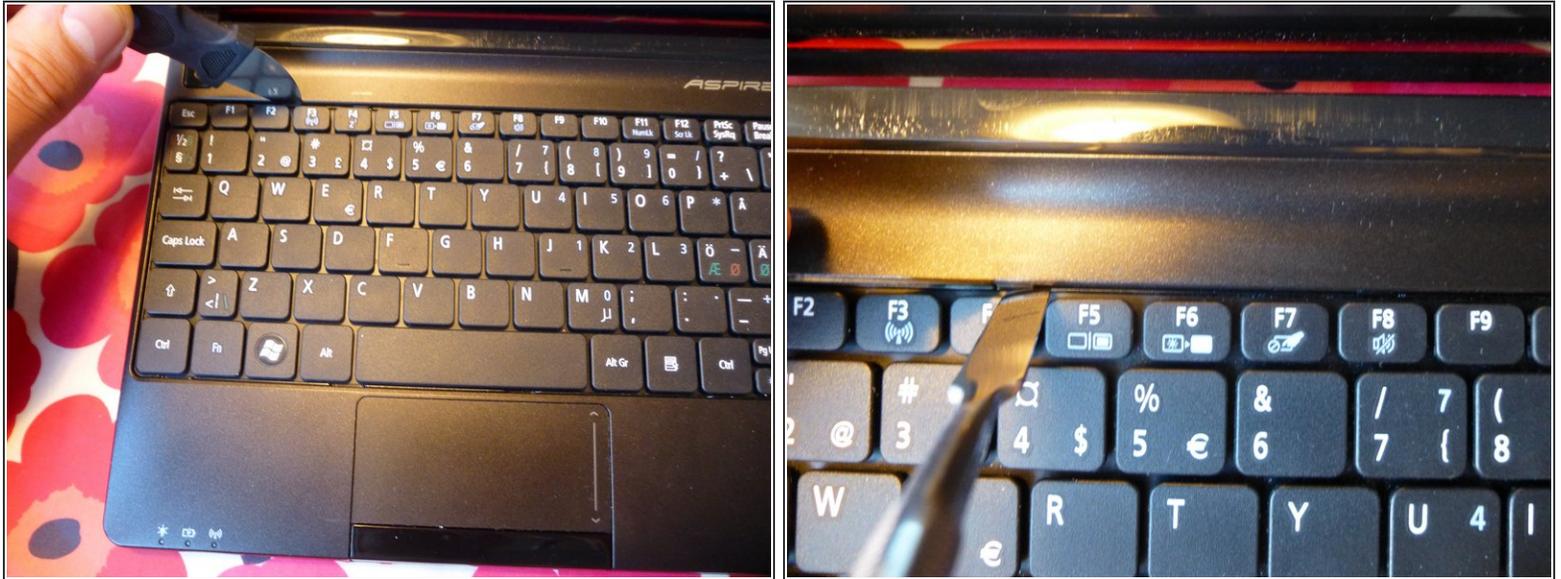

- Open the lid of the netbook. Use the Jimmy from the upper left corner of the keyboard. Put it between the keyboard and the casing and move it to the right. It might help to use a metal spudger to push in the pins holding the keyboard in place.
- Then move down along the sides where there is one pin on each side. After that twist the keyboard towards you.

Step 5

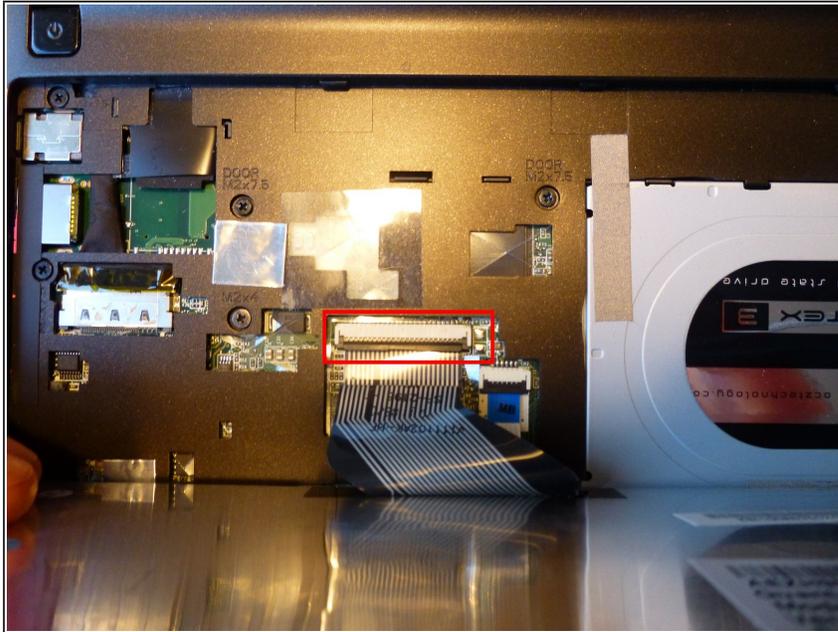

- Now open the brown connector so the flat cable is loose. Then you can remove the keyboard.

To reassemble your device, follow these instructions in reverse order.