



Sony Vaio PCG-4G1L Network Antenna Replacement

This guide shows the steps needed to remove the Network Antenna from the Sony Vaio PCG-4G1L device.

Written By: Diego Fabiano




INTRODUCTION

Common reasons for removing the Network Antenna could be the device reads a weak wireless network signal , or the Network Antenna is broken.

In this guide, you will learn how to replace the Network Antenna for your device.

Step 1 — Network Antenna

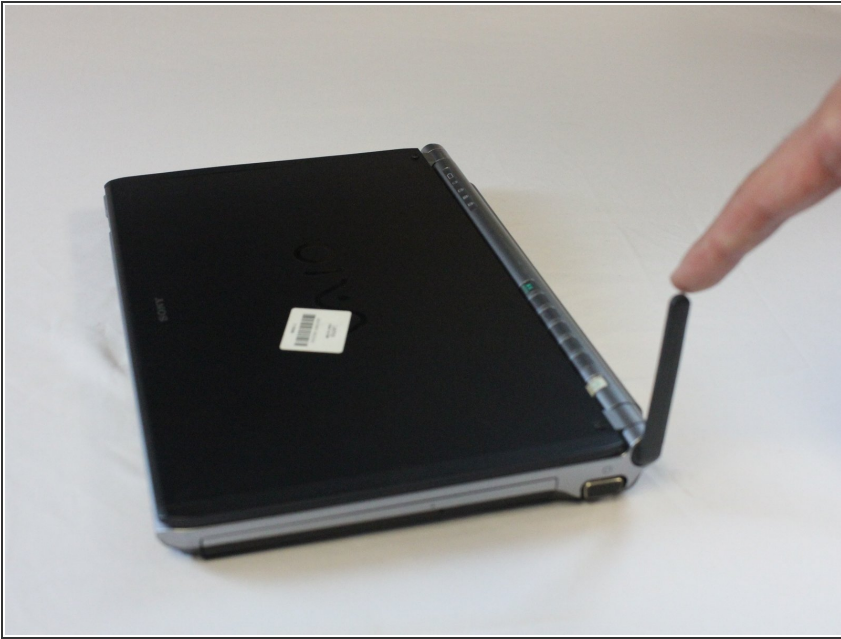

- Swivel the Network Antenna up so that it points upward.

Step 2



- Pinch thumb and index finger at the Network Antenna's base.
- ⚠ Make sure not to bend the Network Antenna. Failing to do so can cause damage to the antenna.
- Pull the Network Antenna off.

To reassemble your device, follow these instructions in reverse order.